


DIRECTIONS FOR RE-WIRING AEM WIDEBAND FOR USE WITH NON-CANBUS VEHICLE

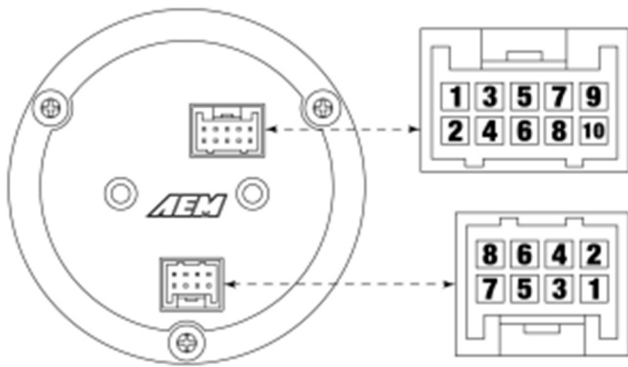

A

B

Connector A - Power / IO

Pin	Color	Description
1	RED	Switched 12V Power (5A Fuse)
2	BLACK	Power Ground
3	BROWN/WHITE	AEMnet- / CANL
4	GREEN	AEMnet+ / CANH
5	BLUE	Serial / RS-232 Output (Optional-Not populated)
6 - 8	-	Not Used
9	WHITE	0-5V Analog Output Positive+ (Optional-Not populated)
10	BROWN	0-5V Analog Output Negative- (Optional-Not populated)

Unpin connectors 3 and 4.

Re-pin to connectors 9 and 10.

Cut OBDII input completely off of wideband.

Use terminated end to wire HP Tuners Pro Link device.

3 is now in 9. Wire Analog Output positive Brown/White to Pro Link Red or Blue.

4 is now 10 . Wire Analog Output negative Green to Pro Link Black.