

INSTRUCTIONS FOR USE

CLEAN Proper preparation means everything when installing InstaTrim.



- Thoroughly clean the surface where InstaTrim will be installed by removing old caulk, grout and debris.
- Wipe down the area with a damp cloth, using isopropyl alcohol or acetone to help ensure adhesion. **BE SURE TO FOLLOW INSTRUCTIONS ON FOR REMOVING SILICONE FROM THE SURFACE PRIOR TO INSTALLING.**
- Let the surface dry completely. *Surface must be clean and dry before installing.*



INSTALL This is the easy part, simply peel, press and it's perfect - every time.



Peel back the liner to expose adhesive.

CAUTION: Do not pull or stretch InstaTrim while you work as this may cause the ends to peel back.



Gently press InstaTrim into the corner every 4"-6" to secure positioning.

NOTE: Once positioned, firmly press into place along the entire strip.



Ensure adhesion to the surfaces using the **Applicator Tool**. Place the wheel on the center of the InstaTrim strip and, **pressing firmly**, roll back and forth along the entire strip until adhesive is properly adhered to the surfaces.




Trim the finished end of the strip using a scissors or razor blade.

NOTE: Splicing instructions on reverse, videos are available on our website.

REMOVE OLD SILICONE InstaTrim WILL NOT adhere to old silicone or silicone residue.



Using a sharp blade or caulk removal tool, cut caulk away from the surface and peel away as much old caulk as you can.

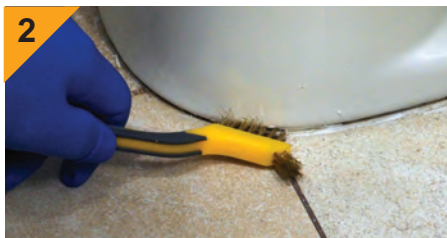

Using acetone or silicone remover with a stiff brush or scrubby sponge, scrub all remaining silicone oils and residue from surface. **Do not use mineral spirits, wax or oil-based products.**




Wipe surface with a soft cloth and acetone or silicone remover again to remove any remaining oils and residue. Let dry completely.

Always use ventilation in enclosed areas with any solvent cleaning solution.


SPLICING TWO ENDS ——— New corner and end trim pieces coming Fall of 2021. ———



Cut the finish end of the first strip at a 45° angle.

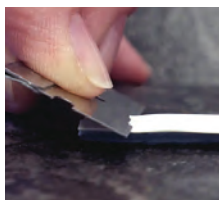

Cut the beginning end of the second strip at a 45° angle in the opposite direction so the ends will overlap and create a smooth transition between the strips.

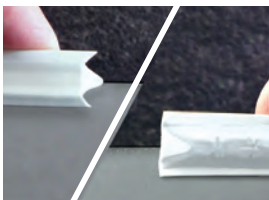

Optional: Apply a small dab of permanent glue where the adhesive has been cut away.

SPLICING CORNERS



One end of the strip will butt against the adjacent wall.



Cut the beginning end of the next strip to make a 45° compound angle.



Overlap the strip that is in place and continue installation.



Optional: Apply a small dab of permanent glue where the adhesive has been cut away

IMPORTANT TIPS

- Remove all traces of old silicone caulk before applying InstaTrim. **Follow instructions on reverse side.**
- Always use InstaTrim at room temperature.
- Avoid stretching InstaTrim as you work to avoid the ends from pulling back.
- Add an extra 1/8" before cutting to fit.
- A small dab of permanent glue may help to adhere spliced ends where adhesive has been cut away.
- Be sure to use firm pressure when pushing InstaTrim onto the surface.
- The use of InstaTrim's Applicator Tool and trim end pieces will ensure InstaTrim is installed correctly and will look great every time you use it.

WE'RE HERE TO HELP Contact us at, customersupport@instatrim.com if you have questions or would like to share photos of your project with us.