

PREP



Remove old caulk, grout or loose debris from the surface.

Wipe down the area with a damp cloth.

Let the surface dry completely.

CAUTION: If replacing silicone caulk, be sure to follow instructions on reverse side, "REMOVING OLD SILICONE"

INSTALLATION



Peel back the liner.

CAUTION: Do not pull or stretch InstaTrim while you work as this may cause the ends to peel back.



Gently press InstaTrim into the gap every 4"-6". Firmly press the strip into place again to ensure adhesion.



Trim the finished end of the strip using a scissors or razor blade.

NOTE: For splicing two pieces, see instructions on reverse side.


SPLICING TWO ENDS



Cut the finish end of the 1st strip at a 45° angle.



Cut the beginning end of the 2nd strip at a 45° angle in the opposite direction so the ends will overlap and create a smooth transition between the strips.

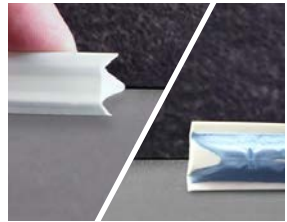

Optional: Apply a small dab of permanent glue where the adhesive has been cut away.

SPLICING CORNERS



One end of the strip will butt against the adjacent wall.



Cut the beginning end of the next strip to make a 45° compound angle.



Overlap the strip that is in place and continue installation.



Optional: Apply a small dab of permanent glue where the adhesive has been cut away.

REMOVING OLD SILICONE

InstaTrim will not adhere to leftover silicone residue.



Using a sharp blade, cut and remove existing silicone caulk.



Use acetone or silicone remover with a wire brush to remove stubborn silicone oils and residue.

CAUTION: Use ventilation in enclosed areas with any solvent cleaning solution.



Thoroughly wipe surface with silicone remover again to remove any remaining residue.

IMPORTANT TIPS

- Remove all traces of old silicone caulk before applying InstaTrim. Please follow instructions on reverse side.
- Use InstaTrim at room temperature.
- Avoid stretching InstaTrim as you work to avoid the ends from peeling back.
- Adding an extra 1/8" before cutting will ensure a tight fit.
- A small dab of permanent glue may help to adhere spliced ends where adhesive has been cut away.

WE'RE HERE TO HELP

Please contact us directly, info@instatrim.com if you have questions or would like to share photos of your project with us. **INSTATRIM.COM**

