


InstaTrim® APPLICATION INSTRUCTIONS

- CLEAN & PREPARE SURFACE** Remove loose debris and wipe down the area with acetone or isopropyl alcohol to remove all dirt and residue. Let the surface dry completely. (See "Silicone Caulk Removal" if silicone caulk exists on the surface.)
- APPLY INSTATRIM** Peel back the liner. Hold the end of the strip with the adhesive side facing the corner. Line up the first 2-3 feet of the strip and press into place every 4-6 inches. Repeat with the next 2-3 feet until complete. Trim the finished end of the strip using a scissors or razor blade. (Tip: adding 1/8" will ensure a tight fit.) When the entire area is covered, firmly press the strip into the corner again, and run your finger along the strip to ensure the strip is bonded to the surface. **DO NOT STRETCH THE INSTATRIM STRIP AS THIS MAY CAUSE THE ENDS TO PEEL BACK.** No drying time is needed. If you chose to paint, it is ready to paint immediately.

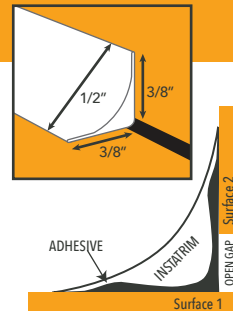

SPLICING CORNERS



- Butt the flat end of the strip against the adjacent wall.



- Cut the end of the next strip at an angle to overlap the strip that is in place.



- Apply a small dab of permanent glue to adhere the two pieces at the seam and ensure adhesion.




- Overlap the beginning end of the second strip onto the first strip.

SPLICING TWO STRIPS



- Place the end of the first strip, adhesive side down on a flat surface. Using a razor blade, cut the end of the first strip at a 45° angle.

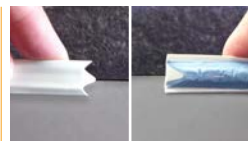

- Cut the beginning of the second strip at a 45° angle in the opposite direction so the two ends will overlap.



- Apply a small dab of permanent glue to adhere the two pieces at the seam and ensure adhesion.

REMOVE ALL TRACES OF SILICONE PRIOR TO INSTALLATION



- Using a sharp blade, cut away and remove all existing silicone caulk.



- Use a wire brush to remove stubborn silicone oils and residue.



- Thoroughly wipe surface with acetone to remove any remaining residue left on the surface.

IMPORTANT TIPS

- InstaTrim must be at room temperature to ensure proper adhesive bonding.
- If painting, we recommend at least two coats of paint over InstaTrim to create a smooth professional finish.
- Push strips straight into corner. Do not stretch or pull strips as you work.

If you having any questions, we'd love to hear from you and are happy to help. Contact us directly at INFO@INSTATRIM.COM

Look for how-to videos at <https://INSTATRIM.COM>