

### PREP



- 1** Remove old caulk, grout or loose debris from the surface.
- 2** Wipe down the area with a damp cloth. (Using isopropyl alcohol or acetone will help ensure adhesion.)
- 3** Let the surface dry completely.

**CAUTION:** If replacing silicone caulk, be sure to follow instructions on reverse side, **"REMOVING OLD SILICONE"**

### INSTALLATION



Peel back the liner.

**CAUTION:** Do not pull or stretch InstaTrim while you work as this may cause the ends to peel back.



Gently press InstaTrim into the gap every 4"-6". Firmly press the strip into place again to ensure adhesion.



Trim the finished end of the strip using a scissors or razor blade.

**NOTE:** For splicing two pieces, see instructions on reverse side.

### IMPORTANT TIPS

- Remove all traces of old silicone caulk before applying InstaTrim. Please follow instructions on reverse side.
- Use InstaTrim at room temperature.
- Avoid stretching InstaTrim as you work to avoid the ends from peeling back.
- Adding an extra 1/8" before cutting will ensure a tight fit.
- A small dab of permanent glue may help to adhere spliced ends where adhesive has been cut away.

### WE'RE HERE TO HELP

Please contact us directly, [info@instatrim.com](mailto:info@instatrim.com) if you have questions or would like to share photos of your project with us.



## REMOVING OLD SILICONE *InstaTrim will not adhere to leftover silicone residue.*



Using a sharp blade, cut and remove existing silicone caulk.



Use acetone or silicone remover with a wire brush to remove stubborn silicone oils and residue.



Thoroughly wipe surface with silicone remover again to remove any remaining residue.

**CAUTION:** Use ventilation in enclosed areas with any solvent cleaning solution.


## SPLICING TWO ENDS



Cut the finish end of the 1st strip at a 45° angle.



Cut the beginning end of the 2nd strip at a 45° angle in the opposite direction so the ends will overlap and create a smooth transition between the strips.

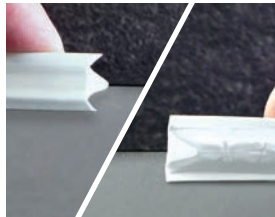

*Optional:* Apply a small dab of permanent glue where the adhesive has been cut away.

## SPLICING CORNERS



One end of the strip will butt against the adjacent wall.



Cut the beginning end of the next strip to make a 45° compound angle.



Overlap the strip that is in place and continue installation.



*Optional:* Apply a small dab of permanent glue where the adhesive has been cut away.