



## INSTALLATION INSTRUCTION

FOR MECHFORCE M-LOK GRIPS



Before performing any steps, all ammunition must be removed from the firearms. Remove the magazine from the firearm. Fully pull the slide or bolt group to eject the round from the chamber. Visually inspect through the ejection port to verify that no ammunition is in the chamber. Always keep the muzzle pointed in a safe direction. Without performing this safety precaution may cause serious injury or death to persons. MECHFORCE is not liable for any damage or injury sustained through improper installation.

- 1 Back out the locking nuts to the end of the screws and orientate them longitudinally as shown in Figure 1 below.

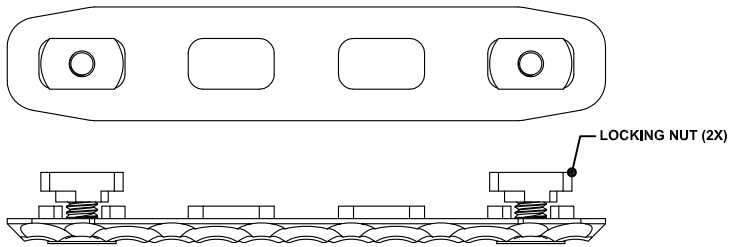


FIGURE - 1: BACK VIEW & SIDE VIEW

- 2 Insert the two locking nuts through the M-Lok slots as shown in Figure 2.



FIGURE - 2: M-LOK SECTION CUT VIEW

VISIT US AT [WWW.MECHFORCE-USA.COM](http://WWW.MECHFORCE-USA.COM)  
FOR OTHER EXCITING PRODUCTS



- 3 Once the grip assembly seats in place, tighten the locking screws with the Torx wrench supplied to 17 in/lb. Pay attention to the locking screw's orientation. The lock screws need to be rotated vertically as shown in Figure 3 below. Try assist it with tweezers or metal rod to force it to turn if locking screws are not rotated 90 degree.



FIGURE - 3: M-LOK SECTION CUT VIEW

VISIT US AT [WWW.MECHFORCE-USA.COM](http://WWW.MECHFORCE-USA.COM)  
FOR OTHER EXCITING PRODUCTS