



K-Pro Assembly Instructions

Thank-you for purchasing a K-Pro Golf Ball Collector. The K-Pro is a premium golf ball picker-upper that collects 80 balls in seconds and comes with a built-in dispensing unit with a strong handle and stand so you don't have to leave it on the green.




K-Pro comes unassembled to allow for more cost-effective and safer shipping. Assembly will require roughly 40 minutes for a first-time assembler. IF YOU REQUIRE ASSEMBLY ASSISTANCE, WE ARE HERE TO HELP.

CALL TOLL FREE **1-888-985-1009** OR
EMAIL info@rcssports.com


Before assembly, the following tools are required:

1. Protective Eye wear
2. Flat Head Screwdriver
3. Pliers



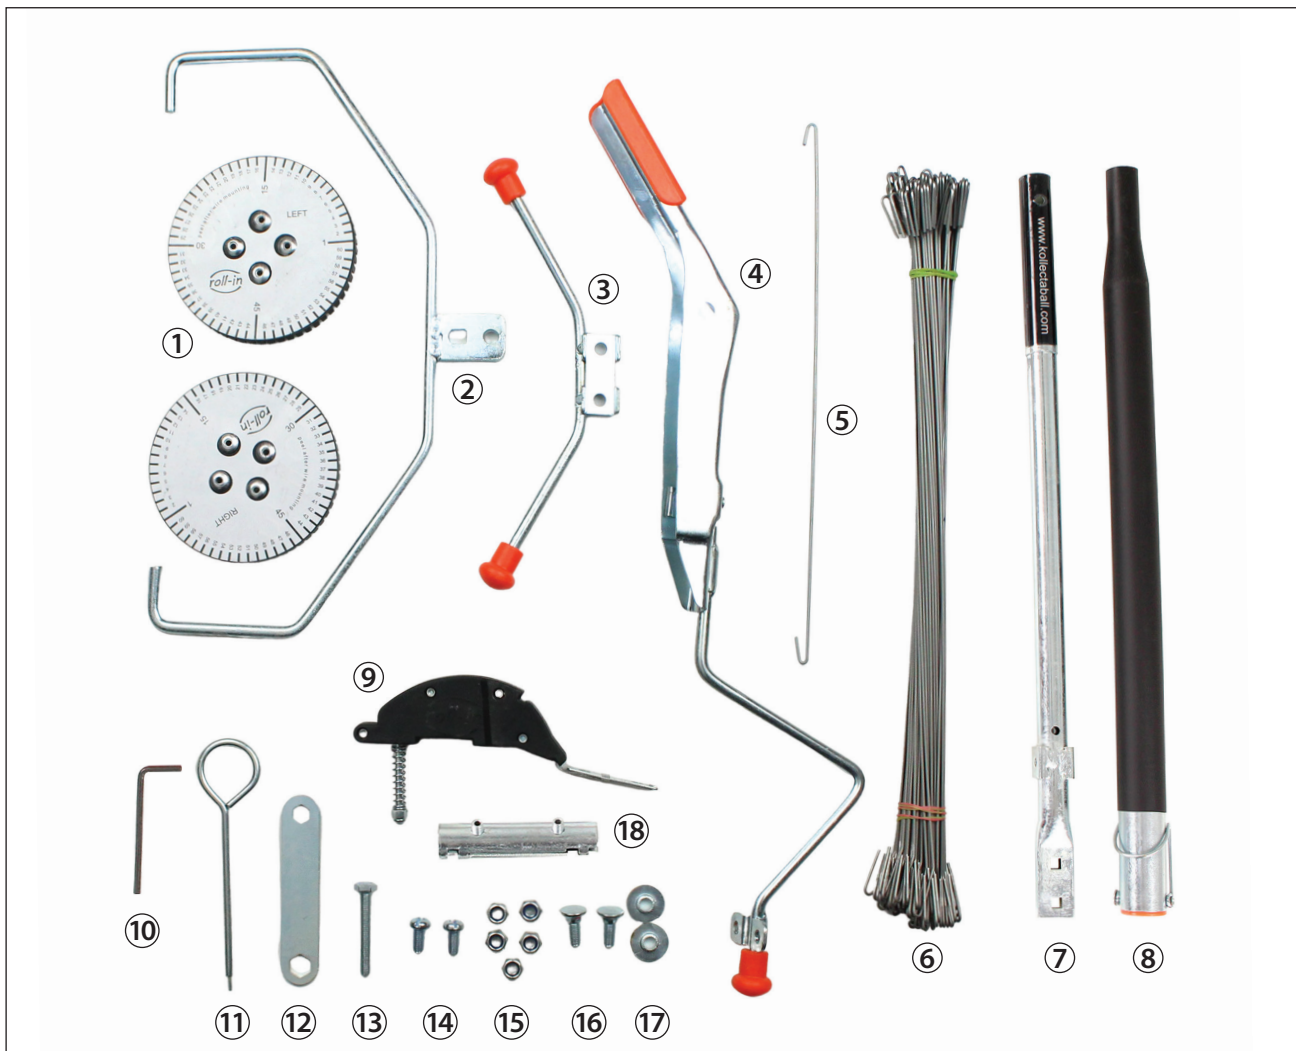


- | | | | | |
|----------------------------------|--------------------------------|------------------------------|-------------------------|-----------------------------------|
| 1. Wire Mounting Disk (R090) x 2 | 5. Tension Wire | 9. Cam (R235) | 13. Hex Screw (R198) | 17. Washer (R178) x 2 |
| 2. Cage Holder (R182) | 6. Wire (R101) x 62 | 10. Allen Key | 14. Screw (R050) x 2 | 18. Coupler (R219, Inside Handle) |
| 3. Stand (R227) | 7. Handle Lower Section (R211) | 11. Wire Removal Tool (R062) | 15. Lock Nut (R137) x 5 | |
| 4. Wire Opener (R195) | 8. Handle Upper Section (R210) | 12. Wrench | 16. Bolt (R197) x 2 | |

STEP 1: Assembling the Cage

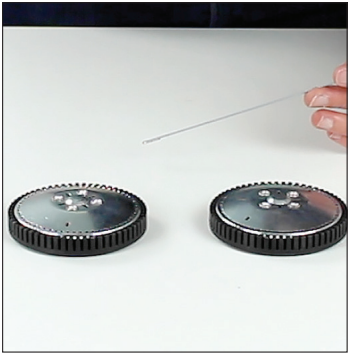

Take the centre tensioning bar and push one end into one of the four slits in the centre of the wire mounting disc.
Repeat on the other wire mounting disc.

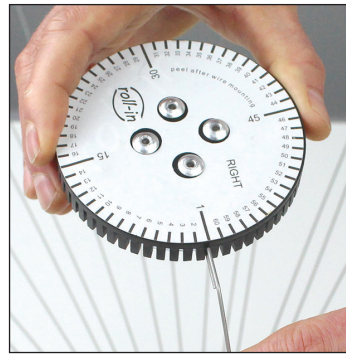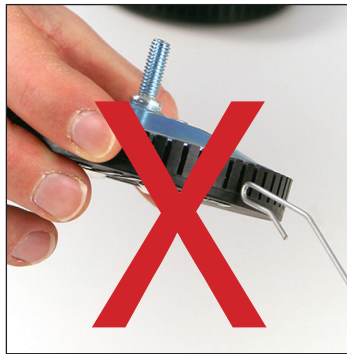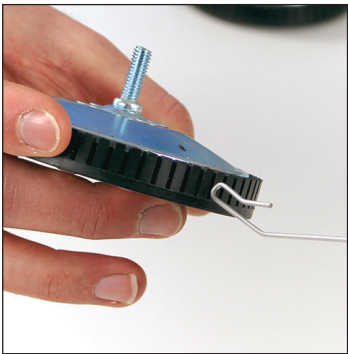

The numbered white sticker on the mounting disk helps to indicate the next available slot. Insert one wire (R101) as shown into slot #1 on the mounting disk. You will hear it click into place. **DO NOT INSERT THE WIRE UPSIDE DOWN.** Being careful not to miss any slots, continue inserting wires in numeric order until all 60 slots are full. Take the second disk, face the silver section of each disk towards each other, then insert the other end of the wires into the 60 slots in numeric order. Remove the white stickers and store the 2 extra wires in case damaged wires need to be replaced in the future.

STEP 2: Assembling the Handle



Remove the R219 Coupler from inside the R210 Handle Upper Section and remove both Allen Key Screws.




Join the two sides of the Coupler and insert into the R210 Handle Upper Section so that the hole in the Coupler is aligned with the hole in the Handle. Insert an Allen Key Screw in the Handle to secure, but do not tighten all the way.



Slide the R211 Handle Lower Section over the exposed coupler so the holes align. Insert the second Allen Key Screw and tighten both using Allen Key. **DO NOT OVERTIGHTEN.**


STEP 3: Wire-Opener and Stand Assembly

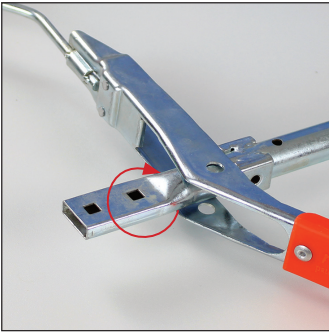

Insert the R211 Handle Lower Section through the R195 Wire Opener. With the Wire Opener in the position shown, twist the handle 90 degrees and slide the Wire Opener up so the holes on the Wire Opener and Handle are aligned.




Place R178 washer on one side of the wire-opener with the flat side facing outwards and insert R198 hex screw. Place the second R178 washer on the other side and tighten the R198 screw. Fasten with R137 lock nut.

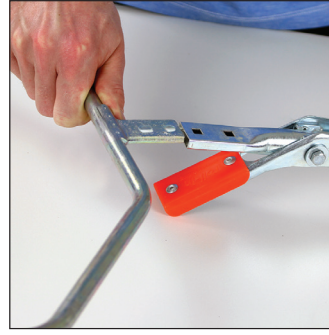


Insert R182 Cage Holder into the handle, but DO NOT FASTEN.




Remove the lock nut from R235 Cam and insert as shown in the above image. Secure with the lock nut, but ONLY FINGER TIGHT.

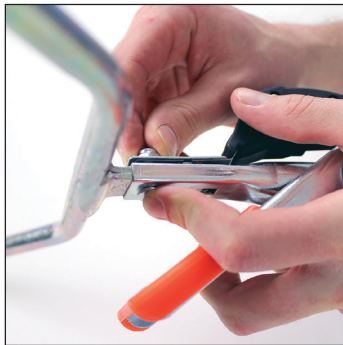


Fasten the Cage Holder to the handle using the two R197 bolts and the R137 lock nut. Be sure to insert the bolts from below with the lock nut on top. Insert BOTH bolts and fasten hand tight BEFORE tightening with the wrench.

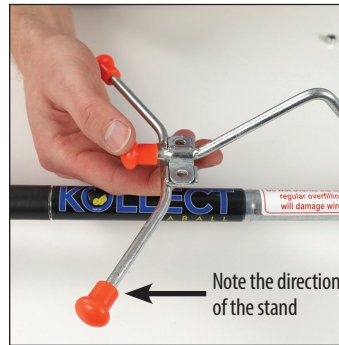

Using a flat head screwdriver and pliers, fasten R227 Stand to the wire opener using the R050 screws and R137 lock nuts. Be sure to insert the screw from the top with lock nut underneath. Fasten tightly.

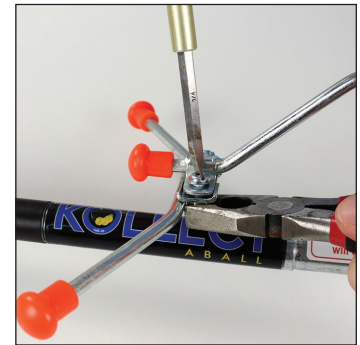

STEP 4: Attaching the Cage to the Cage Holder

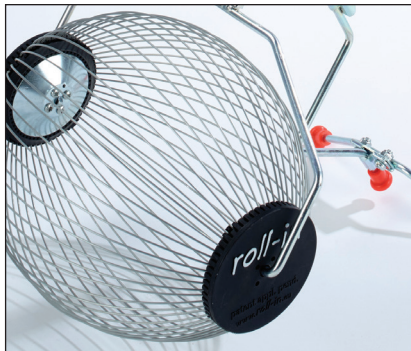

Align the holes on the ends of the cage with the cage holder and squeeze into place.



You are now ready to enjoy your Kollektaball!