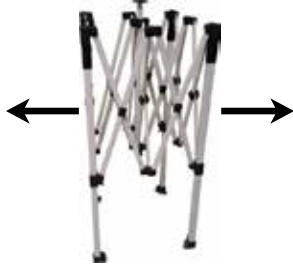


**Step 1**

Take your frame and slightly expand it open to expose the corner bars.

**Step 2**


Take your canopy graphic and place it on top of the frame.

**Step 3**

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of loop Velcro sewn to it and each corner of the frame has a strip of hook Velcro

**Step 4**

With the canopy securely in position, expand the frame until the corner latches lock into place.

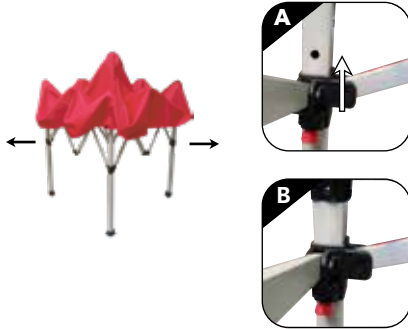**Step 5**

Increase the height by extending the lower legs.

**Step 6**

Pull each leg down until the latch locks into place.

**Step 7**

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole. The dome cap will push out the canopy creating tension to flush out any loose areas.

**Step 8**

The install is complete.

