

How To Install The Stainless Steel Spigot



FARRO



1. Check that you have received all the pictured parts with your spigot, including two thick silicone gaskets and two slim silicone gaskets. *See image to the right.*
2. Before installing the stainless steel spigot, remove the silicone ring from the carboy which is used for the plastic spigot.
3. Install concave metal ring, thin silicone gasket, and thick silicone gasket on the spigot shank.
4. Install the spigot at the front of your carboy, then
5. install the second thin silicone gasket, thick silicone gasket, concave metal ring, and hex nut.
5. Wear gloves when installing the spigot to avoid scratching your hands. Hold the spigot in place and hand tighten the hex nut. **IMPORTANT:** *Do not over tighten the nut or you will risk cracking the glass.*
6. Fill with water above the spigot and check for leaks. Tighten as needed.




Stainless Steel Spigots

Standard Turn Spigot



Back Twist Spigot

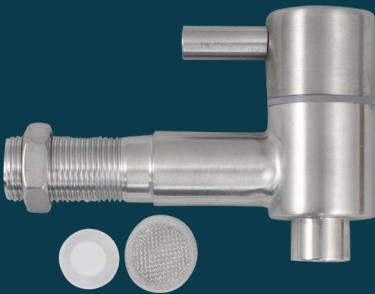

Twist Spigot

