


SLIM INTEGRATED DOWNLIGHT 6"


Install Guide and Manual

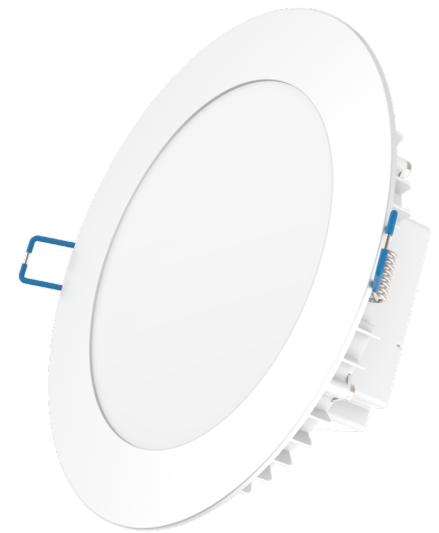


EASY INSTALLATION




1. Turn off circuit breaker that provides power to the light switch for the recessed lights.
2. Cut a hole in the ceiling in the desired location accordingly to the dimension indicated.

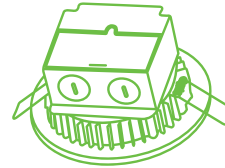

3. Run electrical wire from the power source (switch) through the mounting hole.
4. Open the junction box cap and remove the appropriate knockout(s) on the side plate.

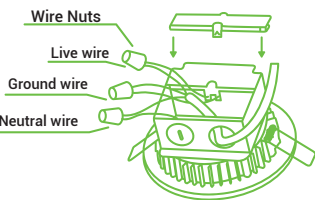


5. Connect the supply wires to the junction box wires using the wire nuts provided.
 - White to white (neutral wire)
 - Green to green (ground wire)
 - Black to black (live wire)
6. Tuck the connected wires inside the junction box and close the cover.

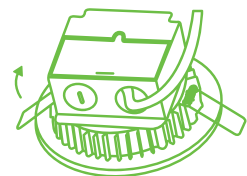

7. Push up the spring clips to insert luminaire in to the opening in the ceiling.

8. Release the clips and fixture will be pulled flush.

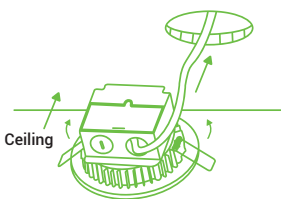

Turn Power ON

9. Turn on circuit breaker and test the light.

WARNING

All electrical connections must be in accordance with local and National Electric Code (N.E.C.) standards. Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections. Please review instructions carefully before proceeding.

WARNING: Risk of fire or electric shock. Do not alter, relocate or remove wiring during installation.

WARNING: Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. Use proper installation methods to prevent water from entering.

SPECIFICATIONS

Voltage	120V
Wattage	14W
Suitable for Locations Ingress	Damp
Housing	Aluminum+PC
Weight	0.53lbs
Warranty	7 years