

# WRAPAROUND 11"

## Install Guide and Manual



### EASY INSTALLATION JUNCTION BOX INSTALLATION

**Required Tools:** Drill, Ladder, Hammer, Pliers, Tape Measure, Pencil.



Turn Power OFF

**1. Turn off circuit breaker that provides power to the light switch for the recessed lights.**

- If replacing a fixture, remove existing fixture and make a sketch of wiring configuration (by color) or mark wires with masking tape for identification.





**2. Mounting surface must be able to support the weight of the fixture.**

**3. Depending on your lighting plan, space the fixtures accordingly.**

- Link up to 4 Fixtures

**4. Remove the diffuser from the lamp base.**

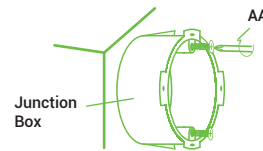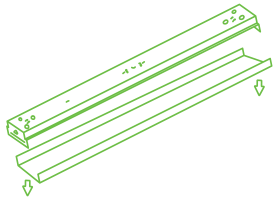


**5. Install the two screws (AA) into the junction box.**

- Leave 1/4" of screws exposed to accommodate lamp base.

**6. Open the junction box and take out the cables from the lamp base, connect the wires:**

- Live to Live (black);
- Neutral to Neutral (white);
- Ground to Ground (yellow/green).

**7. Secure the wires with the wire nuts, and fold them into the junction box.**

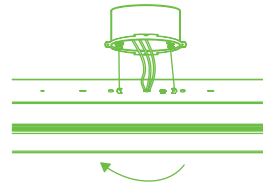



**8. Attach the Lamp Base to the junction box by aligning the holes on the Lamp Base with the screws on the junction box.**

**9. Turn Lamp Base clockwise to lock into place and tighten screws to ensure the fixture is secure.**

**10. Put the diffuser (cover) back on**

- Align one end then slowly press down;
- Push the diffuser to the corner of the lamp base;
- Lock the diffuser with the aluminium base.

**11. Turn on circuit breaker and the test light.**

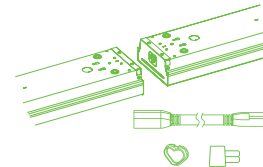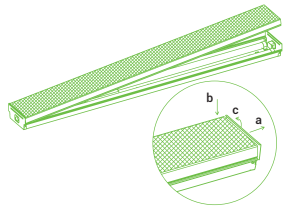

#### LINKING INFORMATION

- Use provided linking cords to connect multiple fixtures to one outlet;
- Link up the 4 Fixtures;
- For protection, place plastic end caps on the ends of any final fixtures in the linking line.

## WARNING

All electrical connections must be in accordance with local and National Electric Code (N.E.C.) standards. Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections. Please review instructions carefully before proceeding.

**WARNING:** Risk of fire or electric shock. Don't alter, relocate or remove wiring during installation. Don't install directly over a heat source.

**NOTE:** When first turned on wait about 1 minute for the circuitry to calibrate. Not for use with dimmers. Use proper installation methods to prevent water from entering.

## SPECIFICATIONS


Voltage	120V/277V
Wattage	72W
Suitable for Locations Ingress	Damp
Lumens	8500
Weight	7.49lbs
Warranty	7 years

# WRAPAROUND 11"

## Install Guide and Manual



### COMPONENTS

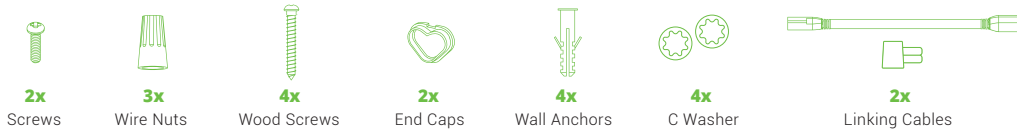


### EASY INSTALLATION KEYHOLE INSTALLATION

**Required Tools:** Drill, Ladder, Tape, Measure, Pencil, Stud Finder.




Turn Power OFF

1. Turn off circuit breaker that provides power to the light switch for the recessed lights.
  - If replacing a fixture, remove existing fixture and make a sketch of wiring configuration (by color) or mark wires with masking tape for identification.

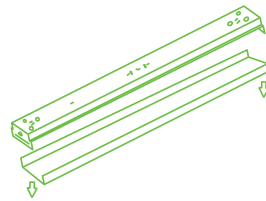


2. Mounting surface must be able to support the weight of the fixture.
3. Remove the diffuser from the lamp base.

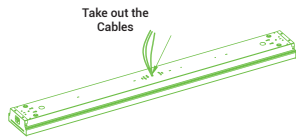


Take out the Cables

4. Use a screwdriver to punch out one of the knocked holes and take out the cables from the lamp base.

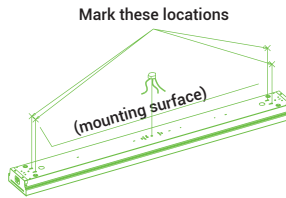


Mark these locations

5. Attach the Lamp Base by aligning the knockout holes on the Lamp Base with the mounting location.
  - Mark the 4 keyhole slots at each end of the housing.

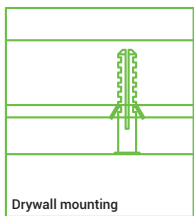


Drywall mounting

6. **DRYWALL MOUNTING OPTION**  
For drywall without a stud:
  - Drill 4x small pilot holes with a 7/32" drill bit (not included). Install provided wall anchors into the holes with your hammer.
  - Install 4x wood screws into the mounting surface, but not fully. Leave about a 3/8" gap between the screw head and mount surface.

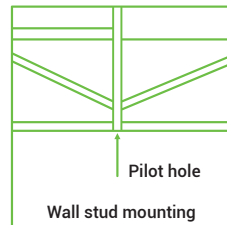


Wall stud mounting

7. **WALL SETUP MOUNTING OPTION**
  - Drill 4x small pilot holes with a 9/64" drill bit (not included).
  - Install 4x wood screws into the mounting surface, but not fully. Leave about a 3/8" gap between the screw head and mount surface.

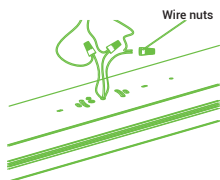


Wire nuts

8. Remove the shrink wrap from the end of the wires, connect to the supply wires using the wire nuts provided.
  - Live to Live (black);
  - Neutral to Neutral (white);
  - Ground to Ground (yellow/green).

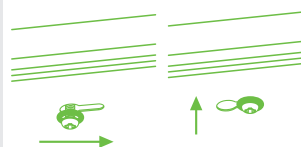

9. Lift fixture and insert the 4x screws into the keyhole slots. Slide the lamp base to one side to secure. Fixture should be firmly placed against screws. The screw heads will rest over the narrow part of the keyhole slot.
  - Once the fixture is supported, tighten the screws until fixture is secured to the mounting surface.
  - Add C-washer for extra protection.

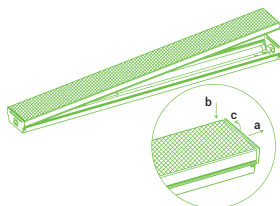

10. Put the diffuser (cover) back on
  - a) Align one end then slowly press down;
  - b) Push the diffuser to the corner of the lamp base;
  - c) Lock the diffuser with the aluminium base.



Turn Power ON

11. Turn on circuit breaker and test light.