

TANDEM plus BLUMOTION 560H | 566H

Webcode
DQD1XA

Planning			
Space requirement in cabinet	Drawer inner drawer	Drawer	Inner drawer
* +3 mm with side stabilisation	SKW Internal drawer width LW Internal cabinet width	SKL Drawer length NL Nominal length * Additional +12 mm with side stabilisation	ISKL Inner drawer length SKL Drawer length NL Nominal length X Front thickness * Additional +2 mm with POSISTOP


Hole spacing – runners

Nominal length NL (mm)

250 270	
300 320 350 380	
400 420	
450 480	
500 520 550	
580 600	
650 700 750	

* Hole only at 566H (50 kg)

Drawer assembly

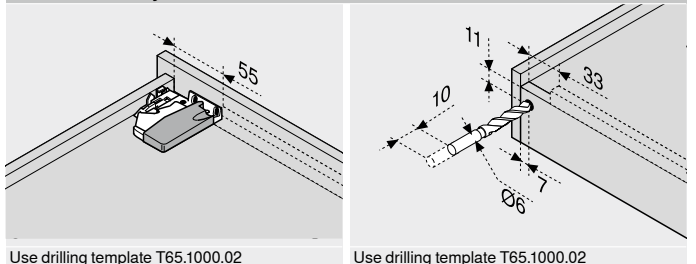

Use drilling template T65.1000.02

Use drilling template T65.1000.02

Page instructions

Overview – TANDEM	409	Assembly, removal and adjustment
Overview – SERVO-DRIVE for MOVENTO TANDEM	455	
CABLOXX	552	Short-URL www.blum.com/a420
Accessories	444	
Attachment of runners	452	
Overview – assembly devices	561	
More technical details	662	

