

How to use Trassig's Rebinder™

You will need the following materials:
leaf blower, (power washer), tarp, paddle mixer, drip pan, paint roller

Look for a sunny day above 60 degrees. If it is going to rain within four hours after applying, do not rebind.



Step 1: Use a leaf blower to remove loose granulated rubber and other debris from area. If necessary, use a power washer with a wide angle nozzle and binder friendly detergent to sanitize the surface. Make sure your surface is **COMPLETELY** dry before continuing. Check under equipment for possible excess water and moisture




Step 2: Lay down a tarp to avoid splashing and use a paddle mixer to thoroughly mix the Rebinder™ in the pail before use. It is necessary to mix Rebinder™ before use.



Step 3: Pour Rebinder™ into drip pan. Do not mix with other products or solvents.



Step 4: Use a cheap paint roller to equally distribute Rebinder™ on your poured in place surface because you will be throwing it away after installation.

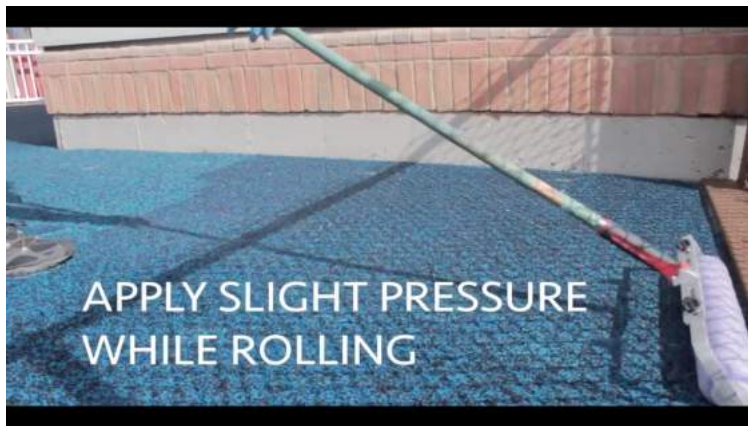

Step 5: Apply pressure when applying Rebinder™ in order to make sure the coat is even and sufficient. Go over each area only one time. Do not treat Rebinder™ like paint. Multiple layers will harden your surface.



Step 6: Even though Trassig's Rebinder™ is fast curing, secure area and allow 24 hours before use after application. If it rains 4 hours or more after application the Rebinder™ will not be affected, but it cannot rain during the application of the Rebinder™ for it to properly cure.

If you need help call or text your Trassig Install Advisor at (203) 659-0456