



**Trassig**  
The Playground People




### Value Wear Layer Repair Kit

Enclosed in this package (For Each Value Wear Layer Repair Kit):

- 10 pounds of EPDM granules. (2) 5lb bags
- 2 pounds of Aromatic Binder. (1) Metal Container

This is enough to repair approximately 5 square feet of wear layer at a depth of 0.5"

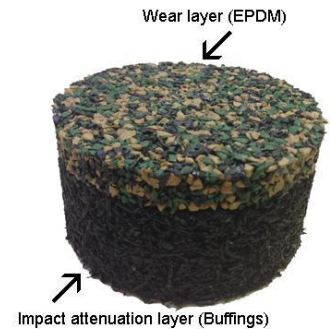

You will need the following:



Follow these steps to repair your surface:

- ✓ Make sure you pick a dry day to repair. No rain and a minimum of 40 degree temperature.
- ✓ Using a sharp utility knife, create a clean cut around the areas you would like to repair. When cutting, make sure to cut the edges of the area at a 45-Degree angle. This will create a stronger bond at the edges of the patch.
- ✓ Clean the area of all loose granules and debris.
- ✓ Pour the entire content of the package (First the granules, then the **one metal can** of binder) in a plastic pail that you plan to dispose of later.
- ✓ Mix the content thoroughly. Make sure that all the granules are coated evenly with the binder.
- ✓ Using a rounded trowel spread the mix onto the area you are repairing.
- ✓ Use a mixture of water and liquid hand soap in a bottle sprayer to lubricate the trowel after each pass.
- ✓ Secure the area and let cure for 24 to 48 hours.



Scan this QR code with your phone to watch a quick how-to video on how to patch your poured in place rubber surface.