


Brew Guide for the Pakt Coffee Kit


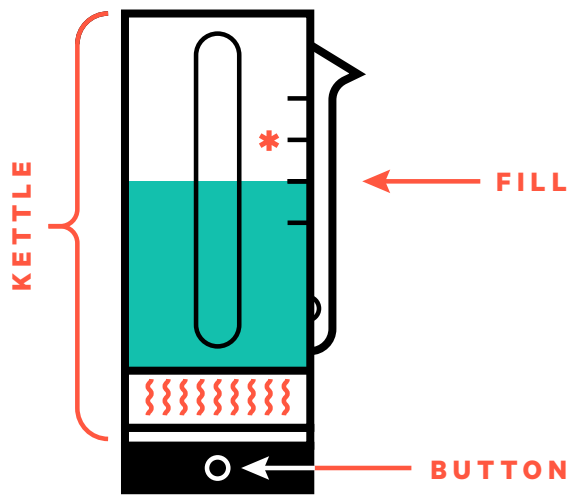


1

Fill the kettle to the second line from the bottom (300 ml) with clean water & push the button to begin heating.

2

(1) Lift the upper part of the dripper to engage the three nubs in the slots & (2) twist to lock in place. Place dripper on the travel mug.

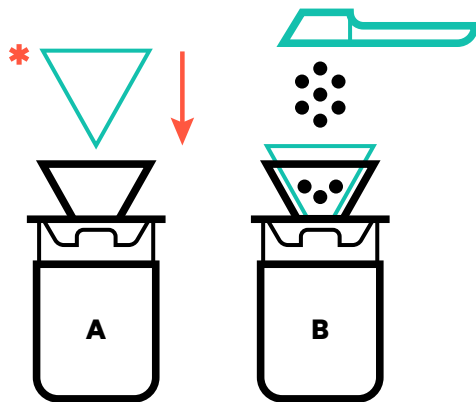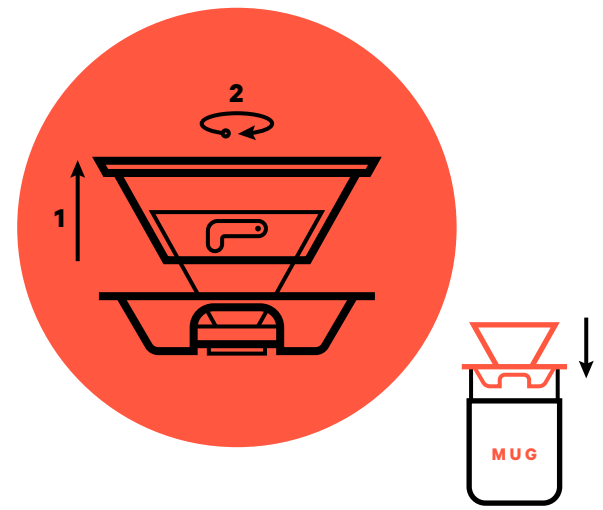


3

(A) Insert a reusable or paper filter* & (B) add three scoops of medium-course ground coffee.

4

Once the kettle has shut off, pour just enough water over the grounds to wet them evenly.

Pause to allow your coffee to bloom for 15-30 seconds.

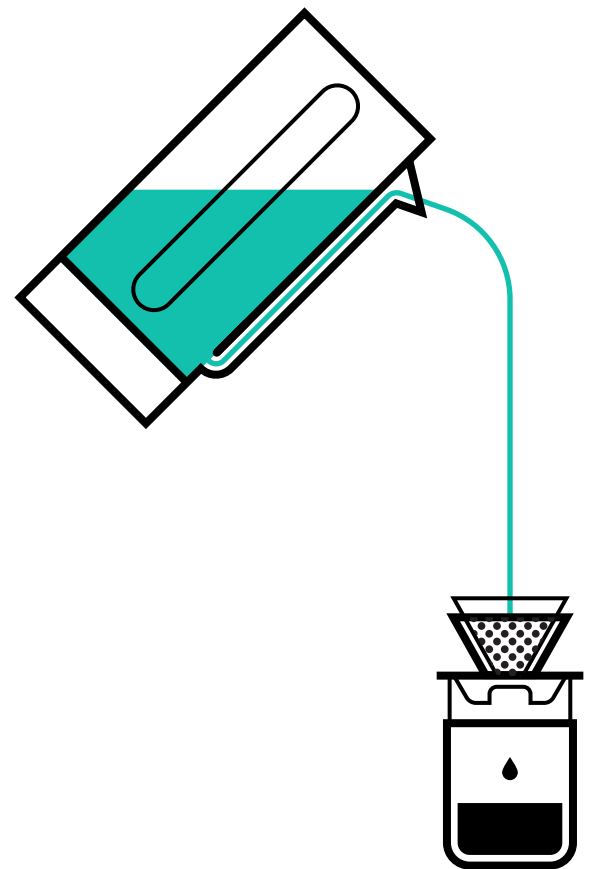

5

Continue pouring water from center out in slow, concentric circles until the water is gone.

Allow all of the water to drain, & enjoy your pour over coffee!

*Note:

If you're using a paper filter, use a Hario V60 size 1 and fill the kettle to the third line from the bottom (350 ml). Rinse the filter before adding your coffee to get rid of any paper-y taste.

Paper filter users should also use a slightly finer grind for the coffee.

Take Your Joe on the Road

Follow @paktbags & show us where you brew #paktcoffee

Want More?

Check out paktcoffee.com for more tips and resources for brewing amazing coffee. Got a question, a suggestion, a recommendation? Get at us at studio@paktbags.com.

Pakt.