

In Common With

Simon Surface Mount

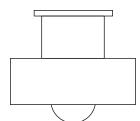

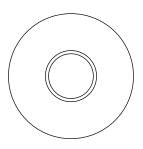

How to Install Your New Light

Please check that you received all of the components pictured in this guide. Reach out to us if anything is missing. It's very rare, but it happens. Don't forget to turn off the electrical power source.

Tools you will need that aren't included: standard wire stripper, Phillips head screwdriver.

CAUTION

Electrical shock risk. Turn off electrical power at the main fuse box or circuit panel before beginning installation, servicing the light, or installing accessories. We recommend working with a qualified electrician familiar with the type of work you'd like done.

ATTENTION

Risque de choc électrique. Coupez l'alimentation électrique au niveau de la boîte à fusibles principale ou du panneau de circuits avant de commencer l'installation, l'entretien de la lumière ou l'installation d'accessoires. Nous vous recommandons de travailler avec un électricien qualifié familier avec le type de travail que vous souhaitez effectuer.

Contents



Part A Backplate



Part B Canopy Cover



Part C Hex Key





Part D

Wago Clips (x3)



Part E G9 LED Bulb

Part F Orb 5 Diffuser




Part G Mountina Screws (x2)



Part H Glass Holder



Part I Set Screws (x2)




Part J Simon Shade


In Common With

Simon Surface Mount


Step 1: Turn off electrical power at the main fuse box or circuit panel before beginning installation.

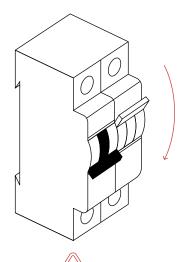



Step 2: Mount the backplate (A) to the junction box using a phillips head screwdriver to tighten the mounting screws (G).

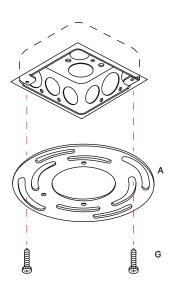

Step 3: Use the wago clips (D) to connect the fixture's wires to the corresponding wires from the junction box in the wall or ceiling. White $% \left(1\right) =\left(1\right) \left(1\right) \left($ is neutral; Black is live; Green/ Yellow is ground. One ground wire will be attached to the backplate (A), the other ground wire should come from the junction box. If needed use a wire stripper to remove 3/8" of the insulation from each wire before inserting them into the corresponding wago clip.



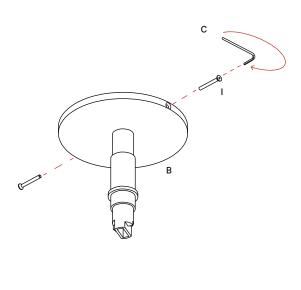

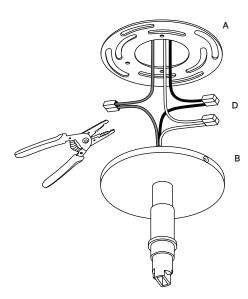


cover (B) and secure the set screws (I) by tightening using the included L-shaped hex key (C).


In Common With

Simon Surface Mount

Step 5: Carefully slide the shade (J) up the socket. Attach shade (J) to backplate (B) by rotating glass holder (H) until components are fixed in place

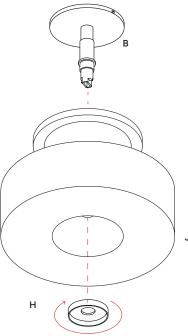

Step 6: Insert lightbulb (E) into the socket of the shade assembly..

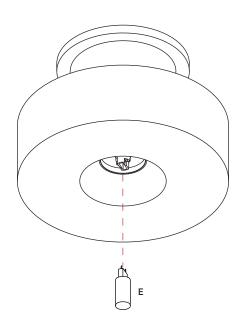

Step 7: Screw the diffuser (F) into the glass holder (H). Turn the power back on at the main fuse box or circuit panel you disabled before installation.

