


SINGLE BIKE HOOK **KOOVA**

INSTALLATION INSTRUCTIONS v1.0




2x Countersunk Screws




2x Countersunk Washers



2x Screw Covers

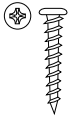


4x Wall Protector Screws

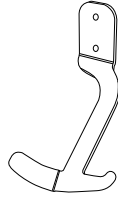

1x Bike Hook



2x Wall Protectors



4x Double Sided Adhesive

TOOLS NEEDED

- Phillips head screwdriver
- Stud finder (recommended)
- Pencil for marking mount location

If the mounting wall requires masonry hardware, email us at support@koova.com and we will send you some.

INSTALLATION WARNING

To safely support the weight of your bikes, the Bike Hook must be installed into studs. Failure to mount the Bike Hook properly may result in damage to property and/or personal injury.

STEP ONE: MOUNT THE BIKE HOOK

- Determine the height from the floor by measuring the length of your bike (back wheel to front wheel) and mark the wall.
- Locate a wood stud and mark its location.
- Place a countersunk washer on a countersunk screw and screw into the stud using a philips head screwdriver or electric drill driver (*figure a*). Repeat with second hole.
- Snap the screw covers onto the countersunk washer.


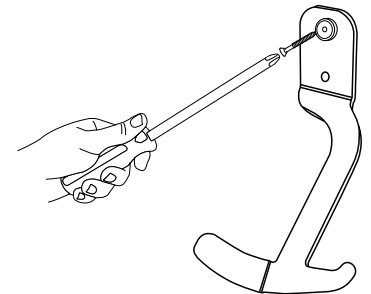


figure a

Instructions continue on other side.

NO STUD FINDER?

There are a variety of methods for locating studs and a web search will show you these techniques.

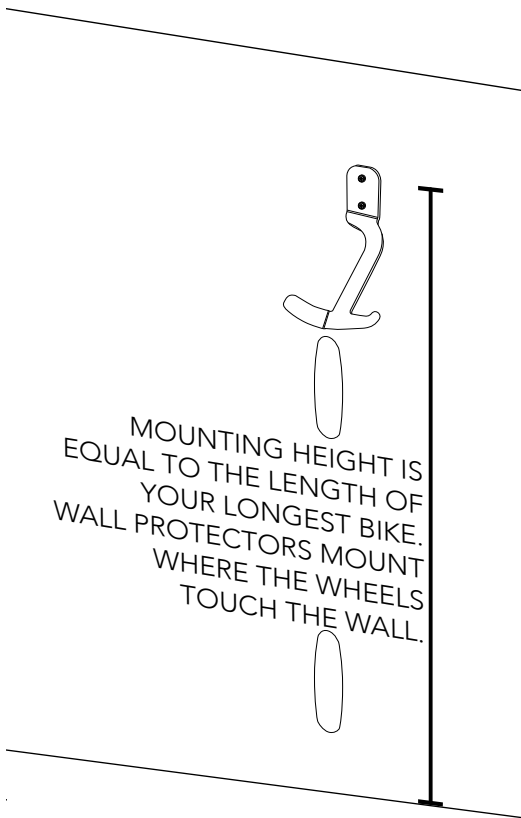

STEP TWO: HANG YOUR BIKE

- To hang your bike, lift it vertically and place the rim on the rubberized hook.

STEP THREE: MOUNT THE WALL PROTECTORS

- The wall protector will keep your walls from getting marked or dirty from the bike wheel. Find and mark where the tires touch the wall.
- The wall protectors can be mounted with either double stick tape or the small mounting screws. If using the screws, hold the wall protector against the wall in the marked location and screw in the screws using a phillips head screw driver (*figure b*). The screws will make their own hole through the protector and into the wall. No drilling is necessary.
- If using the double stick tape, peel the plastic covering off one side and stick the tape to the back of the wall protector (*figure c*). Peel off the second side and press the protector to the wall at the marked location.
- Rehang your bike.

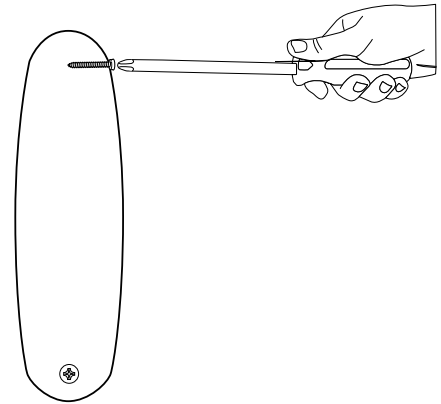


figure b

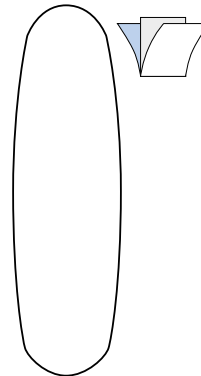


figure c

KOOVA HELPS YOU PUT EVERYTHING IN ITS PLACE!



GOLF BAG ORGANIZATION



GARDEN & GARAGE ORGANIZATION



TOOL ORGANIZATION




SKATEBOARD ORGANIZATION



HOME ORGANIZATION



HOME OFFICE ORGANIZATION

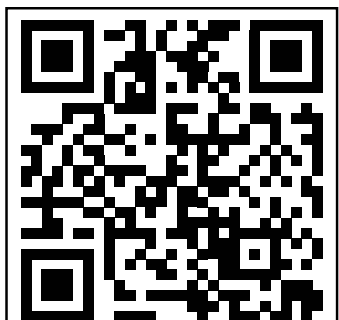

SHOP
KOOVA.COM
FOR OTHER
GREAT
ORGANIZATIONAL
SOLUTIONS