


WALL PROTECTOR **KOOVA**

INSTALLATION INSTRUCTIONS


v1.0



2x Wall Protectors



2x Wall Protectors



4x Double Sided Adhesive

TOOLS NEEDED

- Phillips head screwdriver
- Pencil for marking mount location

MOUNT THE WALL PROTECTORS

- Find and mark where bike tires touch the wall.
- The wall protectors can be mounted with either double stick tape or the small mounting screws
 - If using the double stick tape, peel the plastic covering off one side and stick the tape to the back of the wall protector (*figure a*). Peel off the second side and press the protector to the wall at the marked location.
 - If using the screws, hold the wall protector against the wall in the marked location and screw in the screws using a phillips head screw driver (*figure b*). The screws will make their own hole through the protector and into the wall. No drilling is necessary.

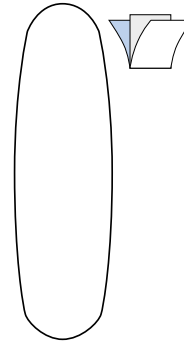


figure a

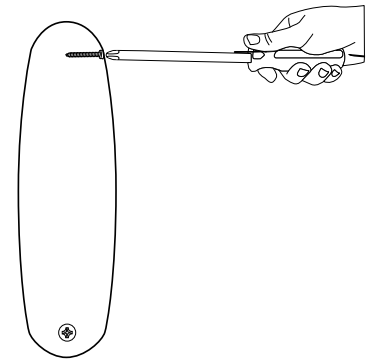


figure b

NEED ASSISTANCE?

Contact us at support@koova.com
or on live chat at koova.com

KOOVA HELPS YOU PUT EVERYTHING IN ITS PLACE!



GOLF BAG ORGANIZATION



GARDEN & GARAGE ORGANIZATION



TOOL ORGANIZATION




SKATEBOARD ORGANIZATION



HOME ORGANIZATION



HOME OFFICE ORGANIZATION

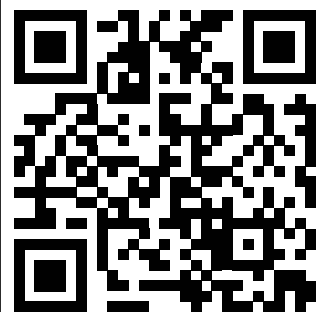

SHOP
KOOVA.COM
FOR OTHER
GREAT
ORGANIZATIONAL
SOLUTIONS