


EUROPEAN OFFICE

Tel: +33 4 94 53 27 70 www.seaviewprogress.com

7" x 7" Base Drill Template

- PMA-57-M1
- PMF-57-M1

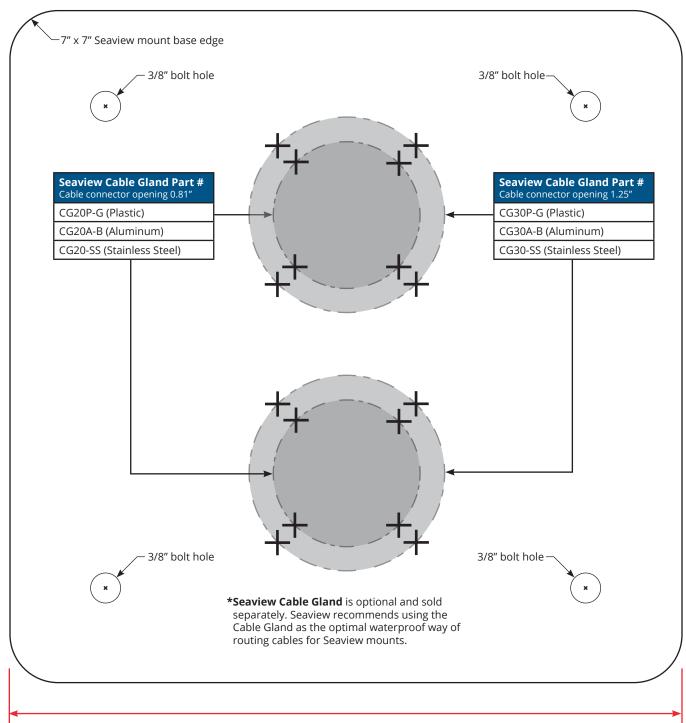




Tel: +33 4 94 53 27 70 www.seaviewprogress.com

7" x 7" Base Drill Template

- PMA-57-M1
- PMF-57-M1

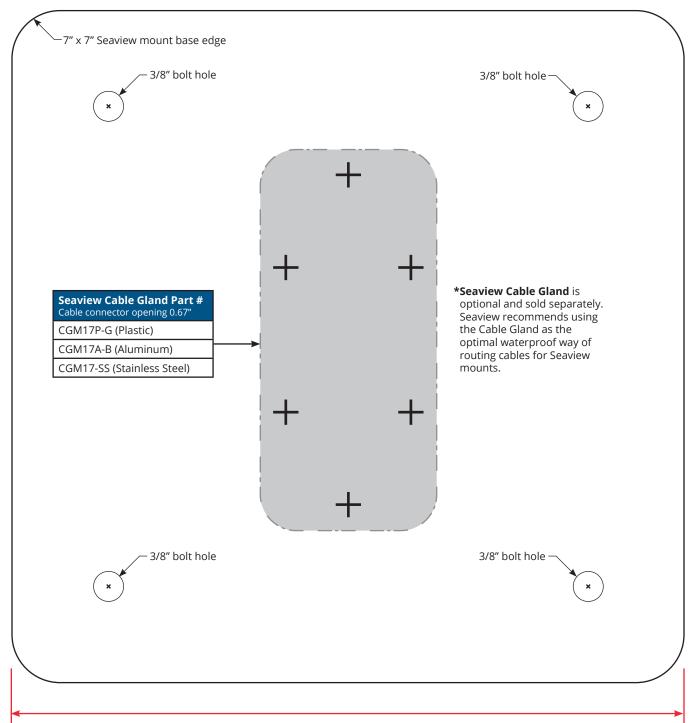




Tel: +33 4 94 53 27 70 www.seaviewprogress.com

7" x 7" Base Drill Template

- PMA-107-M1
 PMA-167-M1
 PMA-247-M1
 PMF-107-M1

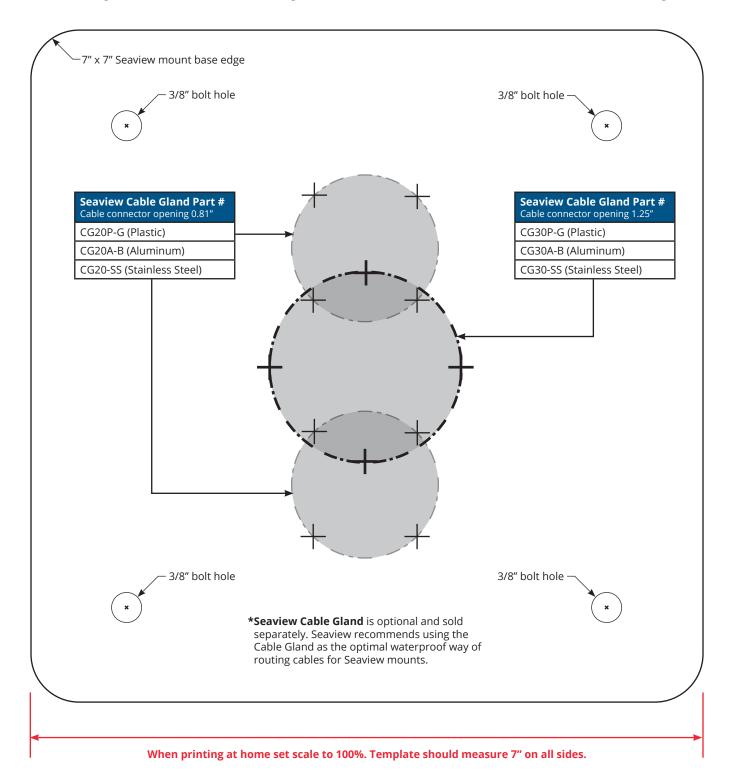



Tel: +33 4 94 53 27 70 www.seaviewprogress.com

7" x 7" Base Drill Template

- Ose the templates on this side for these seaview mounts
- PMA-107-M1
 PMA-167-M1
 PMA-247-M1
 PMF-107-M1

