

# Installation instructions for:



by **SEAVIEW**//

### **Parts Included:**

- inteliPlug garboard
- inteiPlug cap
- transom gasket
- 3ea #6 stainless screws

## **Tools Needed:**

- Drill motor
- 7/64" drill bit





tige ATS

(Tigé Boats)

by **SEAVIEW**//

Remove the lower hinge nut & bolt from the TAPS plate using a ½" socket and wrench. TOP TIP – tighten the top nut & bolt on the actuator so that it stays up and out of the way.

\* NOTE older Tiges have a different actuator which can be removed from TAPS plate but not loosened from the transom. If your boat has this type of actuator, gently push it out of the way when using the screwdriver or hand drill.






Copyright All Rights Reserved – 1/17/2020



(Tigé Boats)

by **SEAVIEW**//

Using a phillips head screwdriver, remove the 3 screws from the brass garboard.

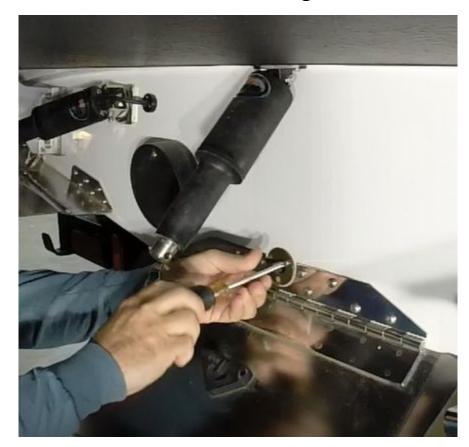

Copyright All Rights Reserved – 1/17/2020

With the 3 screws out, use a flat head screwdriver to pry the garboard from the transom. TOP TIP – pry from several angles to loosen the silicone used by the factory to seal the brass garboard.





tige ATS

(Tigé Boats)

by **SEAVIEW**//

With the old brass garboard off, use a razor blade to remove the silicone from the transom and from inside the drain hole. inteliPlug uses an engineered transom gasket so getting all of the messy silicon off will help create a watertight seal.








tigé ...

(Tigé Boats)

by **SEAVIEW**//

Use the inteliPlug gasket as a template and Sharpie® to mark the 3 mounting holes. Take care to center the gasket evenly between the TAPS plate hinge. TOP TIP – always place 2 holes facing down and 1 hole directly up in triangle fashion.



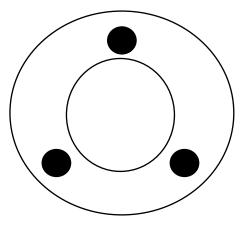

2 holes facing down and1 hole directly up





tigé ...

(Tigé Boats)

by **SEAVIEW**//

A 7/64" drill bit required for the #6 stainless mounting screws. Using the 3 Sharpie marks, drill the mounting holes to 3/4" depth. TOP TIP – to ensure that the gelcoat does not spider web and crack, use a Dremel® tool and sanding rotary bit to dress each of the 3 holes before installing the #6 screws.





Copyright All Rights Reserved – 1/17/2020



tigé !

(Tigé Boats)

by **SEAVIEW**//

Install your inteliPlug garboard ensuring that the gasket is fitted between the garboard and the transom. TOP TIP – drive the top screw first followed by the other two screws. Using your index finger, feel around the garboard and the transom to confirm the gasket has seated and the garboard is water tight.






tige ATS

(Tigé Boats)

by **SEAVIEW**//

Install the inteliPlug cap on the garboard by threading it up. TOP TIP – thread the cap up until you hear "click". This means the cap is now secure and will remain captive and attached in the open position.

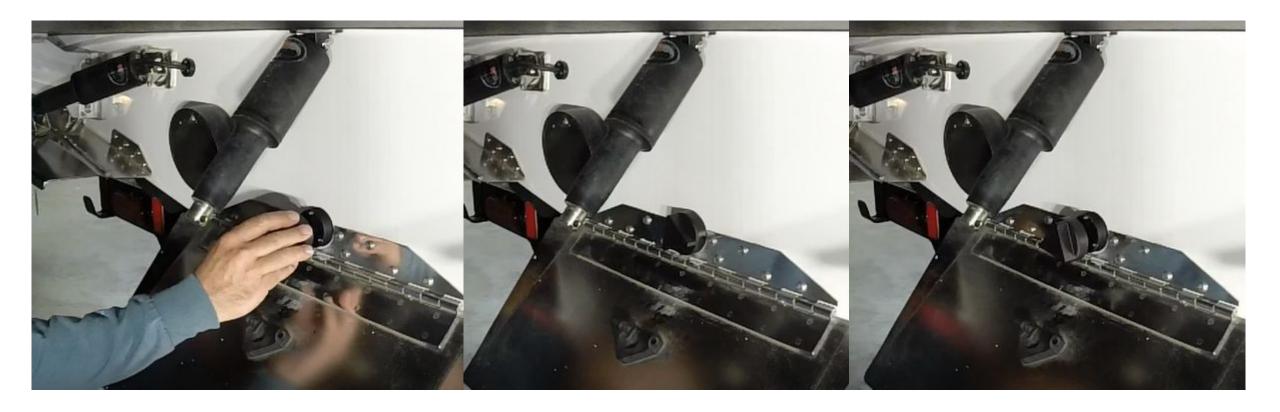





tige ATS

(Tigé Boats)

by **SEAVIEW**//

Re-install the TAPS plate lower nut & bolt and tighten using the same ½" socket and wrench. Your drain plug is now upgraded!!!

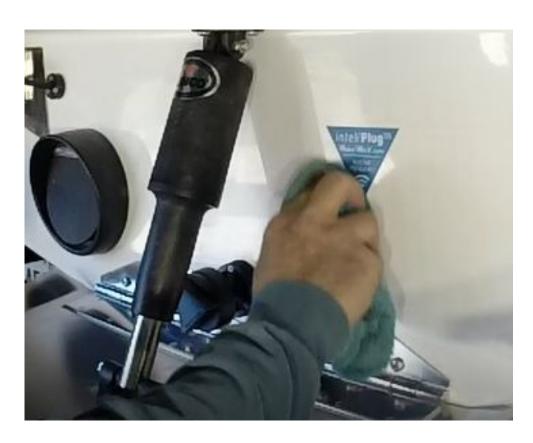

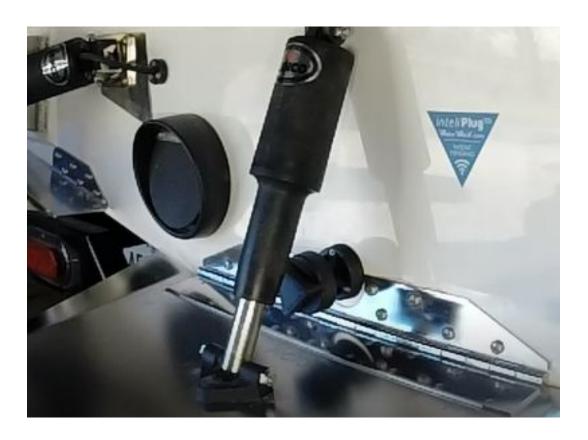

Copyright All Rights Reserved – 1/17/2020