


Do not assemble the sockets with the terminal inside before it is wired. The terminal will lock the socket permanently

Want to test the socket before wiring it? Remove the terminal to avoid locking it.

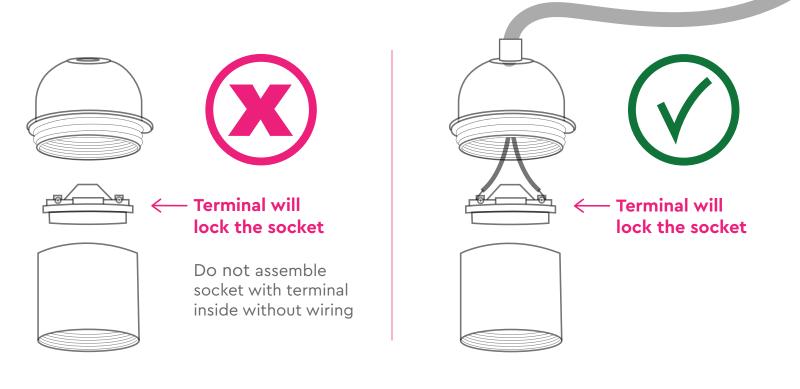

colorcord.com

COLOR CORD COMPANY