




Acupanel® | Exterior Composite Slat Wall Panels




1. Simple to install

- Quick and easy-to-install
- Simple to conceal fixings
- Easy to cut to size

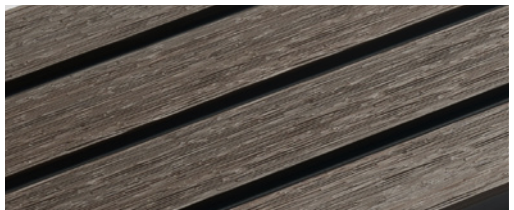


2. Looks like real wood

- PVC featuring a 3D wood grain
- Tried and tested product design
- Create a natural look with ease

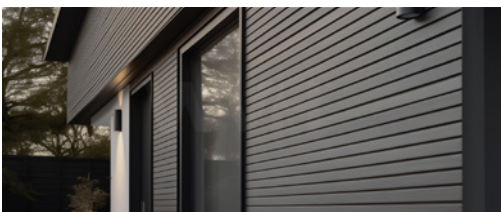

3. Sleek, modern design

- Four colour ways available
- 4-sided capping technology
- On-trend slat look

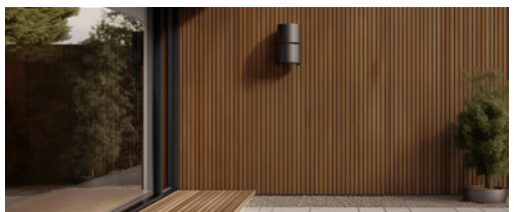

4. All-weather product

- Waterproof, polymer coating
- Suitable for exteriors and interiors
- Low maintenance

Colours available:



Acupanel® | Black Wood Effect |
Exterior Composite Slat Wall Panels



Acupanel® | Oak Wood Effect |
Exterior Composite Slat Wall Panels



Acupanel® | Grey Wood Effect |
Exterior Composite Slat Wall Panels



Acupanel® | Walnut Wood Effect |
Exterior Composite Slat Wall Panels


Panel dimensions

Size 3000mm(H) x 192mm(W) x 26mm(D)

Surface 3D Wood Grain

The Waterproof Slat Panel features a 3D wood grain surface, which brings a touch of nature to your space. The tongue-and-groove assembly is easy to install and ensures a neat finish, with no visible fixings.

Sectional View:

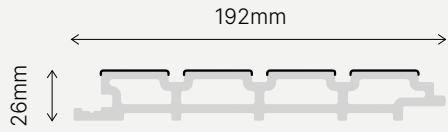

Installation Instructions

Tools needed:




Circular Saw



Tape Measure



Impact Drill



Level




Electric Drill




Joist




SS410 Screw



Colour Screw




Expansion Screw

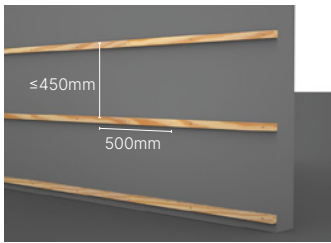


Step 1.

First, fix the joists at a 450mm interval to the wall with expansion screws. The spacing between two adjacent screws should be 500mm.

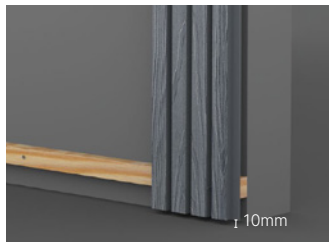


Step 2.

Fix the first piece of wall cladding board on the joists with coloured screws. Note that the screws should be installed in the slot of the tongue.

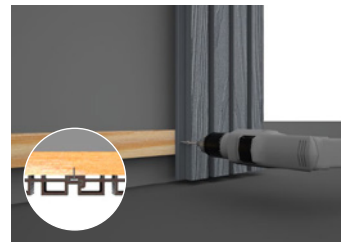


Step 3.

Secure the cladding board completely by using self-drilling screws to fix it to the joists. The screws should be installed in the groove of the cladding.

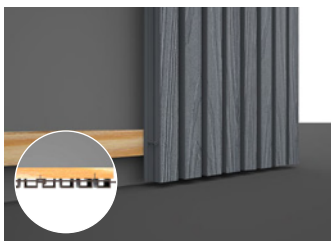


Step 4.

Join the second piece of cladding board to the first one. Fix it to the joists with self-drilling screws.

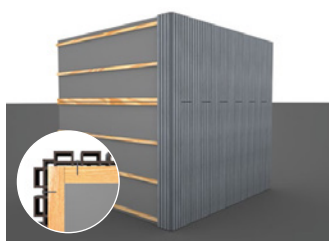

Step 5.

To properly finish the corner, the joists are to be flush with each other respectively and fix them with screws.

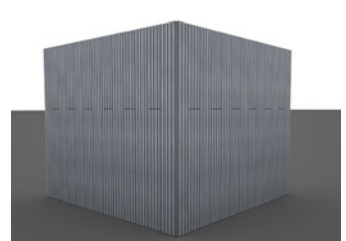

Step 6.

Finish the installation by getting the rest installed in the same manner.

Need help? Contact us:

Call: +44 (0)1525 851 166

Email: sales@thewoodvenerhub.co.uk

Customer service hours:

Monday to Friday, 9am – 5pm

thewoodvenerhub.co.uk