

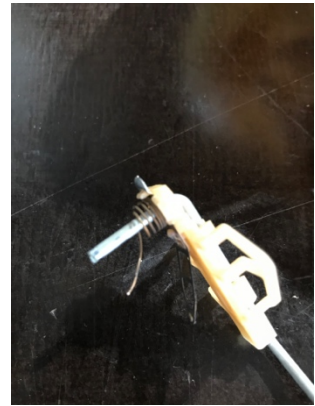


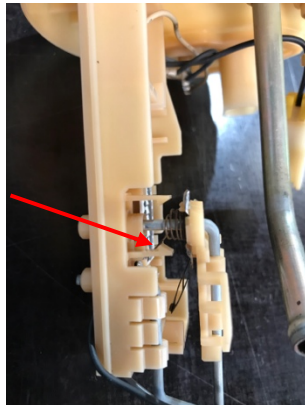




FPG Nissan Skyline R32GT-R BNR32 (Also fits C34 Stagea) Factory Fuel Sender Replacement:

Disconnect sender float arm from the locking fingers.


Cut the end of the wire coil, and remove sender float arm.

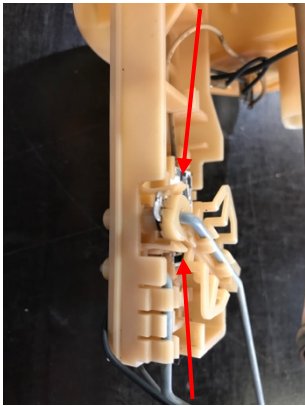


Install FPG sender mounting plate into the locking fingers and install button head screws from the plate end.

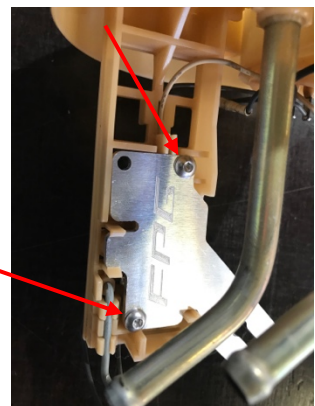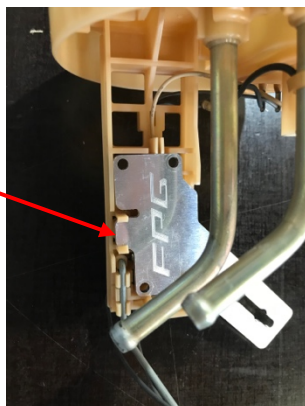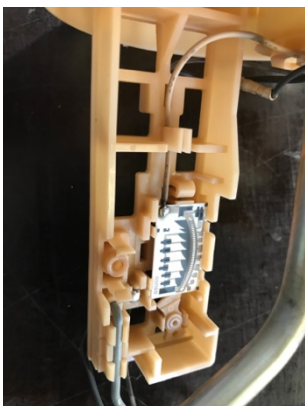



Install washers and locknuts supplied, tighten them evenly until the plate is mounted flat and straight. Do not overtighten.

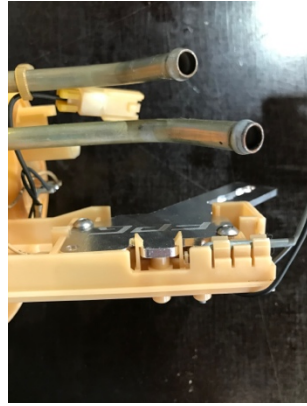

Cut the factory sender wire.


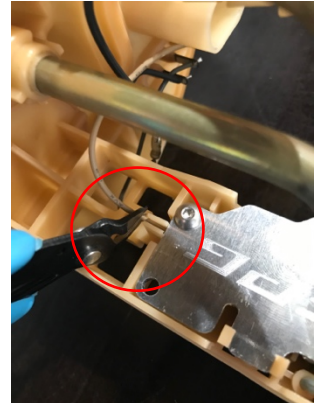


Strip the end of the factory wiring (5-6mm), shorten one of the blue wires on the FPG sender and strip the end (5-6mm) work out the length carefully. Crimp the factory and the blue wire together with the crimp supplied. Clip the wiring back into the holding fingers.

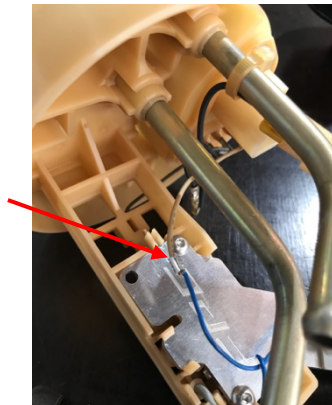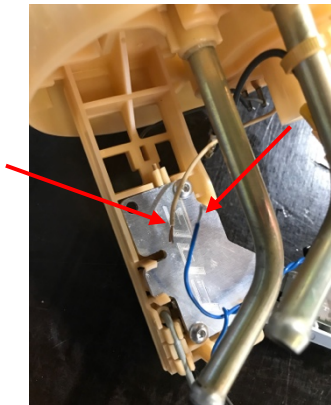




Cut the factory sender wire on both sides of the solder joint. Strip the ends (5-6mm)

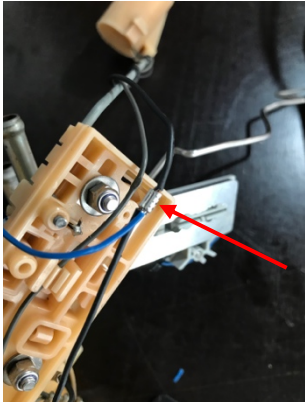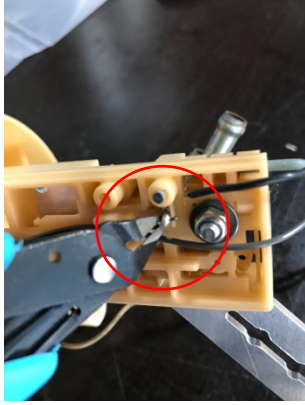

Shorten and strip the end of the remaining FPG sender blue wire. Crimp the 2 factory wires and the blue wire together using the crimp supplied. Clip the wires back into the factory spot.

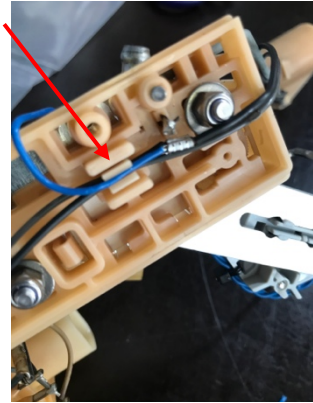

Install and slide the FPG sender into position, and fit the small cable tie supplied behind. This will stop the sender from accidentally popping out.

