






**1** Remove 2.5" of cable jacket, carefully avoid nicking any conductors. Do NOT remove foil shield.

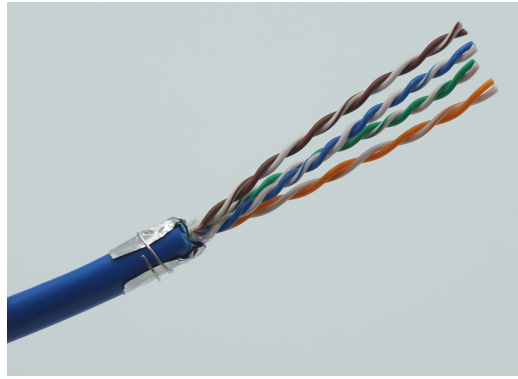


**2** Fold the cable shield backwards & wrap the drain wire around. Remove spline, PE tape, or waterproof tape.

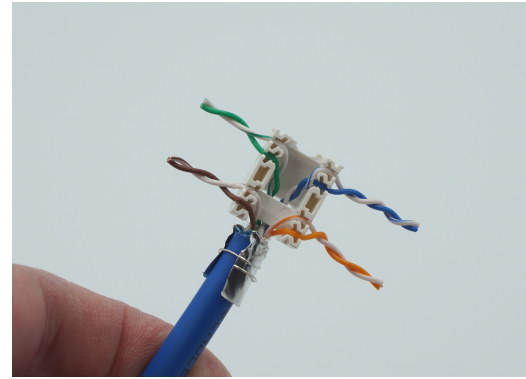


**3** Insert conductors into either T568A or T568B color sequence.

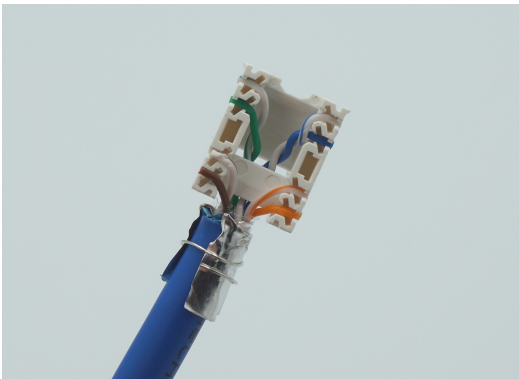


**4** Carefully flush cut conductors from sides of termination cap.

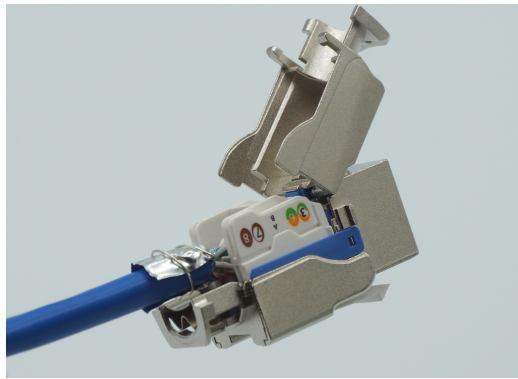


**5** Carefully and evenly seat the termination cap fully into the keystone jack.

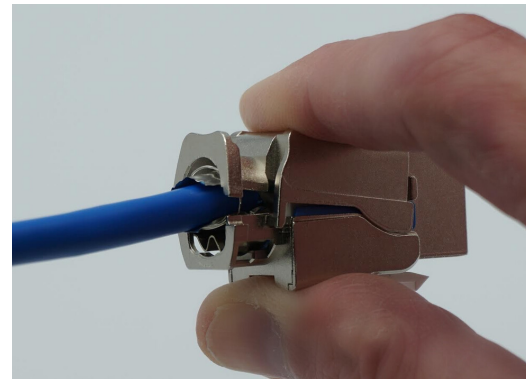

**6a** Close the jack housing. There will be a snap sound.

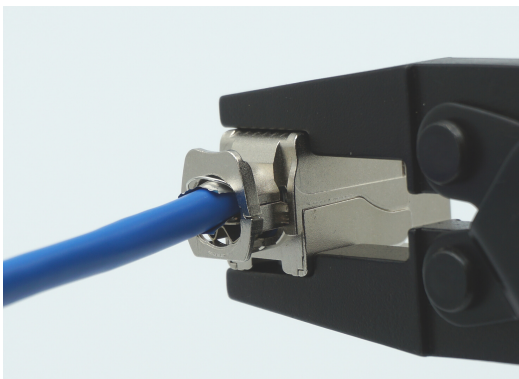

**6b** RECOMMENDED: use trueCLOSE pliers to apply force at the very rear.

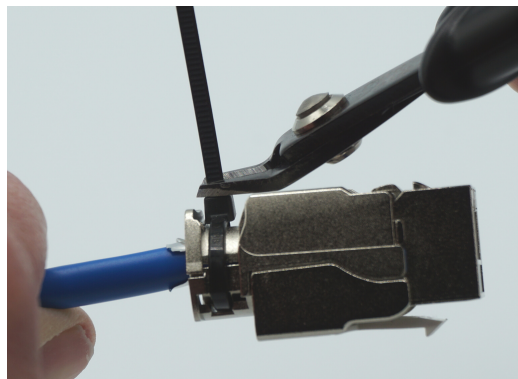

**7** Trim the zip tie.



**8** All done!