

Note: This product must be installed by a Licensed Plumber. This is a general installation guide – factors may alter the installation method.

Ciara Upswept Right Angle Shower Arm

Before Installation

Flush through the pipe work to ensure removal of debris.

Turn off the water mains and close any isolating valves.

Ensure the mounting surface is clean.

Installation

Check that the threaded nipple (1) is the correct length. Cut to length if required, ensuring end face is square. Apply thread tape to the thread.


Screw adaptor (2) onto threaded nipple (1) until adaptor (2) is held securely against wall/tile face. Do not over-tighten. Apply suitable lubricant to 'O' Rings on adaptor (2).

Ensure screws (4) are wound out in the wall body (3). Carefully slide the wall body (3) onto the spigot of adaptor (2). While holding the body against the wall with the arm (6) vertically aligned, tighten the grub screws (4) using the 2.5mm allen key (5).

When installing the shower head (8) onto the connection thread (7) of the shower arm (6), refer to the individual instructions supplied with the shower head.

Turning on the supply

Turn on the water supply and check for leaks.

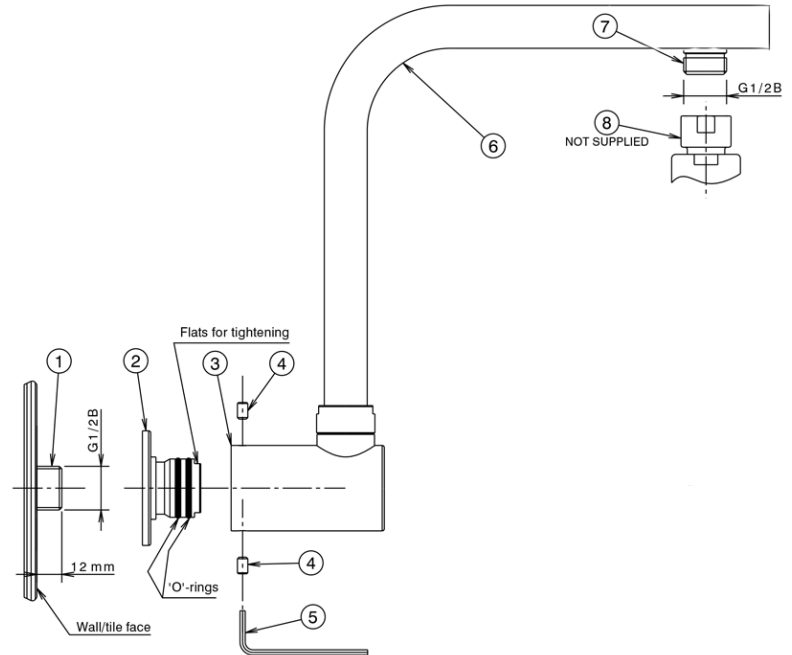

- 1 Threaded Nipple
- 2 Screw Adaptor
- 3 Wall Body
- 4 Grub Screws
- 5 Allen Key
- 6 Arm
- 7 Connection Thread
- 8 Shower Head

Hot and cold water inlet pressures should be equal.

Inlet pressure range: 150 – 1000 kPa

Maximum hot water temperature = 80°C



Always use a soft, damp cloth with mild detergent to wipe your Shower clean. Avoid using abrasive detergents, cleaning powders, scouring pads, strong disinfectants, cleaners containing hydrochloric acid or phosphoric acid as this will cause damage to the finish.