


Note: This product must be installed by a Licensed Plumber. This is a general installation guide – factors may alter the installation method.

## Savina Basin/Bath Spout

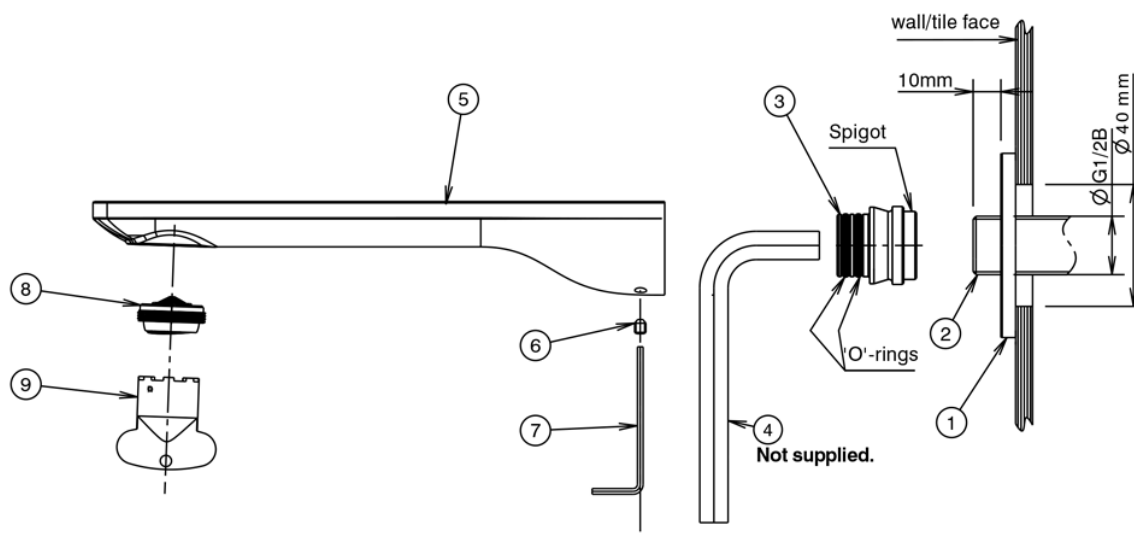

### Before Installation

Flush through the pipe work to ensure removal of debris.

Turn off the water mains and close any isolating valves.

Ensure the mounting surface is clean.

### Installation

Fit the cover plate (1) over the threaded nipple (2) and check that the thread is the correct length. Cut to length if required ensuring end face is square. Apply thread tape to the thread.

Locate the cover plate (1) on the threaded nipple (2) and screw the spigot (3) onto the threaded tube (2) using a 10mm allen key (4) until the cover plate (1) is held securely against the wall/tile face. Do not over-tighten. Apply suitable lubricant to 'O' Rings on adaptor (3).

Fit wall outlet (5) onto the spigot (3), then carefully push it firmly against the cover plate while tightening grub screws (6) using the allen key (7) ensuring that the top face of the outlet is horizontal.

### Turning on the supply

Turn on the water supply and check for leaks.

- 1 Cover Plate
- 2 Threaded Nipple
- 3 Spigot
- 4 Allen Key
- 5 Wall Outlet
- 6 Grub Screws
- 7 Allen Key

Hot and cold water inlet pressures should be equal.

Inlet pressure range: 150 – 1000 kPa

Maximum hot water temperature = 80°c



Always use a soft, damp cloth with mild detergent to wipe your tap clean. Avoid using abrasive detergents, cleaning powders, scouring pads, strong disinfectants, cleaners containing hydrochloric acid or phosphoric acid as this will cause damage to the finish.