


HOW TO INSTALL OUTWARD CRACK OPENING WINDOWS




STEP 1

Clean your window frame and your casement. Stick the provided **velcro** around the perimeter of your window frame and around your casement as showed in the picture.

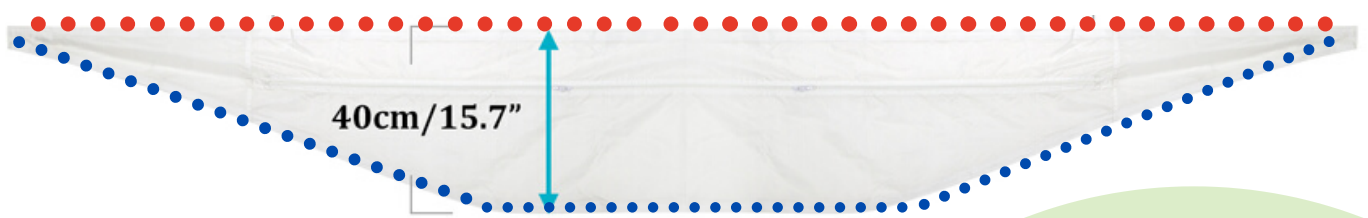

STEP 2

Lay the window seal flat. Stick the **middle of the straight side** to your window casement, starting from the centre . Instead, stick the **middle of the curved side** to your window frame, starting from the centre .

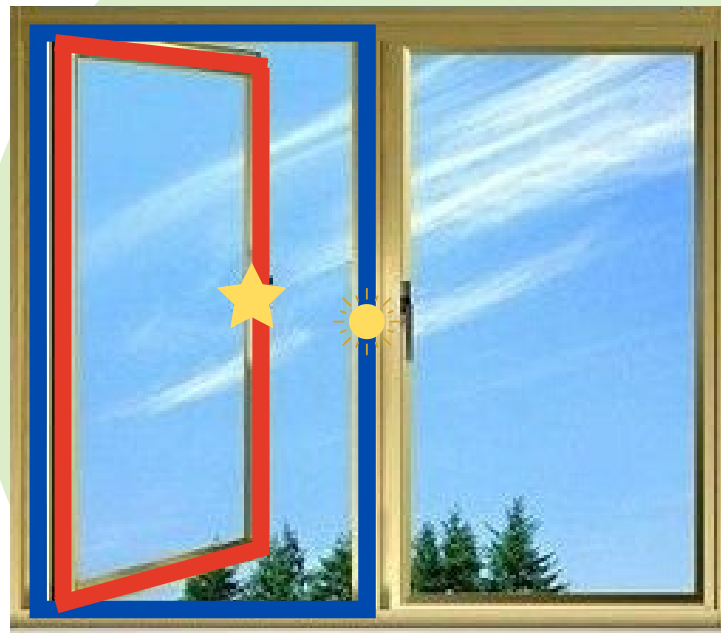

STEP 3

Open the zippers and insert the hose. Close the zippers to block it. For extra support, use one of the cable ties provided to lock the zippers.

Remark: If you want to close your window, simply detach the cloth from the velcro.