


STX-SC6

ASSEMBLY INSTRUCTION

ASSEMBLY STEPS:

- 1. REMOVE WALL BRACKET FROM THE LAMP FIXTURE, AND ATTACH THE MOUNTING CROSS BAR [A] ONTO THE WALL BRACKET ON THE WALL AND FASTENING WITH THE MOUNTING SCREWS [B].
- 2. CONNECT THE BLACK CORD OF LAMP WITH THE ANODE WIRE ON WALL BRACKET BY CONNECTOR [D], CONNECT WHITE CORD OF LAMP WITH CATHODE WIRE ON WALL BRACKET BY CONNECTOR [D]. CONNECT THE GROUND WIRE TO WALL BRACKET BY CONNECTOR [C].
- 3. PLACE THE LAMPBODY [F] ON THE MOUNTING CROSS BAR [A] AND TIGHTEN BY SCREWING [E].

CAUTION:PULL ANY EXCESS WIRE THROUGH BOTTOM OF THE LAMP, .PLEASE USE TYPE A BULB.DO NOT USE LIGHT BULB RATED GREATER THAN 60 WATTS OR THE LAMP MAY BURN AND CAUSE A FIRE! TO CLEAN, USE A SOFT CLOTH ONLY.

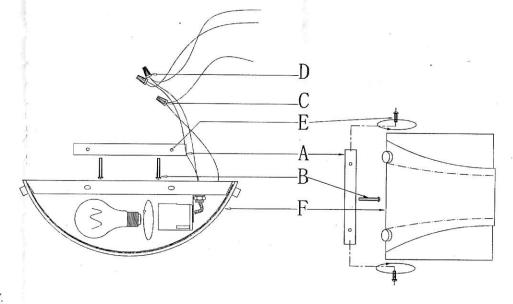

NOTE 1: TURN THE POWER OFF (UNPLUG FROM THE WALL OUTLET) BEFORE REPLACING THE BULB.MAKING SURE THE BULB HAD SUFFICIENT TIME TO COOL DOWN. DO NOT SUBJECT TO THE LAMP TO ANY SHOCK WHITE LIT AS SHATTERING OF LAMP MAY RESULT.

NOTE 2:CLEAN THE LIGHTING FIXTURE GENTLY WITH A DRY, SOFT CLOTH.