


## INSTALLATION INSTRUCTION PART# PW012660 RUNNING BOARD BRACKET FOR VW

### NOTICE:

- ≡ Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- ≡ Please periodically check and retighten all the hardware and clean the investment for a refresh look.

### PARTS LIST:

No.	Name	Qty	Remarks	No.	Name	Qty	Remarks
①	Running board	2		⑥	Flat washer	14	8mm
②	Front bracket	2		⑦	Hex nut	14	M8
③	Middle bracket	2		⑧	Spring washer	14	8mm
④	Rear bracket	2		⑨	Cushion Plate	14	∅0.7*40*40
⑤	T bolt 1	10	M8x30	⑩	T bolt 2	4	M8x30

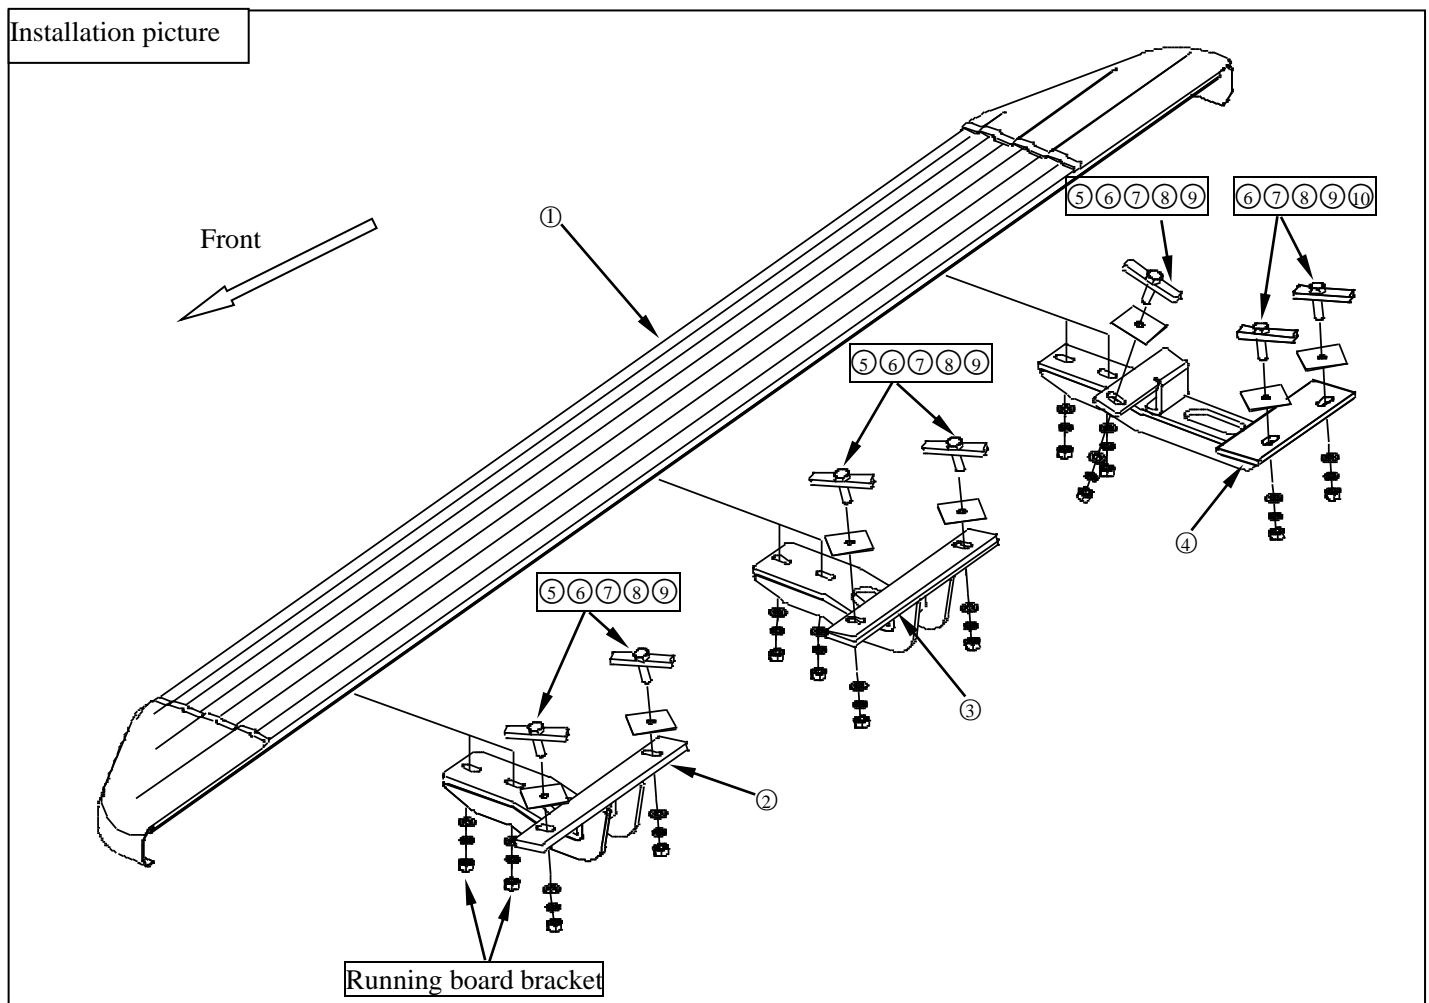

## INSTALLATION INSTRUCTION PART# PW012660 RUNNING BOARD BRACKET FOR VW

### ASSEMBLY PROCEDURE:

Step 1: Check all the contents are available in accordance with the above list.




Step 2: Install the T bolt into vehicle bottom. (Installation picture, fig.1)

Step 3: Install the Front bracket and Middle bracket in vehicle bottom, do not tighten all the bolts. (Installation picture, fig.2)

Step 4: Install the running board on brackets; do not tighten all the bolts. (Installation picture)

Step 5: Line up the Running board with the brackets, finally follow up with tightening the Running board bolts.

Step 6: Verify that all the hardware was installed and fully tightened.

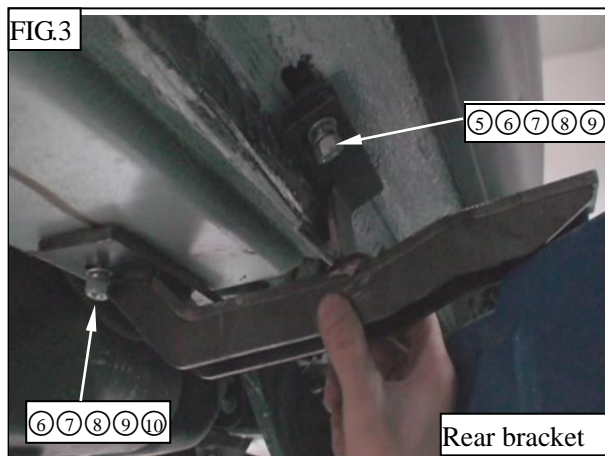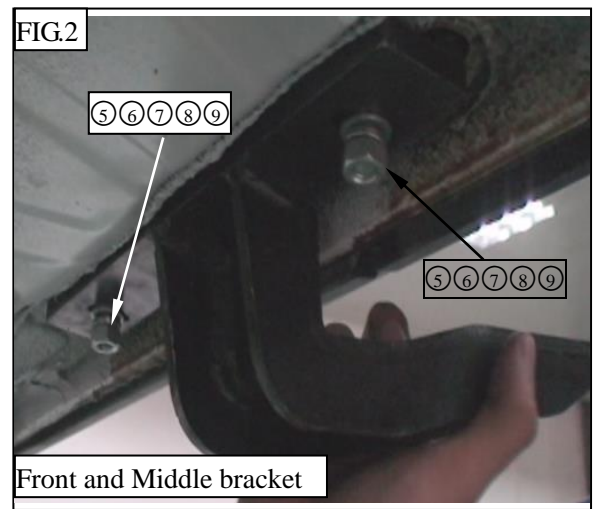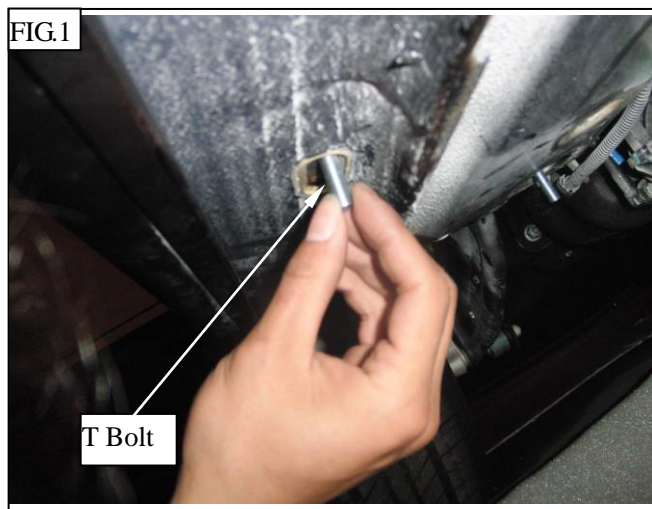

**NOTE:** Any damages and losses caused by improper installation and application, goes beyond our quality warranty.