

# Fitting Instruction

## Running Board Brackets for Toyoda RAV4

### Note and Products Care :

- Read Carefully the instruction sheet before installing. Take good care of your vehicle when installing to prevent any scratch;
- Please remember the location of each components removing from vehicle before installation, make sure them in correct position after installation;
- Check periodically to see if there's any loose bolts and nuts to ensure safe driving.


### Function and Features:

- It will be more convenient for customers to get off and get on; And it will be a good protection for the vehicle.
- The Running board fits perfectly the vehicle contour, it makes the car a completely new outlook.
- Easy installation, use the original holes in the vehicle, no need for drilling.

### The Third , Parts List :

NO	Name	Qty	Specification	No	Name	Qty	Specification
①	Running board	2		⑥	Spring Washer	4	12mm
②	Front Brackets	2		⑦	Hex Nut	4	M12
③	Rear Brackets	2		⑧	Logo	2	
④	T-bolts	4	M12x45	⑨	Plastic Buckle	4	D12
⑤	Big Washer	4	12mm	⑩	Middle Brackets	2	
ⓐ	T-bolts 1	4	M8x35	ⓑ	Spring Washer	4	8mm
ⓒ	Big Washer	4	8mm	ⓓ	Hex Nut	4	M8
ⓔ	Plastic Buckle	4	D8				

### Installation Picture

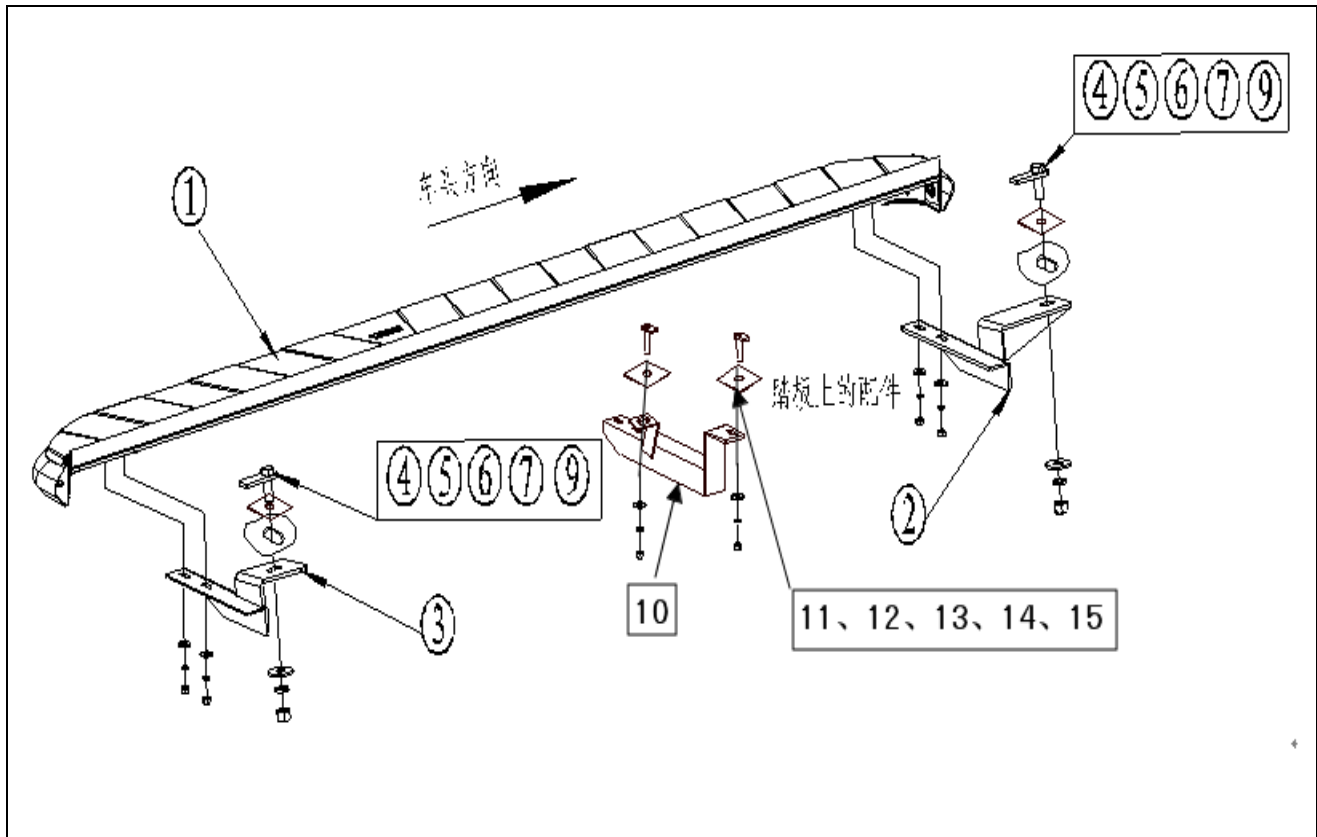

**Assembly Procedure :**

Step One: Check all the contents are available in accordance with the above list

Step Two: Distinguish left and right brackets according to the word stamped in the brackets. Put assorted nuts and bolts together to make sure the installation is efficient.

Step Three : Install front brackets. Making use of the front brackets installation holes, put the  $\phi$ ( $\phi$ 12 plastic block) mounted to ④(T bolt) , the ④ into the two hole positions, reuse parts ⑤⑥⑦ of the bracket is fixed on the bottom, don't tighten (Note: the left and right bracket according to this method of mounting);

Step Four : Install middle brackets. Making use of the front brackets installation holes, put the  $\square$ ( $\phi$ 8 plastic block) mounted to  $\square$ (T bolt 1), put the  $\square$  into the hole positions, reuse parts  $\square$ ③④ of the bracket is fixed on the bottom, don't tighten (Note: the left and right bracket according to this method of mounting);

Step Five : Install rear brackets. Making use of the front brackets installation holes, put the  $\phi$ ( $\phi$ 12 plastic block) mounted to ④(T bolt) , the ④ into the two hole positions, reuse parts ⑤⑥⑦ of the bracket is fixed on the bottom, don't tighten (Note: the left and right bracket according to this method of mounting);

Step Six : Referring to the installation picture, fix the running board into the brackets through bolts and nuts.

Step Seven : Adopt the running board to suitable height, tighten all the screws.

Step Eight : Check if all screws in position, and make sure all screws are screwed tightly. Installation finished.

**DISCLAIMER :**

We are not responsible for any quality problems caused by improper installation and use. Do not use any type of polish or wax that may contain abrasives that could damage the finish; we are not responsible for any damage caused by chemicals used in car washes or other car cleaning facilities or products..