

Fitting Instruction

Side Steps for the Volkswagen Touareg 2010 Onwards

Note and Products Care :

- Carefully read the instruction sheet before installing. Take good care of your vehicle when installing to prevent any scratches.
- Please remember the location of each component that you are removing from the vehicle before installation, make sure these are in the correct position after installation.
- Check periodically to see if there's any loose bolts and nuts to ensure safe driving.


Features:

- It will be easier for customer to get in and out and it will be a good protection for the vehicle.
- The Running board fits perfectly to the vehicle contour and it gives the car a completely new look.
- Easy installation, using the original holes in the vehicle, without any need for drilling.

Parts List

NO	Name	Qty	Specification	No	Name	Qty	Specification
○1	Side Steps	2		○9	Hex Nut	10	M12
○2	Front Brackets	2		○10	T-bolts One	2	M8X30
○3	Middle Brackets	2		○11	Plastic Buckle	2	D8
○4	Rear Brackets	2		○12	Big Washer	2	D8
○5	T-bolts	8	M12X40	○13	Spring Washer	2	D8
○6	Plastic Buckle	10	D12	○14	Hex Nut	2	M8
○7	Big Washer	10	D12	○15	T-bolts Two	2	M12X40
○8	Spring Washer	10	D12	○16		2	


Installation Picture

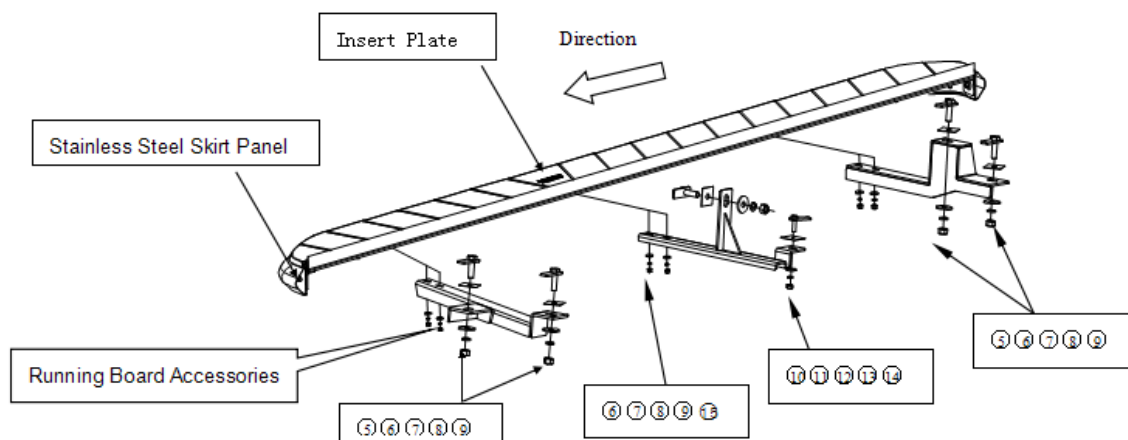

Assembly Procedure:

- Step One: Check that all the contents are available in accordance with the above list
- Step Two: Distinguish left and right brackets according to the words stamped in the brackets.
Put assorted nuts and bolts together to make sure that the installation is efficient.

Step Three: Install front brackets, referring to picture one. Find the mounting points under the chassis and fix front brackets on the vehicle using part numbers 0506070809. Don't tighten the bolts yet. (Left and right brackets are installed in the same way)

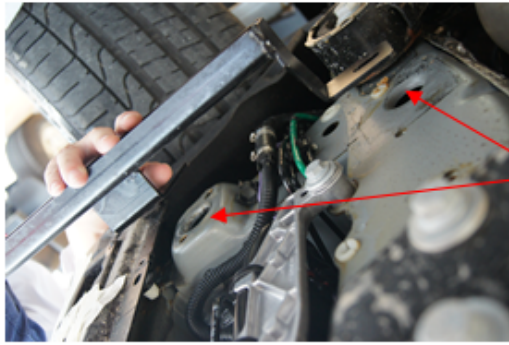

Front brackets installation holes

Picture one


Step Four: Install Middle brackets, referring to picture two. Find the mounting points under the chassis and fix middle brackets on the vehicle through 0607080915&010011012013014. Don't tighten the bolts yet. (Left and right brackets are installed in the same way)



Middle brackets installation holes

Picture two

Step Five : Install Rear brackets, referring to picture three. Find the mounting points under the chassis and fix rear brackets on the vehicle using part numbers 0506070809. Don't tighten the bolts yet. (Left and right brackets installed in the same way).

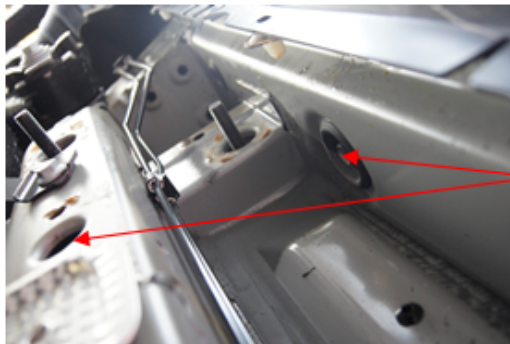

Rear brackets installation holes

Picture three

Step Six: Referring to the installation picture, fix the running board into the brackets through bolts and nuts.

Step Seven: Position the side steps to a suitable height and tighten all the screws.

Step Eight: Check that all screws in position, and make sure all screws are screwed tightly. Installation is now finished.

DISCLAIMER: We are not responsible for any quality problems caused by improper installation and use. Do not use any type of polish or wax that may contain abrasives that could damage the finish; we are not responsible for any damage caused by chemicals used in car washes or other car cleaning facilities or products. It is best to clean these steps with soapy water.

