

Fitting Instruction

Side Steps for Volvo XC60 2009 Onwards

Product Care :

- Carefully read the instruction sheet before installing. Take good care of your vehicle when installing to prevent any scratches.
- Please remember the location of each component that you are removing from vehicle before installation, make sure these are in the correct position after installation;
- Check periodically to see if there are any loose bolts and nuts to ensure safe driving.


Function and Features:

- It will be easier to get in and out of the vehicle and will help to protect the vehicle.
- The Running board fits perfectly the vehicle contour, it makes the car a completely new outlook.
- Easy installation, using the original holes in the vehicle, without any need for drilling.

Parts List:

| NO | Name | Qty | Specification | No | Name | Qty | Specification |
|----|----------------|-----|---------------|----|----------------|-----|---------------|
| ○1 | Side Step | 2 | | ○6 | Big Washer | 8 | 10mm |
| ○2 | Front Brackets | 2 | | ○7 | Plastic Buckle | 8 | Φ10 |
| ○3 | Rear Brackets | 2 | | ○8 | T-bolts | 8 | M10×40 |
| ○4 | Hex Nut | 8 | M10 | | | | |
| ○5 | Spring Washer | 8 | 10mm | | | | |

Installation Picture

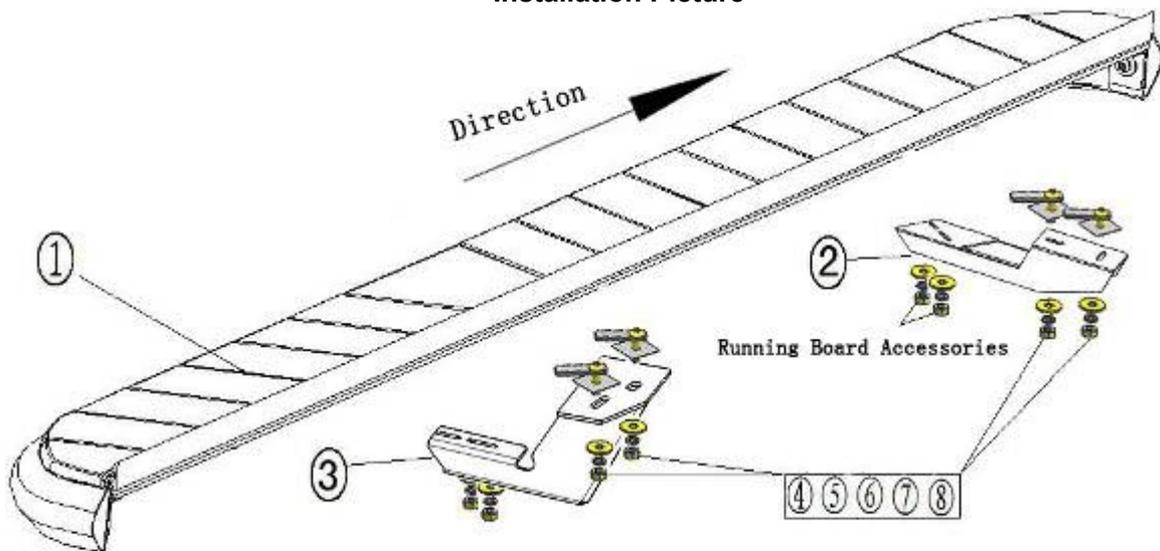

Assembly Procedure :

Step One: Check that all the contents are available in accordance with the above list.

Step Two: Distinguish left and right brackets according to the words stamped in the brackets. Put assorted nuts and bolts together to make sure the installation is efficient.

Step Three: Install front brackets, referring to picture one. Find the mounting points underneath the chassis, put the ○7 (Φ8 plastic block) mounted to ○8 (T-bolt), the ○8 into the two hole positions, reuse parts ○4 ○5 ○6 of the bracket is fixed on the bottom, don't tighten the bolts yet (left and right brackets fit in the same way).



Front Brackets installation holes (0405060708)

picture 1

Step Four: Install rear brackets, referring to picture 2. Find the mounting points under the chassis and fix part number 07 ($\phi 8$ plastic block) to part number 08 (T-bolt), part number 08 into the two hole positions, reuse parts 040506 of the bracket is fixed on the bottom, don't tighten the bolts yet (the left and right brackets are fitted in the same way).



Rear Brackets installation holes (0405060708)

picture 2

Step Five: Referring to the installation picture, attach the side step to the brackets using bolts and nuts.

Step Six: Position the side steps to a suitable height and tighten all the screws.

Step Seven: Check that all screws are in position and make sure these screws are screwed in tightly. Installation is now finished.

DISCLAIMER: We are not responsible for any quality problems caused by improper installation and use. Do not use any type of polish or wax that may contain abrasives that could damage the finish; we are not responsible for any damage caused by chemicals used in car washes or other car cleaning facilities or products. We recommend using soapy water to clean this product.