


ON A POLARIS AXYS
OR PRO 2011-present

Solder to the BLUE &
WHITE PTO injector



ON A SKI DOO
850

Solder to
ORANGE/BLUE
at coil

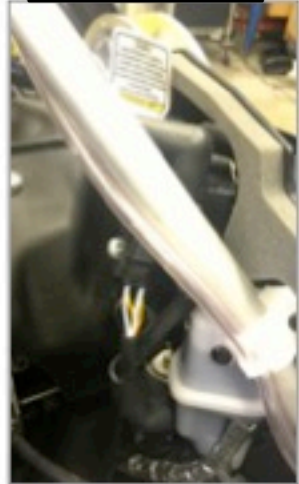

ON A SKI DOO
XM - XP

Solder to center
ORANGE off PTO
coil



YELLOW/BLACK

