

Assembly Instructions

Information	
Size	120 x 66 x 80
Net Weight	11.8kg
Max Weight	160kgs

Parts	Material	Finishing
1 Seat	Iron/ Rattan	Powder Coated/ Melamine
1 Legs	Iron	Powder Coated
4 Metal Washers	Anodized Steel	-
4 Metal Nuts	Anodized Steel	-



Chair Fully Assembled

Parts Included



Tools Required


1x Spanner

Assembly Instructions

Front is Higher
←



Step 1: Place seat onto the legs with the higher part of the legs towards the front

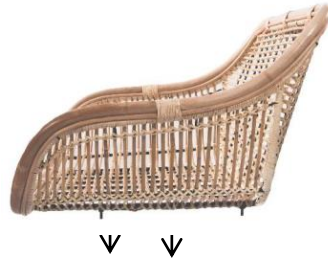

Step 2: Align pre-attached bolts on seat with holes on metal legs



Step 3: Fasten the washer and metal nut onto each bolt securely. Use a spanner to tighten.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Maintenance Instructions -To minimise the risk of injury, regularly check all the parts to ensure that they are well fixed and tighten if necessary.