



Lali Bar Stool

Assembly Instructions



1. Open the box and lay out all the pieces **taking particular care to split the 45mm (x8) and 50mm screws (x4)**. If you don't use these different screws in the appropriate places, it will cause an issue right at the end and then you'll realise what you've done!

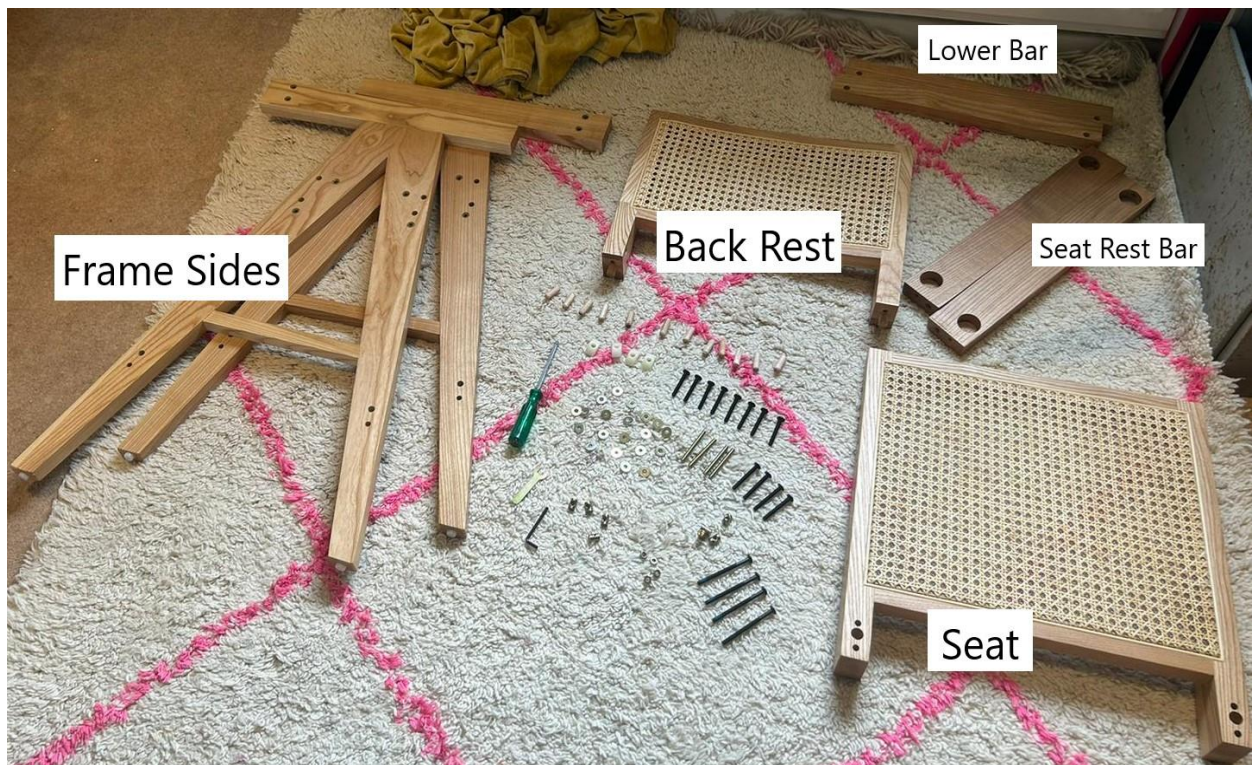

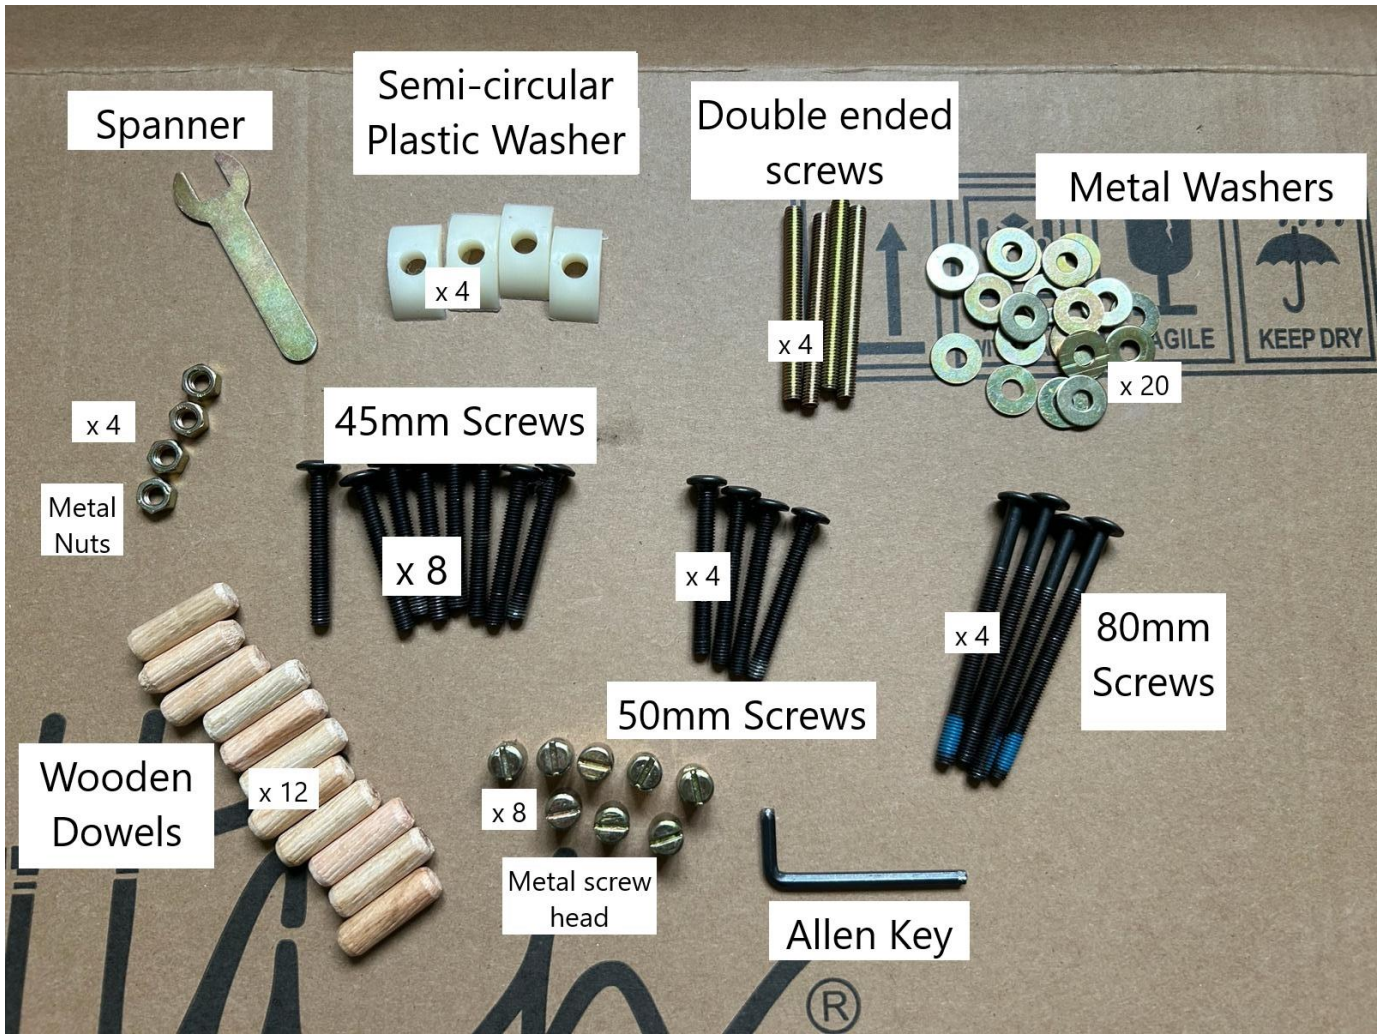


2. Begin to assemble the first side of the stool.

- a. Screw in the double ended screws and insert the wood dowels into the holes on both sides (as per the image below).
- b. Attach the seat rest bars on both sides with the large hole facing inwards.
- c. Fix the piece into place using the semi-circular plastic washer over the end of the double ended screw, then a metal washer and finally tighten together with a metal nut using the spanner provided.



3. Fit the lower bars to this side of the stool (front and back)

- d. insert wooden dowel into the lower bar hole and connect to the side piece with large hole facing inwards. Then insert metal screw head into the large inward facing hole (align so you can screw the **50mm** into it).
- e. Insert a metal washer and then screw in a **50mm** screw and tighten with the Allen key provided.
- f. Repeat for the other lower bar. You should now have all 4 bars securely fastened in place on one side of the stool.

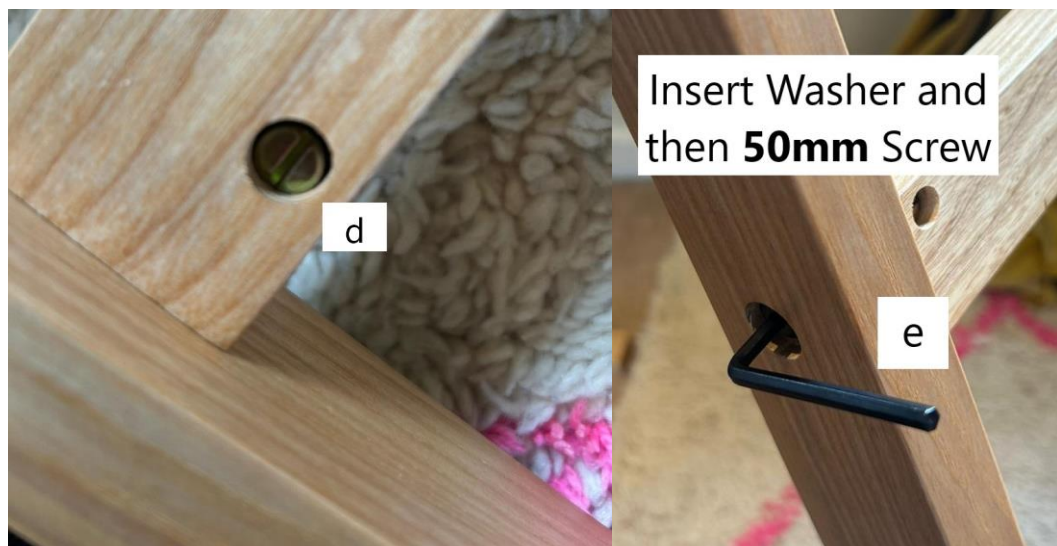

4. Attach the seat and back rest to this side of the stool.

g. Start by fixing the seat into position. Insert the 2 x wooden dowels and put the seat into position. Insert a metal washer into each hole and then tighten to 75% (i.e. don't tighten fully because you may need some wiggle room to connect the seat to the back later) with a 45mm screw.

h. Next attach the back rest using 2 x metal washers and 45mm screws. Tighten to 75%

i. Finally, join the seat to the back using 2 x 80mm screws and 2 x metal screw heads. Allow the screw heads to fall to the back of the hole before trying to screw the 80mm screw in place and fully tighten.

j. Fully tighten the seat and back screws to the frame using the Allen key so everything is 100% tightened.



5. Attach the 2nd side to the stool

k. Set up the 2nd side by inserting the wooden dowels and screwing in the metal double ended screws.

l. Place the 2nd side on top of the completed 1st side and line up all the wooden dowels with their respective partner holes. Once aligned, tap the 2nd sides dowels into place using your hand.

m. Using 2 x metal washers and 2 x **50mm screws**, attach the 2nd side to the lower bars. Tighten to 100% using the Allen key. (See images d & e)

n. You can then turn the stool so the 2nd side is on the bottom, insert the remaining screws and washers and tighten using the Allen key. (See image c)

o. Once all screws are tightened to 100% using the spanner, your stool is ready to use



ENJOY!