



ASSEMBLY MANUAL

VERSION: 24.1




STEP 01

Unpacking and Assembling

1


Cut the poly strapping.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

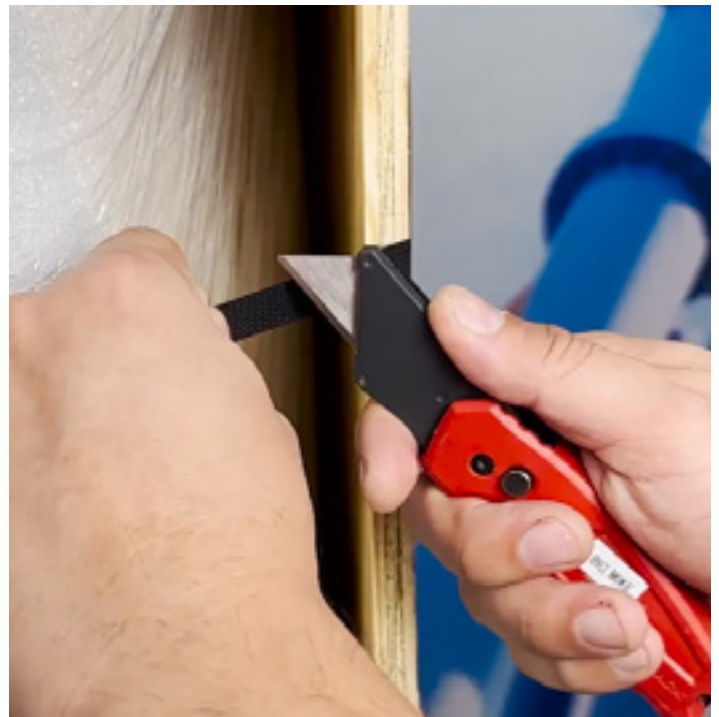

2

Unscrew all the screws from the plywood board .
Lorem ipsum dolor sit amet, consectetur adipiscing elit,

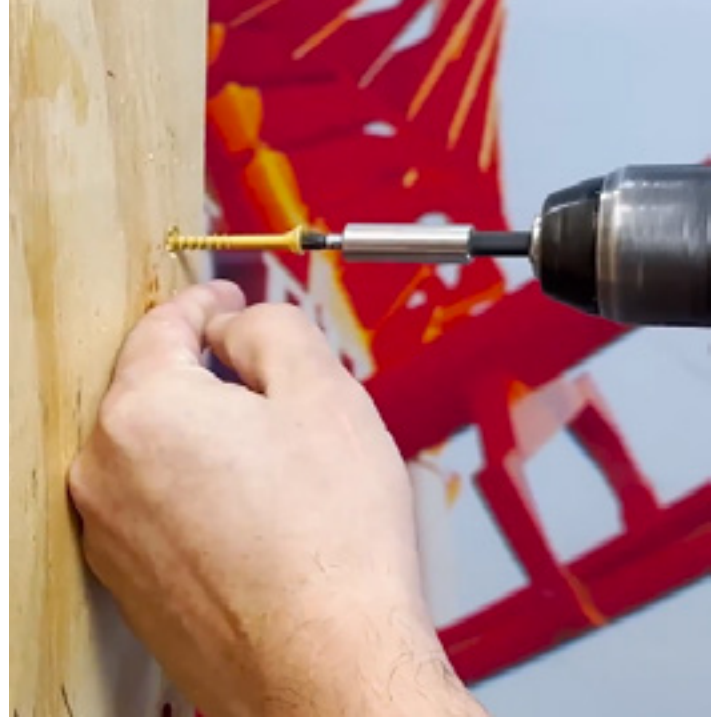

3

Remove the plywood board.
Lorem ipsum dolor sit amet, consectetur adipiscing elit,



4

Unscrew all the screws from the other plywood board.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



5

Remove the plywood board.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,



6

Cut the plastic film from the back.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

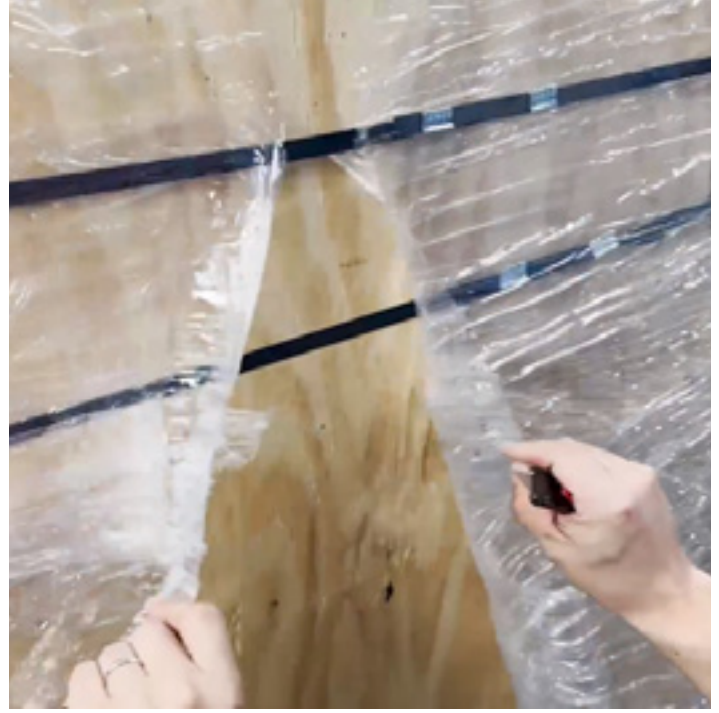

7

Remove the seat, leaning forward.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,



8

Hold the base and cut the poly strapping.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

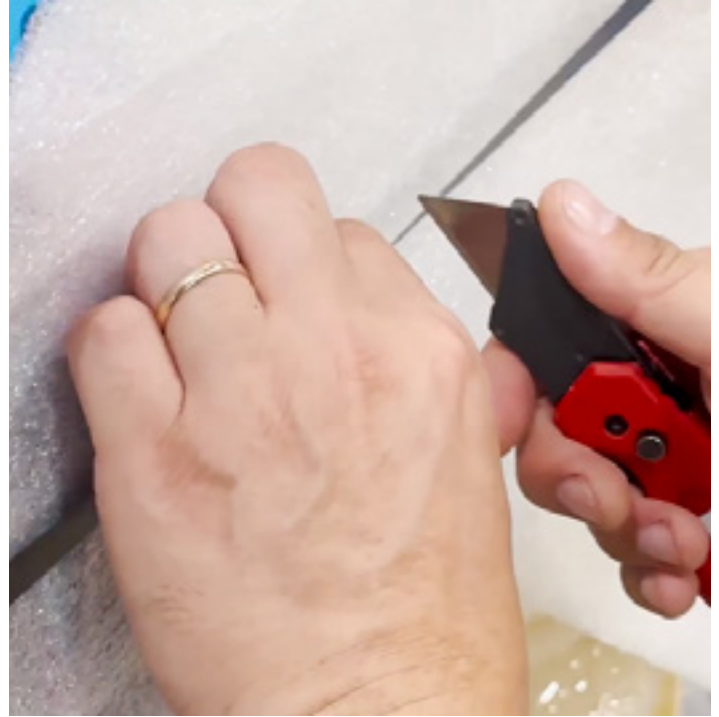

9

Hold the hood and base together, and then lay them on the floor.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



10

Remove the inner protection and mark it from the inside.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



11

Take off the hood


Lorem ipsum dolor sit amet, consectetur adipiscing elit,



12

Remove all the remaining components

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

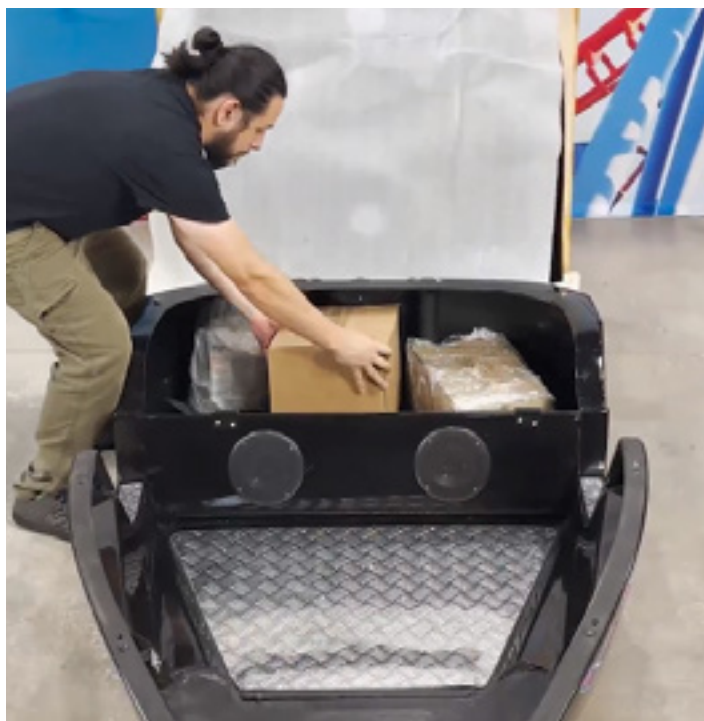

13

Fit the hood onto the base.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



14

Align it to the base.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,




Inside hook view

15

Connect the wind system cable.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

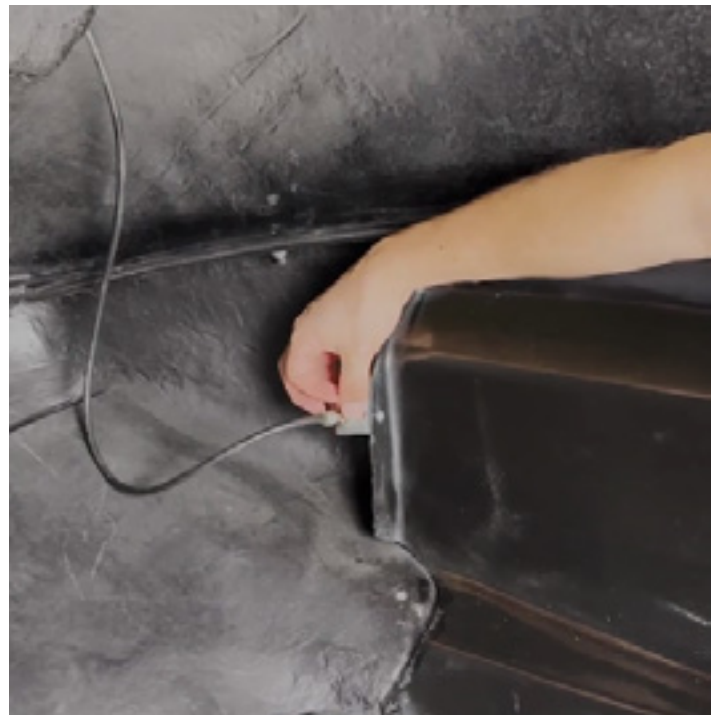

16

Tighten the screws using two 13mm wrenches.
Lorem ipsum dolor sit amet, consectetur adipiscing elit,



17

Hold the base and cut the poly strapping.
Lorem ipsum dolor sit amet, consectetur adipiscing elit,



18

Place the internal protection into position.
Lorem ipsum dolor sit amet, consectetur adipiscing elit,



19


Fasten the four screws provided.
Lorem ipsum dolor sit amet, consectetur adipiscing elit,



20

Fasten the four screws provided.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

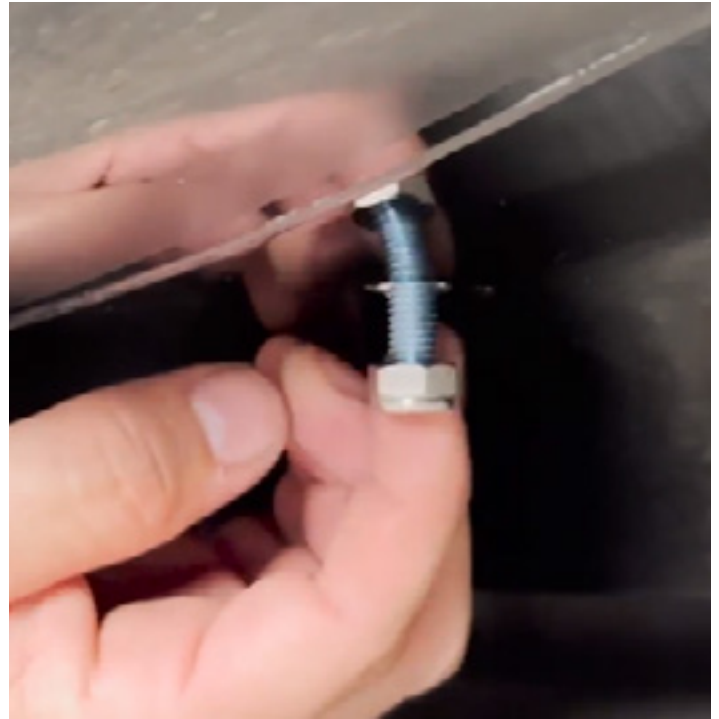

21

Fasten the four screws provided.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



22

Position the seat aligning the hinge's.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,



23

Unwrap the metal pipes.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,

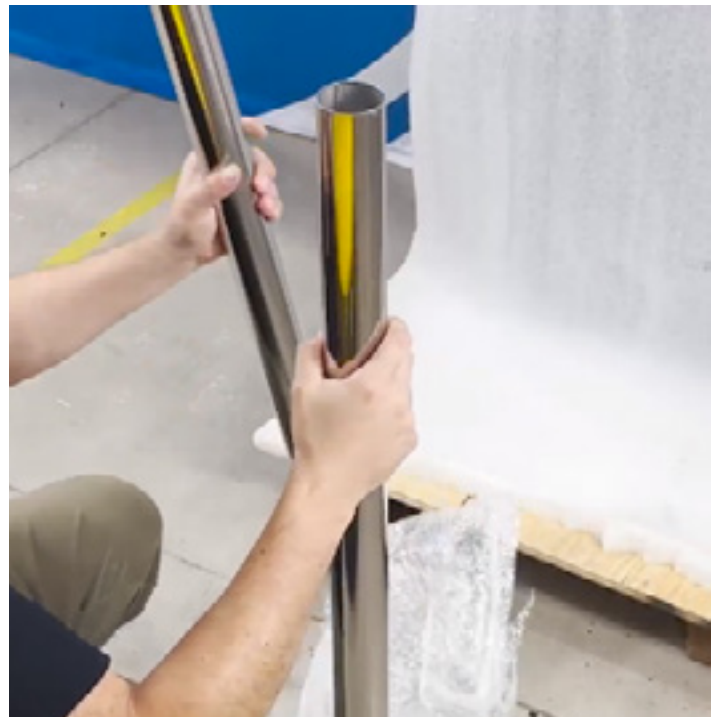

24

Insert the metal pipes into the base.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

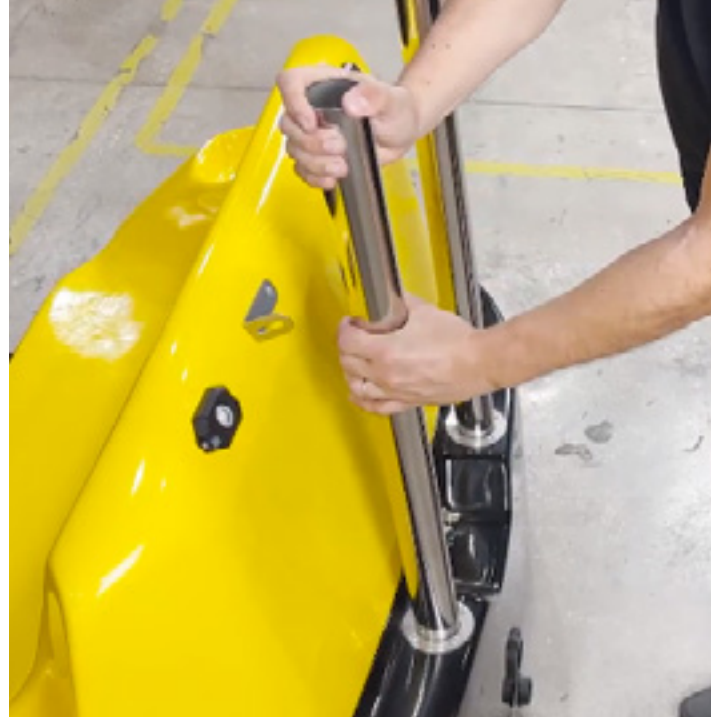

25

Hold the back display and cut the poly strapping.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



26

Hold the back display and flip it, positioning it into the base.

Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed do



27

Position the back display into the metal pipes.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



28

Unpack the marquee.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,



29

Hold the base and cut the poly strapping.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

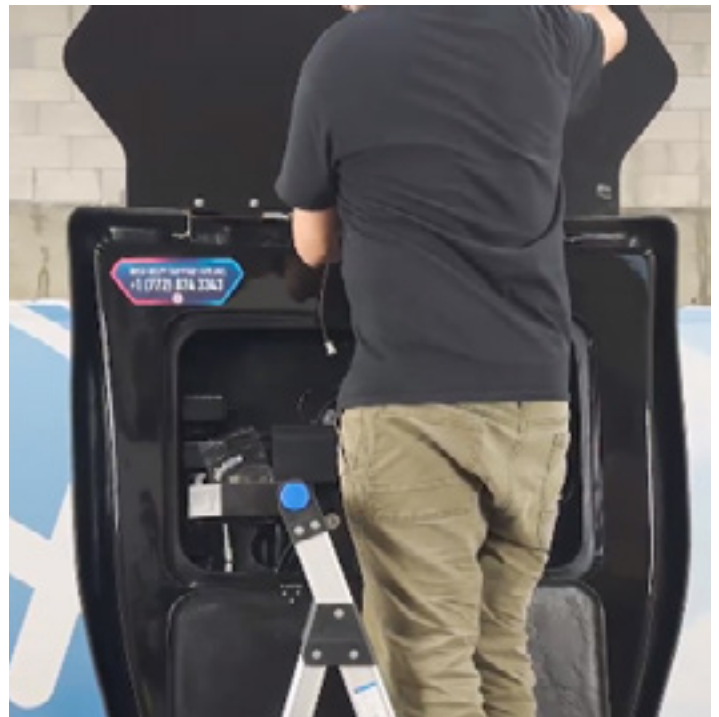

30

Attach the four screws provided.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,



31

Connect the cable to the corresponding connector.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

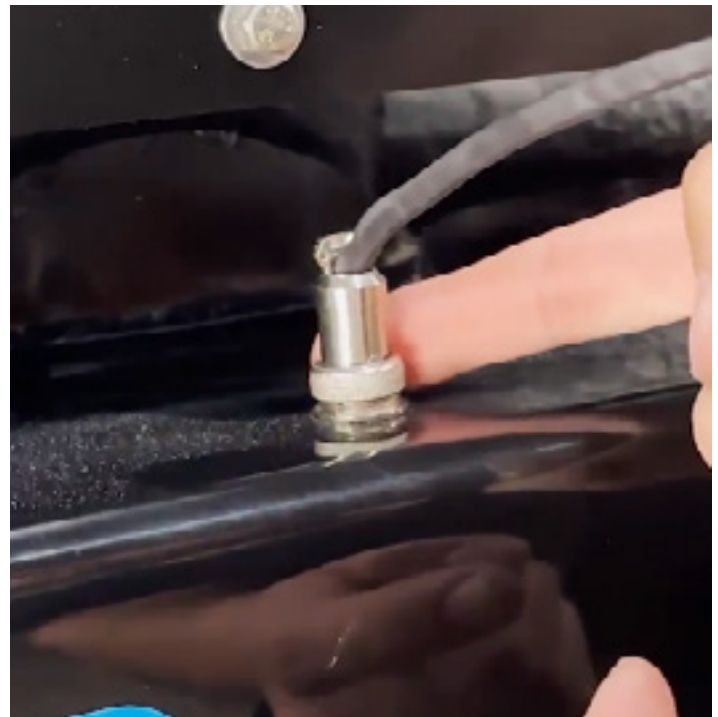


STEP 02

CONNECTING CABLES

1

Open the wooden box and take the key for the back display.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

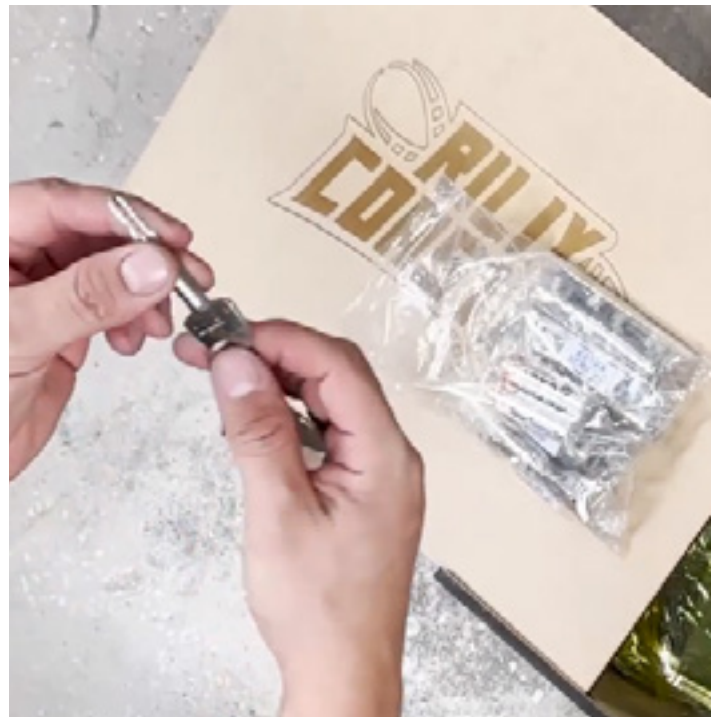

2

Open the lower door.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



3

Pull out all five cables.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



4

Unwind the power cord

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



5

Insert the power cord into the left pipe and grab it at the bottom of the base.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



6

Connect it into the power outlet

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



7

Unwind the LED cable.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,



8

Insert the LED cable into the left pipe and grab it at the bottom of the base.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,

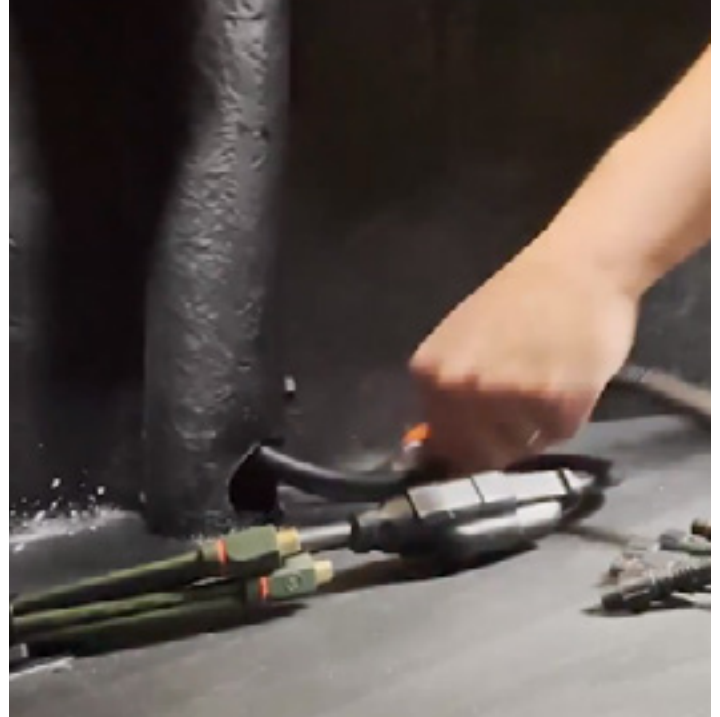

9

Connect the LED cable.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,

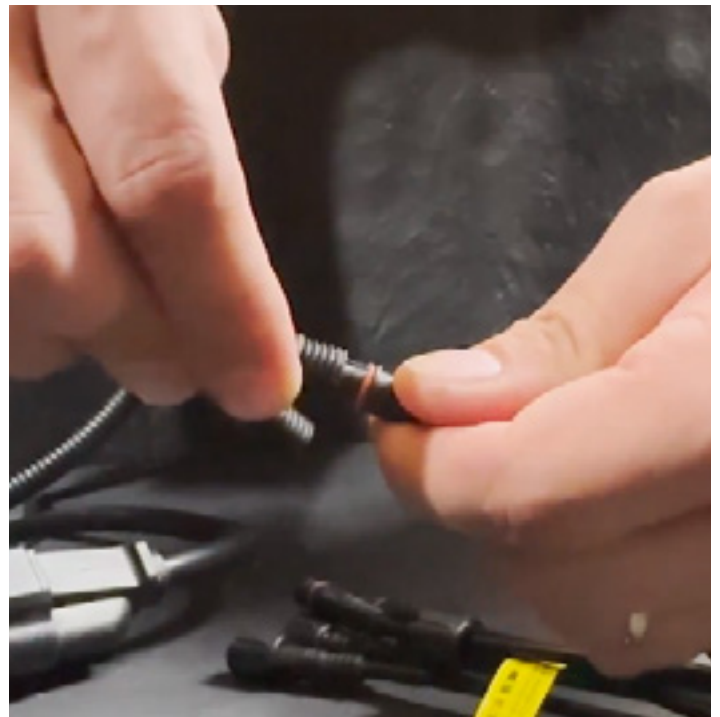

10

Unwind the audio cable.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,

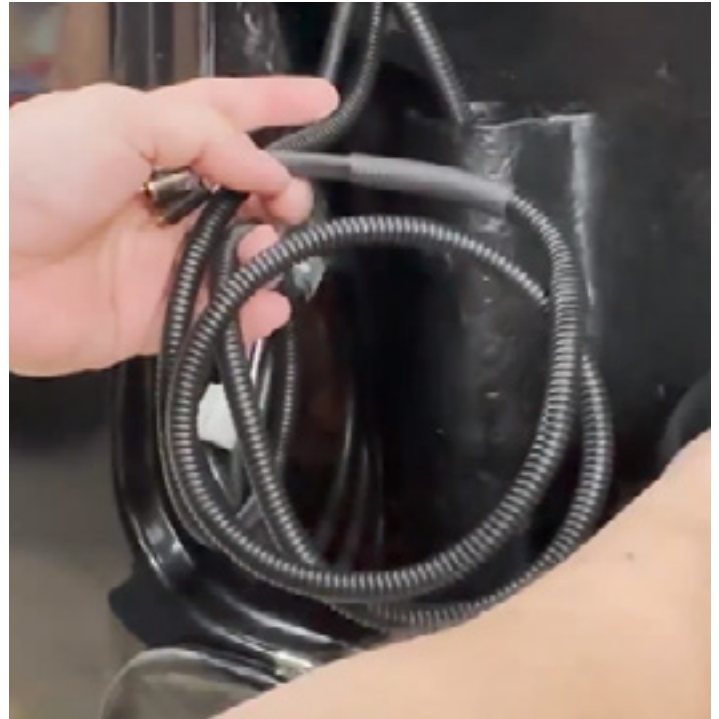

11

Insert the audio cable into the left pipe and grab it at the bottom of the base.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

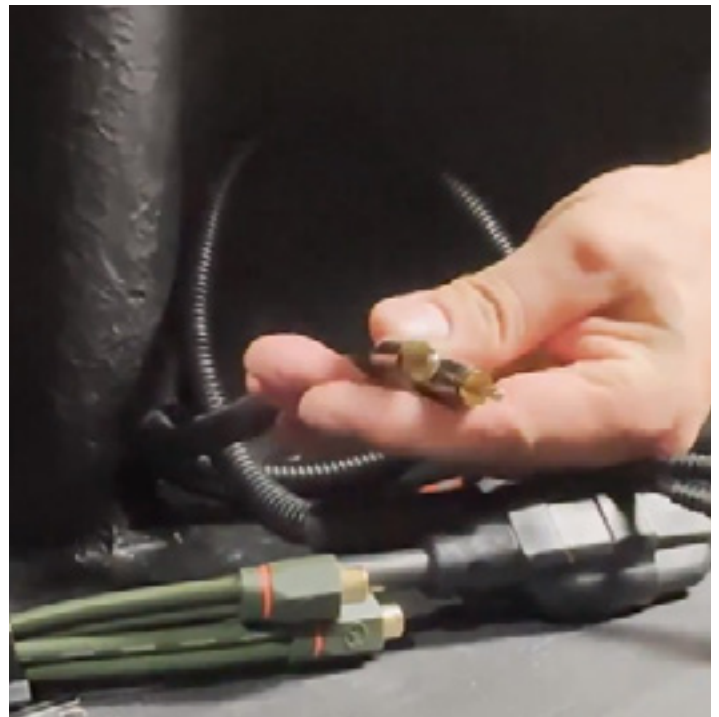

12

Connect the audio cable.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



13

Unwind the wind cable.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,



14

Insert the wind cable into the left pipe and grab it at the bottom of the base.



Lorem ipsum dolor sit amet, consectetur adipiscing elit,

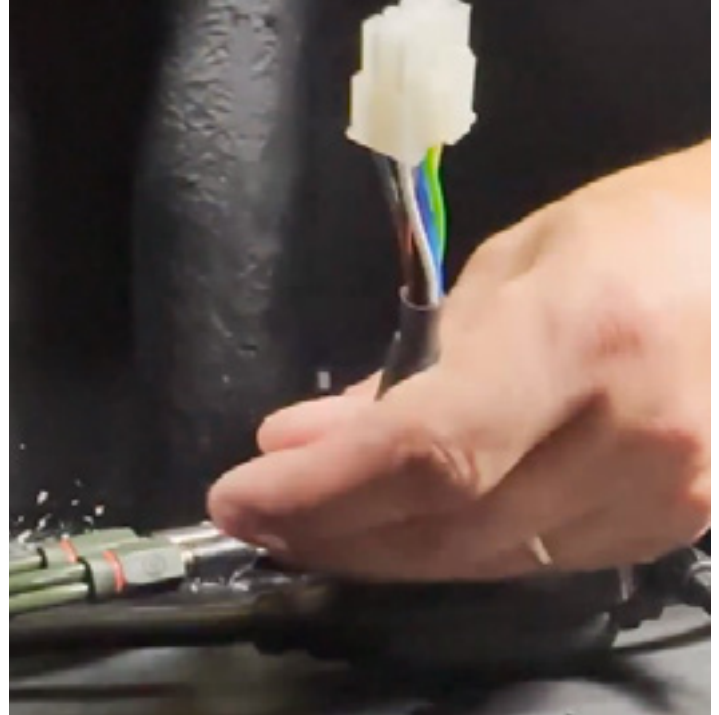

15

Connect the wind cable.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

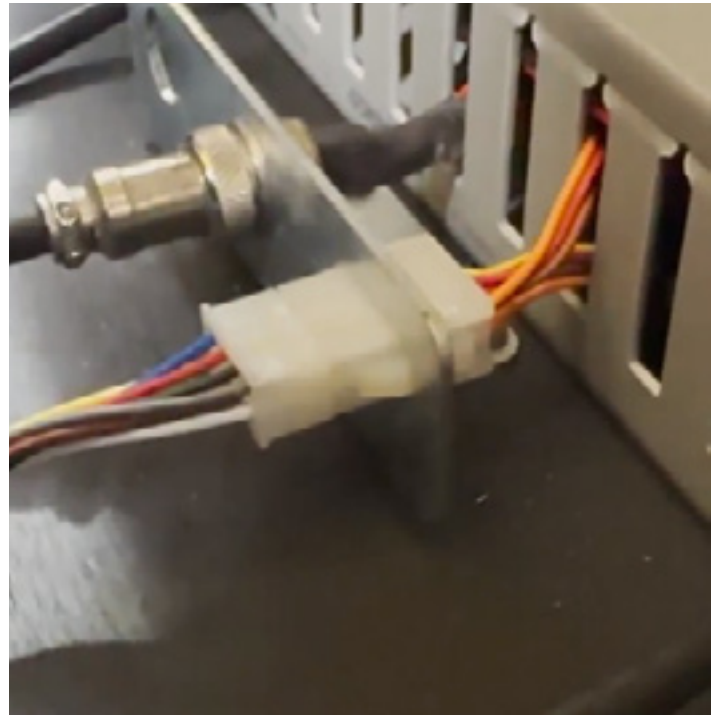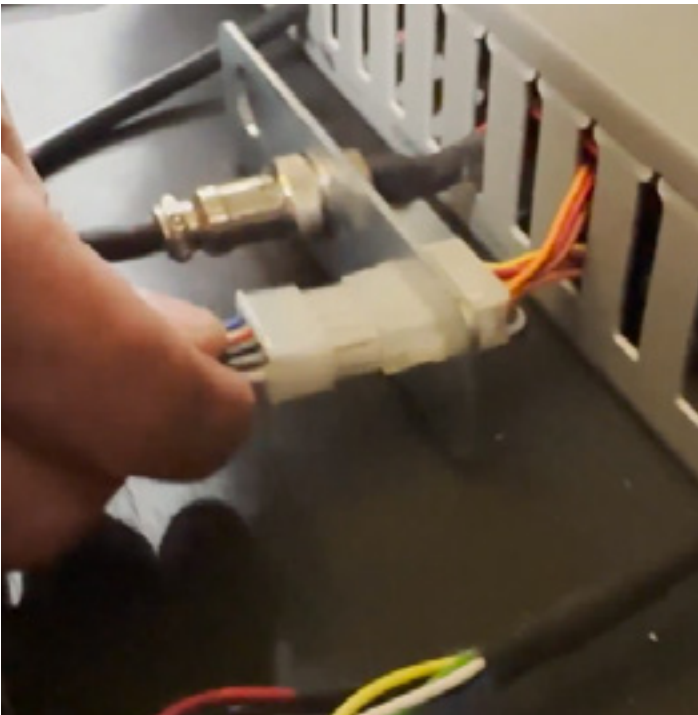

16

Unwind the second LED cable.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,



17

Insert the second LED cable into the left pipe and grab it at the bottom of the base.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,

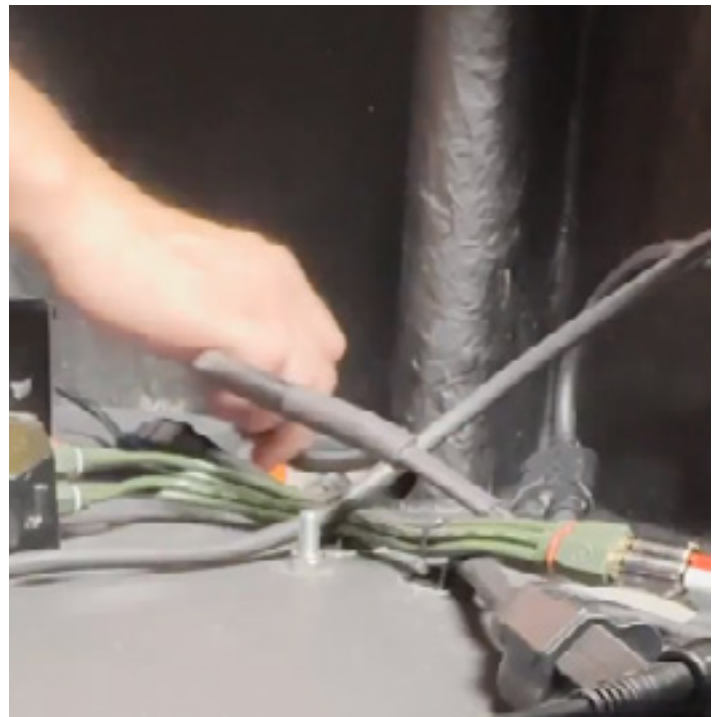

18

Connect the second LED cable.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,

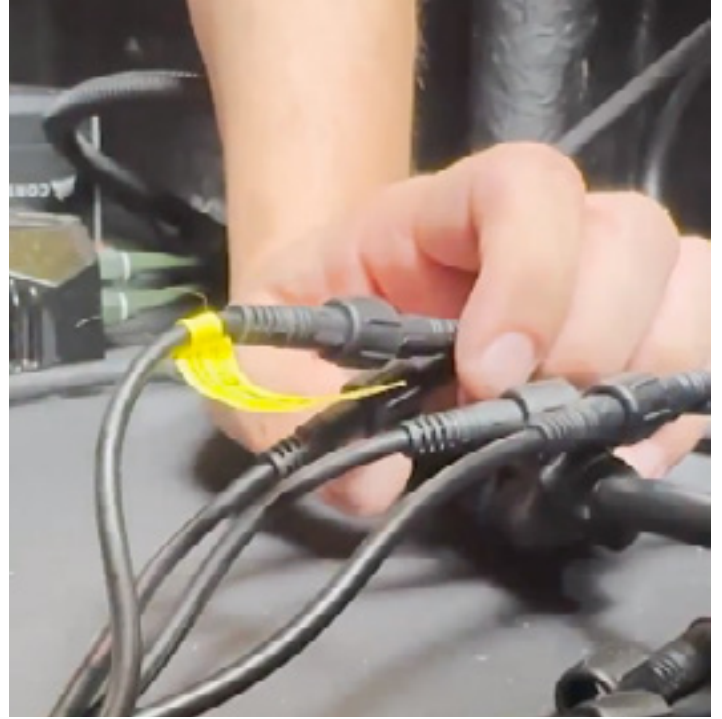

19


Connect the bass shaker cables.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

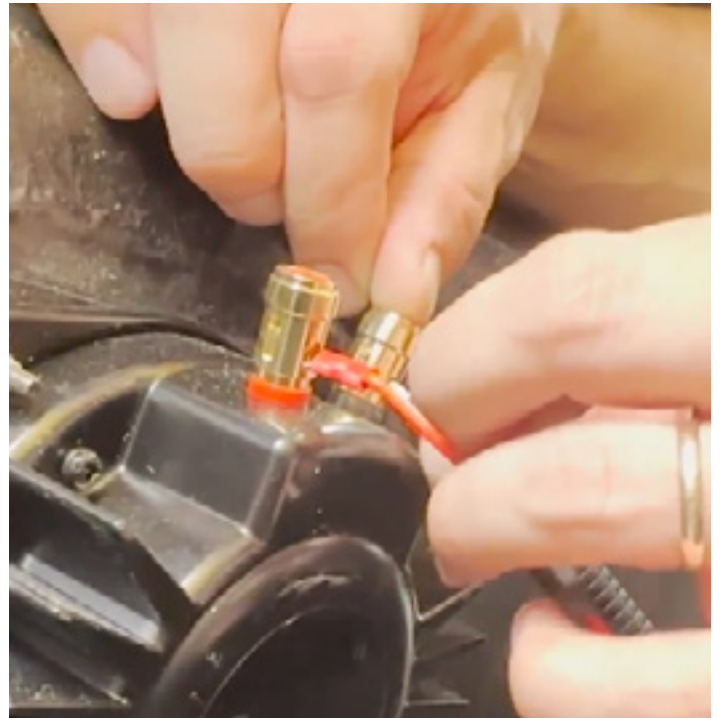


20

Pull the seat back to its position.
Lorem ipsum dolor sit amet, consectetur adipiscing elit,

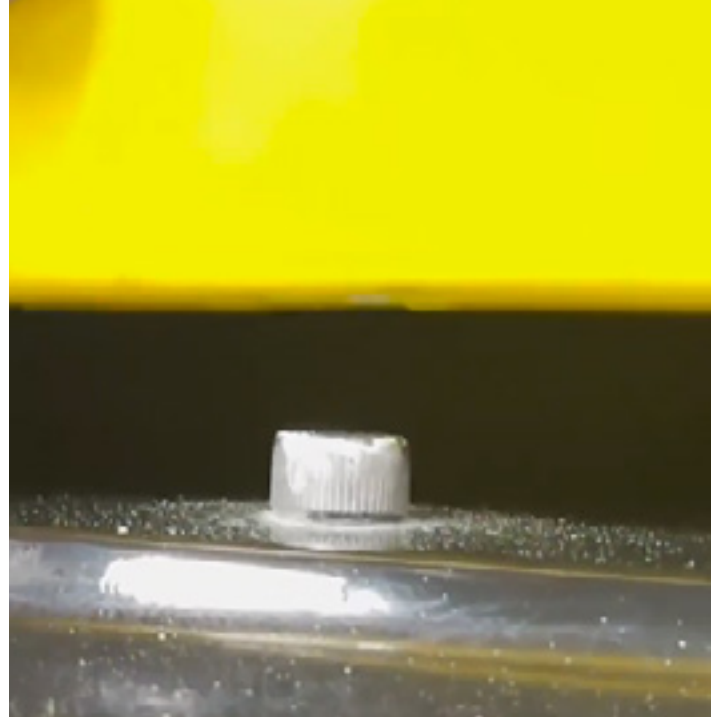

21

Close the latch.
Lorem ipsum dolor sit amet, consectetur adipiscing elit,

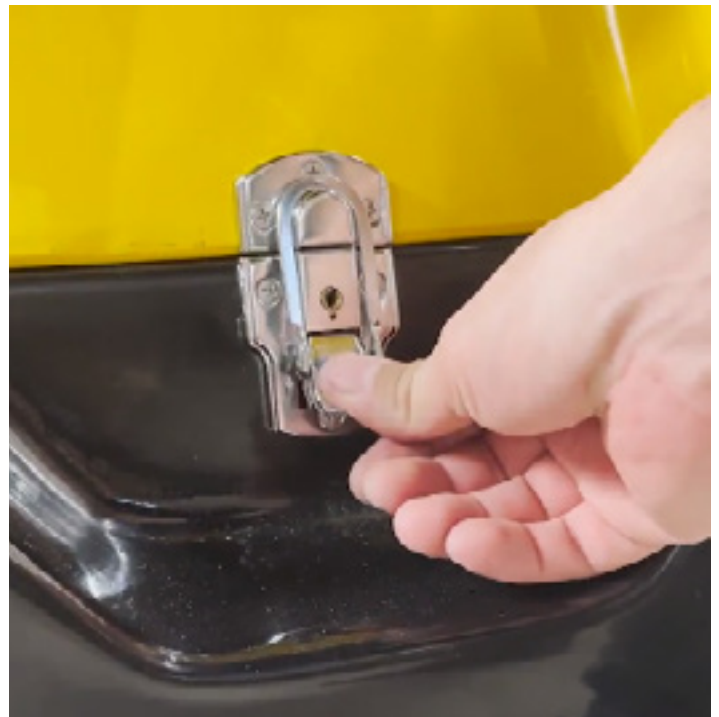

22

Close the lower door.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,





STEP 03

Setting Up Your Vr Gpoggles

1

Open the electronic panel.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

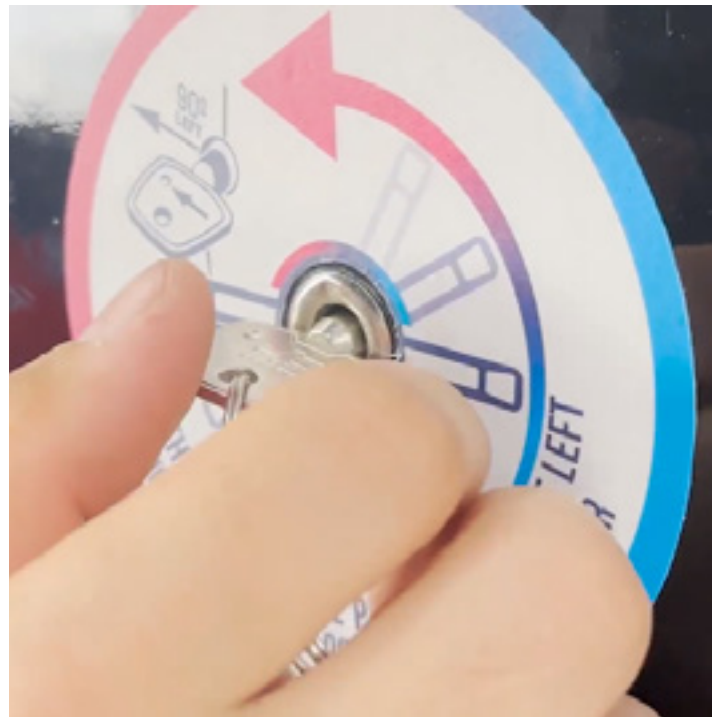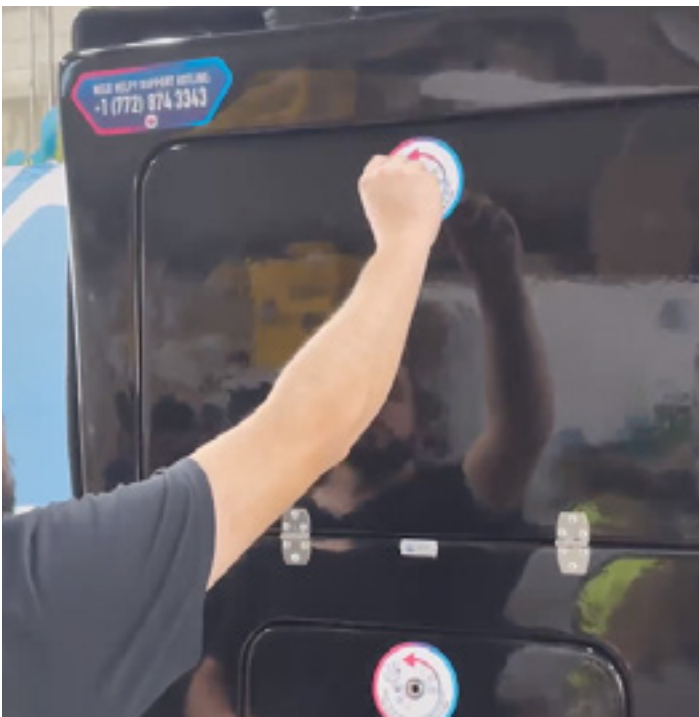

2

Position the goggles as indicated by the player order on the back display module.


(Repeat for player 1 and player 2)



3


Insert the cable through the hole.

(Repeat for player 1 and player 2)

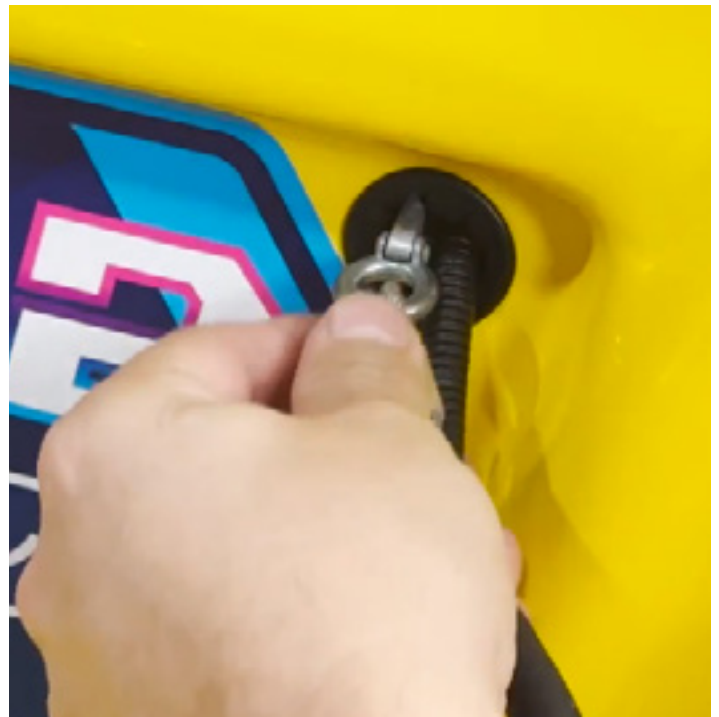

4

Pull the cable and attach the hook.
(Repeat for player 1 and player 2)

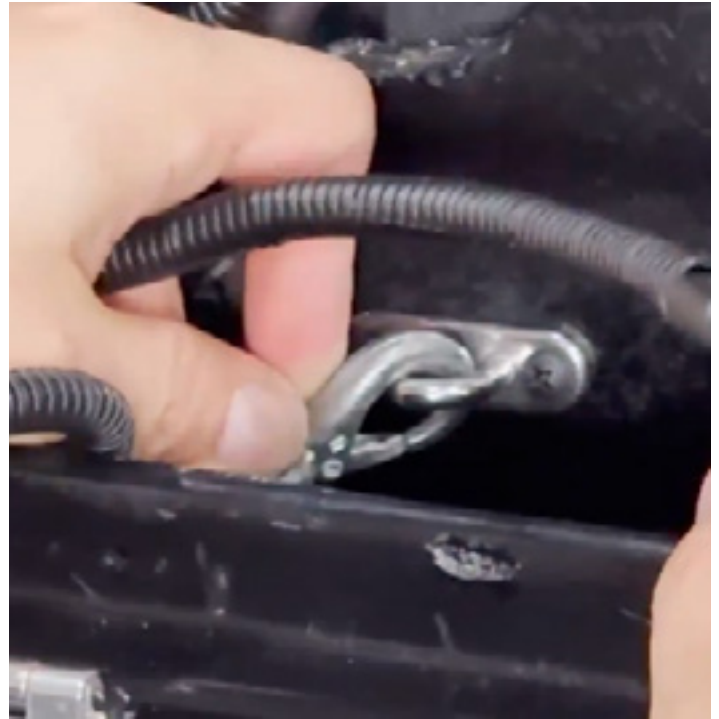

5


Connect the USB
(Repeat for player 1 and player 2)



8

Using a small screwdriver, press the power button.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

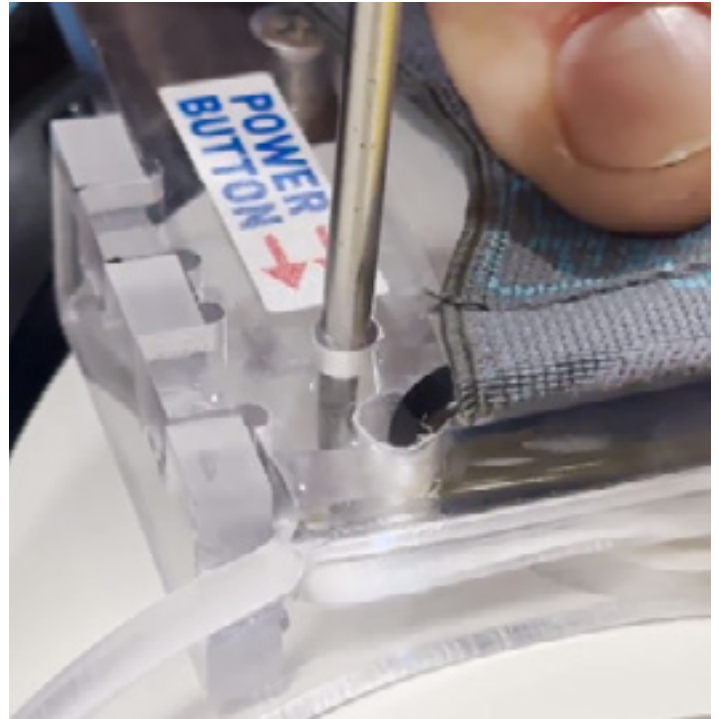

STEP 04

Completing the Setup

1

Connect the power cable to the base.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,



2

Connect the power cable and turn the simulator on.


Lorem ipsum dolor sit amet, consectetur adipiscing elit,

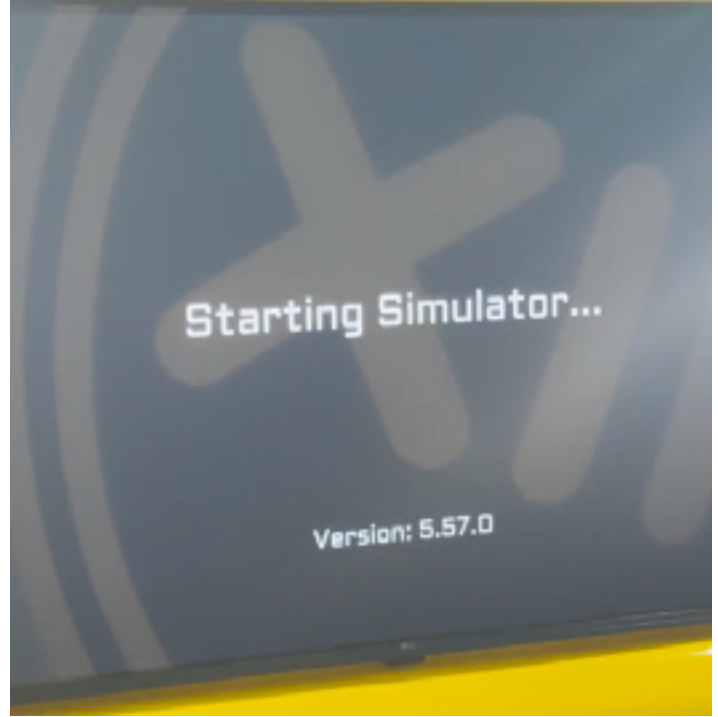

3

Secure the back display module to the seat using the accompanying screws

Lorem ipsum dolor sit amet, consectetur adipiscing elit,

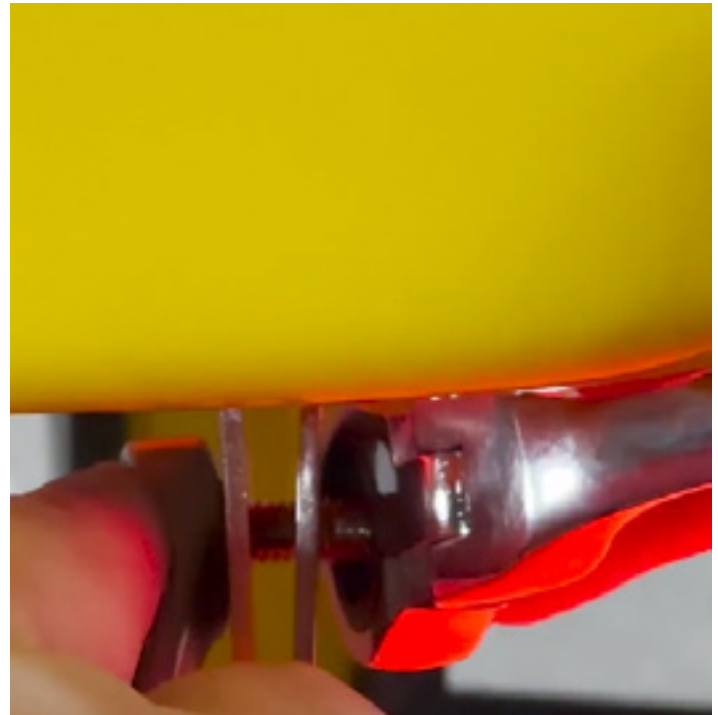

4

Close the top door and remove the key

Lorem ipsum dolor sit amet, consectetur adipiscing elit,




STEP 5

Installing the Wipes Dispenser

1

Remove the attached screws from the back of the seat.
Lorem ipsum dolor sit amet, consectetur adipiscing elit,

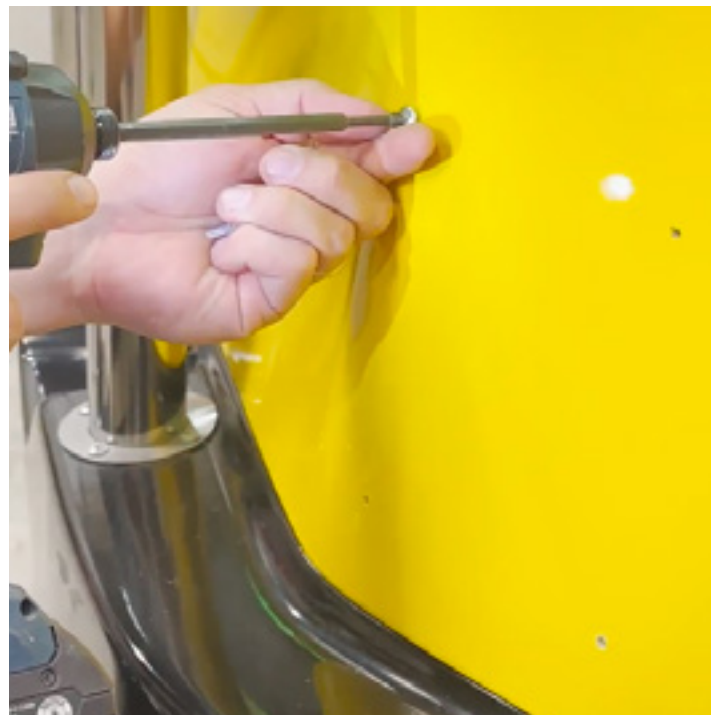

2

Using the four screws, mount the dispenser

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



3

Cut a hole in the wipes bag

Lorem ipsum dolor sit amet, consectetur adipiscing elit,



4

Position the wipe dispenser's bag and snap the wipe dispenser closed.

Lorem ipsum dolor sit amet, consectetur adipiscing elit,





SUPPORT HOTLINE
+1 772 874 3343



[instagram.com/rilix_us](https://www.instagram.com/rilix_us)

700S John Rodes Blvd
Melbourne-FL - 32904

www.rilix.business