



MATRYX RMK POWER UP

Installation Instructions

Estimated Install Time: 1 Beer

Kit Components

Tools Needed:


- Rivet Gun
- 10mm Socket
- 7/16" Wrench
- 7mm Socket
- Most Important, Beverage of Choice



Battery Box



Mounting Arm

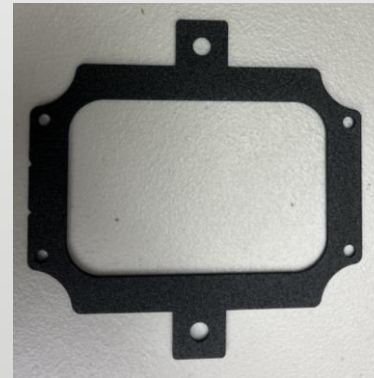

Battery Box Cover



(4) Box Mounting Rivets



(1) M6 Nut for Bracket Mounting

STEP 1

Rivet the battery box to the mounting bracket using the 4 pop-rivets supplied with the kit (Fig. 1).



Fig. 1

STEP 2



Remove Exhaust Side Panel

Place the mounting bracket as shown in (Fig 2). Remove the small M5 screw that lines up with the bottom mounting hole.

Once the small M5 screw is removed re-insert into mounting hole (use Blue Loctite if you have it available). Place M6 locknut on factory stud and tighten down.



Fig. 2

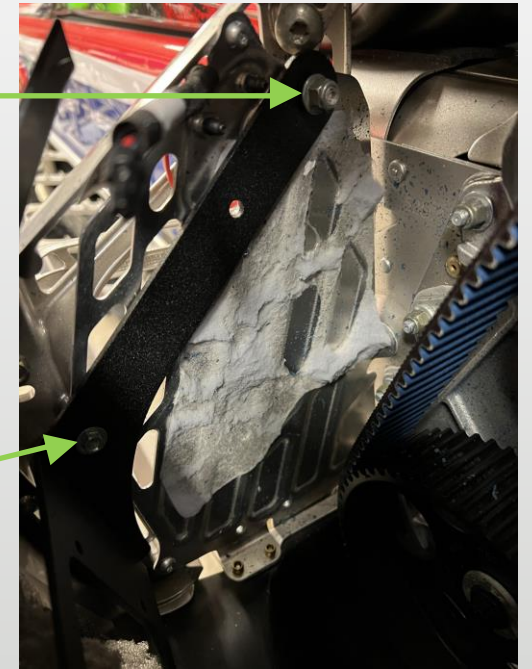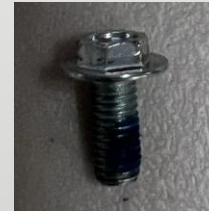

STEP 3

Insert Battery in to Battery Box and tighten down the cover.

STEP 4

Plug Power-Up Cable into the location shown in Fig. 4

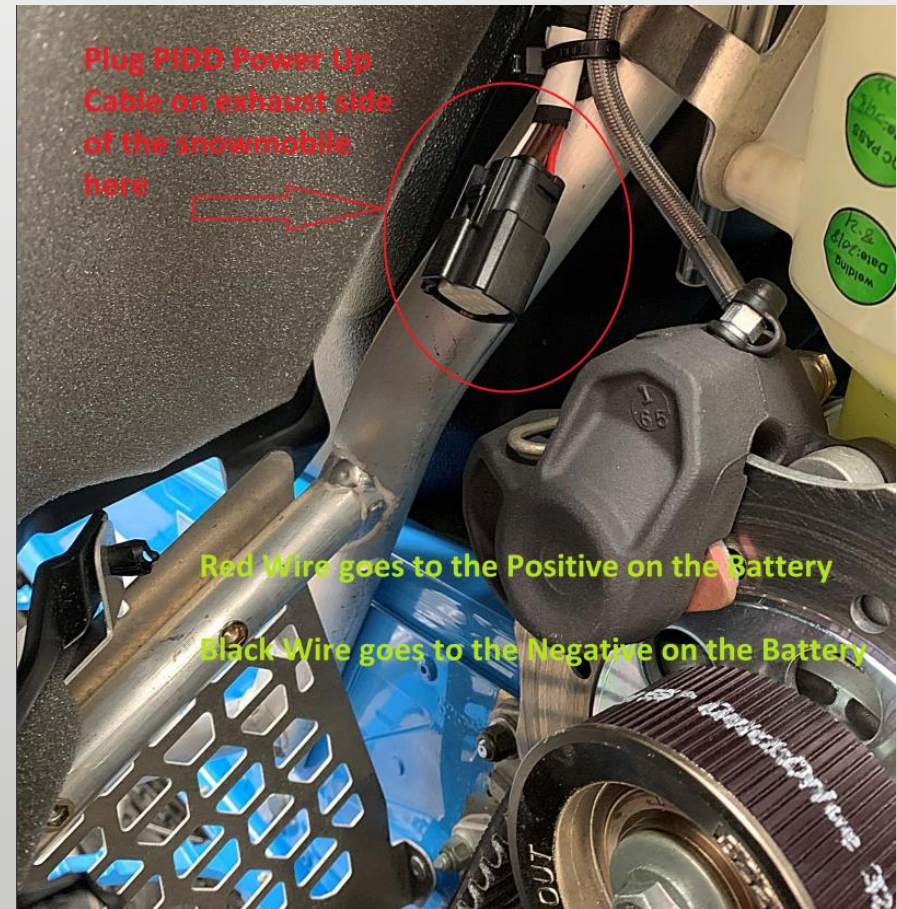


Figure 4

STEP 5

MISSION COMPLETE!!! Time to have a cold refreshing beverage of your choice or finish the one that was open because that install was fast!!!

GO OUT AND ENJOY!

Stay Safe and Remember to Check Your Local Avalanche Forecast Before Traveling Into the Backcountry!

