



# Installation

## TLM SERIES GROOVE MOUNT BRACKET


Supplied with a 17mm (11/16") diameter hole for antenna mounting.

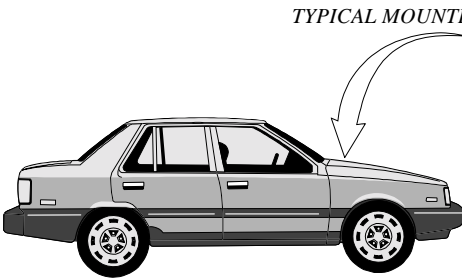

TYPICAL MOUNTING LOCATION

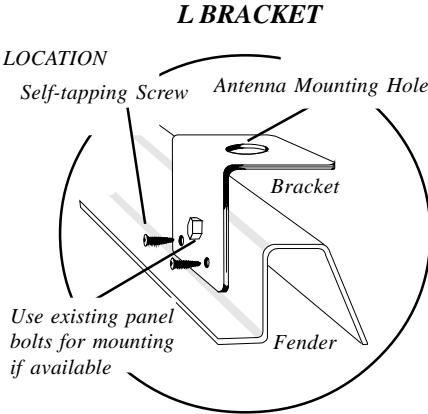

L BRACKET

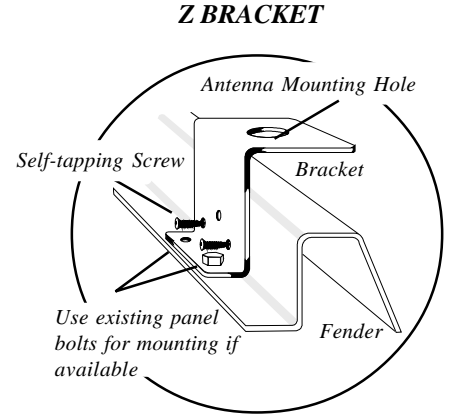

Z BRACKET

## INSTALLATION INSTRUCTIONS

1. Select location for bracket along edge of groove.
2. Hold bracket in place and mark position of mounting holes.
3. Drill three 1/8" holes and attach bracket with screws provided.
4. Use existing panel bolts for channel section if available.
5. Install appropriate antenna to fit bracket following the instructions supplied with your antenna.
6. Route cable into engine bay near bracket location.



**RF Industries Pty Ltd**

ACN 001 695 512


INS-35944-1

©1998 R F Industries Pty Ltd


# Installation

## TLM SERIES GROOVE MOUNT BRACKET


Supplied with a 17mm (11/16") diameter hole for antenna mounting.

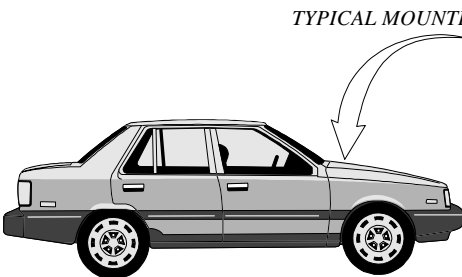

TYPICAL MOUNTING LOCATION

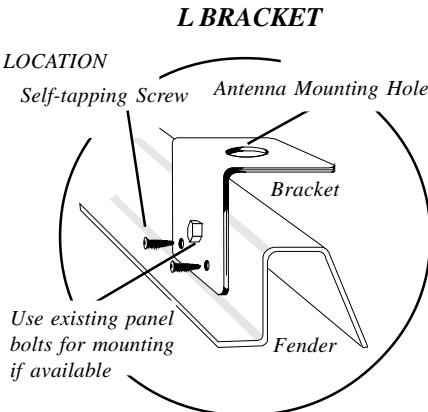

L BRACKET

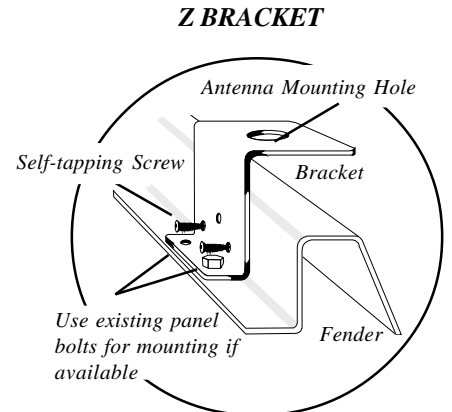

Z BRACKET

## INSTALLATION INSTRUCTIONS

1. Select location for bracket along edge of groove.
2. Hold bracket in place and mark position of mounting holes.
3. Drill three 1/8" holes and attach bracket with screws provided.
4. Use existing panel bolts for channel section if available.
5. Install appropriate antenna to fit bracket following the instructions supplied with your antenna.
6. Route cable into engine bay near bracket location.



**RF Industries Pty Ltd**

ACN 001 695 512

INS-35944-1

©1998 R F Industries Pty Ltd