
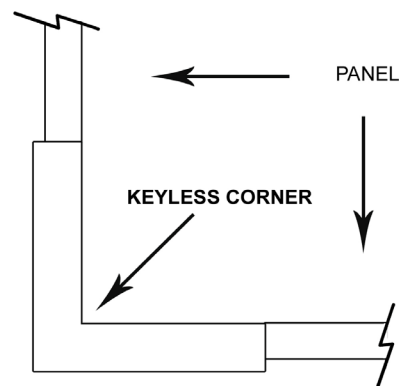
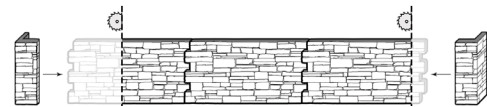
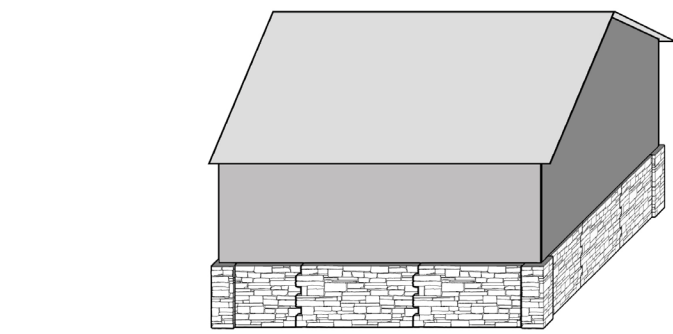


Keyless Corner

MOST POPULAR CHOICE





When to use: This is used when you are going from a corner to corner with no termination pieces (such as doors) in between. It is unlikely that you will have the exact distance between the corner and the other corner as the size of the panel. A Keyed Corner will not work with a project going from corner to corner without having to cut the panel the panel.

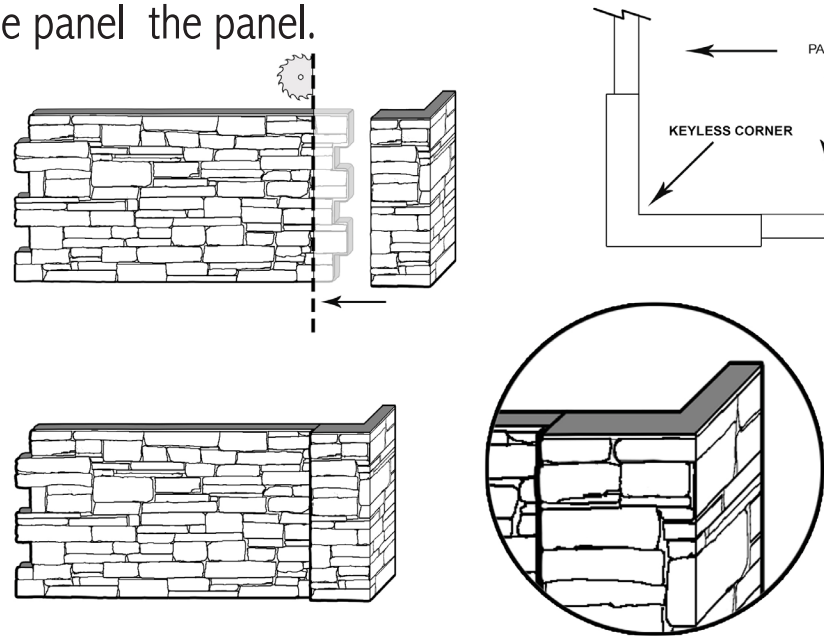

Important note:
This corner will butt out slightly from the panels give it a defined look.

Keyed Corner

When to use: This can only be used if there is a termination piece or straight end of the panel on the other side of the panels. A Keyed Corner will not work with a project going from corner to corner without having to cut the panel. Please make sure your project will work with this corner before purchasing

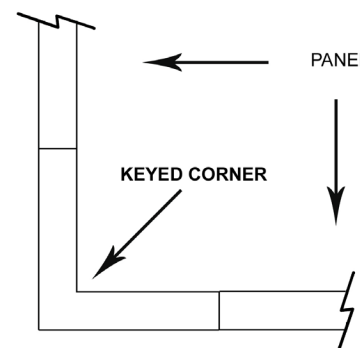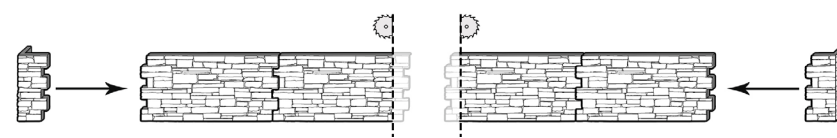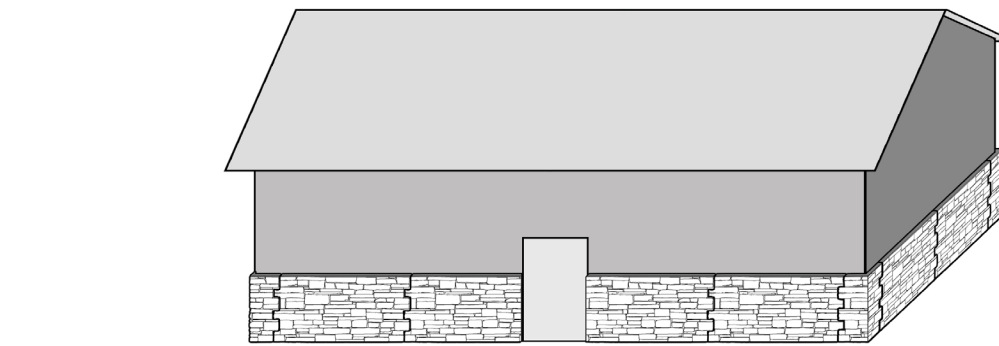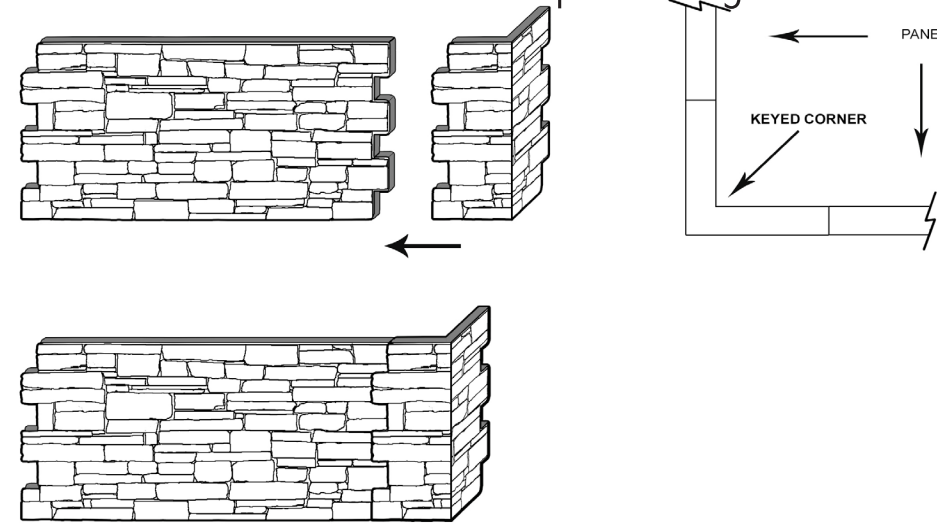

Important note:
This will be flush with the panels.

Mitered Corner

When to use: You can't use a keyed corner but want a flushed corner. We recommend having some contractor experience because this can be more complicated.

