


contents/description

- Easy assembly
- Houses up to 5 chickens
- Featuring:
 - 1 Screened window
 - 2 Nesting boxes
 - 2 Vents
 - 2 Roosts
- Size: 34" L. x 45" W. x 54-1/2" H.
- Sits off the ground
- Built by Amish-trained craftsmen
- One year warranty

SKU# SOEZCKCP

SMALL OverEZ Chicken Coop

Instruction Manual

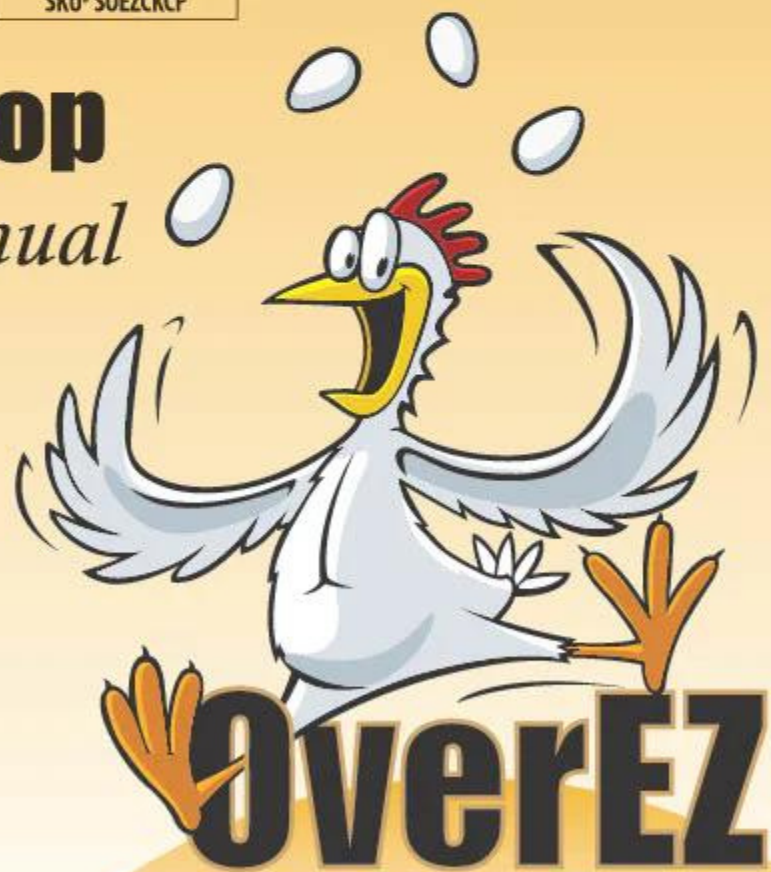

happy
with our product?

Please help us spread the word
by leaving a review at:
www.OverEZchickencoop.com

OverEZ

Chicken Coop[®]
Made in the U.S.A.

for more information about all our products visit: www.OverEZchickencoop.com

Please note: Actual product may differ slightly from instructional illustrations.



step one

Place FLOOR in desired location.

Important: Floor must be level in both directions.

Find the bag with drill bits, keys, and touch up paint (to repair any mars on pre-painted surfaces).



step two

Place BACK WALL (A), making sure wall is tight against floor and ends of wall line up with marks provided on floor.

Drive 2 pre-started screws on the bottom.



step three

Place CHICKEN DOOR GABLE WALL (B).

Siding from BACK WALL will slide into cavity provided. Make sure wall is tight against floor.

Drive 2 pre-started screws on corners, then drive 1 screw (provided in the bag) into the pre-drilled hole into side of door frame.



step four

Place FRONT WALL (C), making sure wall is tight against floor.

Siding from FRONT WALL will slide into cavity provided in CHICKEN DOOR GABLE WALL.

Drive 1 pre-started screw into gable through top plate, then 2 pre-started screws on bottom.



step five

Install MAN DOOR GABLE WALL (D).

Siding from BACK WALL and FRONT WALL will slide into cavities provided.

Make sure wall is tight against floor.

Drive 2 pre-started screws into back corner, 1 pre-started screw through top plate in upper front corner, then drive 1 screw (provided in the bag) into the pre-drilled hole into side of door frame.



step six

Install ROOF PANEL.

Lower front edge of ROOF PANEL onto FRONT WALL first, then lower back edge onto BACK WALL.

Drive 4 pre-started screws through sheathing into gable.



step seven

Put black screw in bottom hinge of doors.

Drop ROOST BARS into slots provided on inside of gable walls.

Hook CHICKEN RAMP at bottom of chicken door.

NOTE: To loosen or tighten door latches, use supplied allen wrench. Loosen small screw on inside of latch with allen wrench, moving the latch in or out. Tighten screw and test.

Assembly is **OverEZ!**

Watch our assembly video here

