

**PUT DOWN THE
MARKERS**

AND NO ONE GETS HURT

**DON'T WRITE
ON THIS WALL UNTIL**

FILL IN THE DATE 7 DAYS FROM COMPLETION OF PAINTING.



GREENGUARD

PRODUCT CERTIFIED FOR
LOW CHEMICAL EMISSIONS
UL.COM/GG
UL 2818

GOLD



CREATE WHITE INSTALLATION INSTRUCTIONS

For additional information visit www.ideapaint.com/installation-and-specs

READ FIRST - IMPORTANT TIPS

- DO NOT STRETCH PAINT BEYOND SURFACE AREA INDICATED ON THE BOX. DOING SO WILL REDUCE PRODUCT PERFORMANCE.
- When measuring the space to be painted, height x width = square footage.
- Be sure to apply your IdeaPaint with the supplied roller. Any alternatives (unless suggested by IdeaPaint) will not be covered under the warranty.
- IdeaPaint dries quickly. Install it in 50 square foot sections, following the instructions detailed in STEPS 06-07.
- Use good lighting in order to ensure even coverage.
- IdeaPaint is available in different formulas, do not mix them. For more information call 978-623-9980.
- A tray with a disposable liner with lines (not the bubble kind) is recommended for best application. DO NOT USE A BUCKET WITH A SCREEN, THAT WILL INTRODUCE AIR AND CREATE BUBBLES!

SYSTEM RECOMMENDATIONS - FOR BEST PERFORMANCE

- For best performance, a level 5 finish is required.
- Do not apply CREATE products over oil or alkyd based topcoats or primers. These will cause yellowing to occur.
- For any installation of CREATE White: priming is recommended before applying CREATE White.
- Apply 2 coats of one of our preferred white primers*: IdeaPaint White PRIMER, Sherwin-Williams Multi-Purpose Primer, PPG Seal Grip, PPG Gripper, Kilz Premium or Dulux Trade Super Grip Primer (UK/EU only). Allow 24 hours for primer to dry. Apply IdeaPaint, following directions. *For a complete list of our preferred primers, visit <https://ideapaint.com/pages/installation-and-specs>.
- CREATE White applied over one of our preferred white, 100% acrylic topcoat paints with an eggshell, satin, semi-gloss, or gloss finish provides best performance. *For a complete list of our preferred paints, visit <http://learn.ideapaint.com/preferred-products>.
- Primer and new latex topcoats must dry at least 24 hours prior to applying IdeaPaint.

It is recommended that the wall surface to which the IdeaPaint is applied be a minimum of 60°F, maximum 90°F for at least 12 hours prior to, and 24 hours after, installation. Verify that the wall moisture content does not exceed 4% using a suitable moisture meter, and that active moisture infiltration, condensation, and/or accumulation—particularly in warm, humid climates—is not present. If walls show mold, mildew or visible moisture damage, or if moisture content exceeds recommendations, do not proceed with installation until the condition has been fully corrected under the direction of a qualified professional. ICP Building Solutions Group will not be responsible for any performance or quality issues if moisture problems are not addressed before, during or following installation.

The information and recommendations set forth in this application guide are based upon tests conducted by or on behalf of IdeaPaint, Inc. Such information and recommendations set forth herein are subject to change and pertain to the product offered at the time of publication. Consult your IdeaPaint representative to obtain the most recent product data.

By purchasing IdeaPaint's product you are agreeing to our Terms & Conditions, which can be found at www.ideapaint.com/terms.

01

PREP

IdeaPaint will only be as smooth as the surface you apply it to. Repair any divots, scratches, or bumps on the wall by filling them with spackle or joint compound. If the wall is textured, sand it smooth – or, for heavy texture, skim the wall with joint compound.

Use painter's blue tape (3M Multipurpose preferred) to tape off the area. Clearly define the area to be painted and DO NOT stretch the product beyond the square footage listed on the box. To capture any drips, use two strips of tape to widen the protection at the bottom of your surface.

When complete, wipe the surface down with a clean, damp or dry cloth to prevent debris and dust from getting caught in the surface during application.

Tips for best performance:
Because IdeaPaint is a high gloss paint, surface imperfections can be magnified.



02

PRIME / PAINT

Priming is recommended before applying CREATE White.

Apply 2 coats of preferred white primer*, such as: IdeaPaint White PRIMER, Sherwin-Williams Multi-Purpose Primer, PPG Seal Grip, PPG Gripper, Kilz Premium or Dulux Trade Super Grip Primer (UK/EU only).

Let primer dry for 24 hours before applying your IdeaPaint. Then, lightly sand with 120 grit sandpaper to remove any debris that may have collected during the priming process. Wipe with a clean, dry or damp cloth.

CREATE White can also be applied over one of our preferred, white, 100% acrylic Topcoats paints with an eggshell, satin, semi-gloss, or gloss finish.


*For a complete list of our preferred paints and primers, visit <https://ideapaint.com/pages/installation-and-specs>

For applications over substrates other than drywall, view our Substrate Specific Installation Guide at <https://ideapaint.com/pages/installation-and-specs>



Tint any off-white / gray primers to make them as white as possible. Apply primer with a short nap roller (1/4 or 3/8 nap).

05

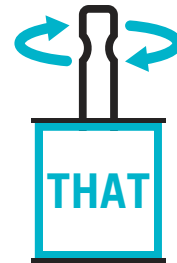

MIX

Do not shake cans.


Pour **THIS** into **THAT** and stir thoroughly for 3 minutes.

DO NOT mix more than 200 sq. ft. of IdeaPaint at one time.

Once IdeaPaint is mixed, you have **1 HOUR** to apply.

06

50 SQ FT AREA (H X W)

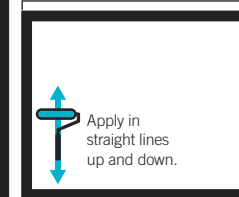

APPLY: LAYER 1

When installing IdeaPaint, apply the product 50 sq. ft. at a time. Do not stretch the product beyond the square footage denoted on the box. When applying more than 50 sq. ft., mark every 50 sq. ft. on your drop cloth with a piece of tape, for reference.

Using a 4" foam roller, cut in the edges, sockets and switches within your working section.

IdeaPaint CREATE is applied in a two "wet layer" process. Apply the first layer of IdeaPaint over the first 50 sq. ft. The first layer should be a thin, consistent coat (using approximately 1/2 of the paint allotted for that section).

Once you have rolled out the 50 sq. ft., STOP and allow 3-5 minutes for this layer of IdeaPaint to bite on to the wall. During this time, if you are applying more than 50 sq. ft. you can cut in edges, socket & switches in your next 50 sq. ft.

07

APPLY: LAYER 2


After waiting 3-5 minutes go back to the beginning of the working section and apply a second layer. This will "build" the appropriate thickness for optimal performance.

While applying your second layer, be sure to eliminate all sags and roller marks as they occur using light pressure.

IdeaPaint dries quickly. Avoid "over-working" or "touching up" an area once you've moved on to subsequent sections. Once it's on the wall, IdeaPaint CREATE can be "worked" or "touched up" for 15-20 minutes.

For larger-scale installations, replace the roller cover after every 100 sq. ft. of product applied.

50 SQ FT AREA (H X W)

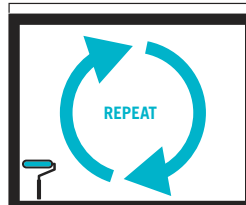

08

WAIT

Once finished, remove tape immediately while IdeaPaint is still wet and clean up.

If you are unable to remove tape before IdeaPaint dries, score the edges with a razor blade before removing the tape. Use Acetone to clean any drips onto unintended surfaces. If you get IdeaPaint on your hands, wash them with soap and water.

CREATE White has a 7-day cure time.




03

VENTILATE

Open windows, doors and HVAC system to 100% air exhaust to ventilate the area and aid in curing and drying.

If you have to use a fan, avoid pointing it directly at the surface being painted.

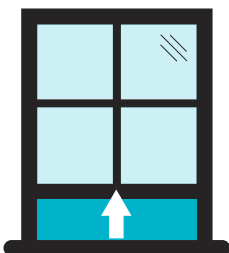

04

PROTECT

Use painter's tape to mask surfaces and edges you do not want painted.

IMPORTANT: After application, be sure to remove tape while paint is still wet.

CREATE is a low viscosity paint. To minimize drips, avoid applying too much pressure to the roller during application.

Wear protective eye-wear and gloves. Follow additional safety precautions according to the IdeaPaint Safety Data Sheet found on ideapaint.com/help.



09

WRITE

After the initial 4 day cure period it is safe to use any standard dry erase marker on the new surface.

We recommend IdeaPaint Dry Erase Markers. If you don't have any on hand, Expo Low Odor works well too. Otherwise, test the erasability of your marker of choice in a small area before use on the entire wall.

DO NOT USE Expo pink dry erase markers or red dry erase crayons.



10

USE & CARE: MAINTAIN

IdeaPaint surfaces should be erased regularly with IdeaPaint Erasers.

Avoid build-up over time and extend the life of your IdeaPaint surfaces by regularly using IdeaPaint Cleaner Spray and Microfiber Cleaning Cloths. Walls should be cleaned weekly.

If your walls are heavily used or have stuck on markers that IdeaPaint's standard Cleaner cannot remove, then use IdeaPaint's Marker Blaster Spray to bring life back to your walls.

For more details, refer to our Use & Care Guide at ideapaint.com/help.

