



MOUNTAIN OFF ROAD ENTERPRISES, LLC.
P.O. BOX 690 DELTA COLORADO 81416
(877)JEEP-A2Z or (877)533-7229
(888)698-5337 FAX
E-mail: info@mountainoffroad.com
www.mountainoffroad.com

INSTALLATION INSTRUCTIONS for FOST99



HARDWARE KIT:


- 1- Step Assembly
- 4- M8x1.25x25mm Button Head bolt
- 4- M8 u-nut
- 4- 5/16 Flat washers
- 2- 5/16" pins

Please read and understand all instructions before beginning the installation of the Hide-A-Step. Please read the terms and policies on the back of these instructions.

This step mechanism uses a very strong spring. Extra care should be used during installation and use to prevent injury to fingers and hands!


The FOST99 is designed to fit the following Ford® vehicles: 1999 to current F250 & F350. The step is designed to be quick detachable by removing two pins. This will also fit the rear doors on crew cab applications.

STEP 1: Locate the factory holes in your rocker panel under your door (see picture 1) and slip 2 of the 8mm U-nut in the top two holes.

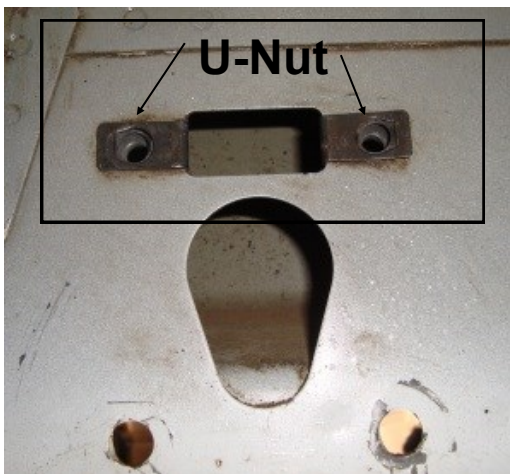

Picture 1

Picture2

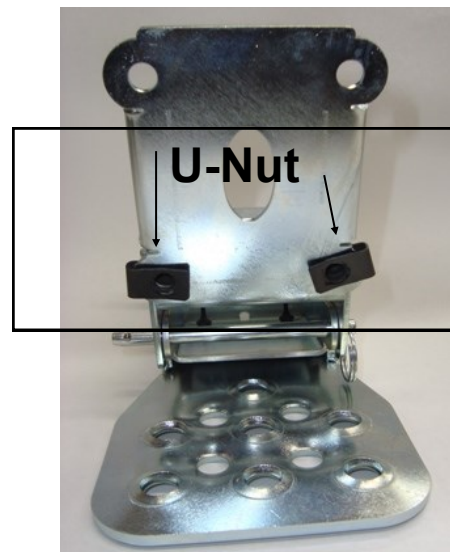



STEP 3: Using 8mm x 25mm bolt mount your step from the back side of your rocker panel. (see Picture 3). Tighten up your bolts and you are done!!

Enjoy your Hide-A-Step

