


FOCUS ST ENGINE COVER GUIDE (V1 AND V2) rev.103

If you ordered the raw (bare metal) cover, please note there may be blemishes and or scratches. These are not meant to stay raw. If you would like the raw "look", please sand and spray with a clear coat suitable for metal.

Needed:

3 Grommets from factory cover || Hex Drive: 1/8" || #10 socket/ratchet and wrench || Loctite (BLUE). Do not use red.

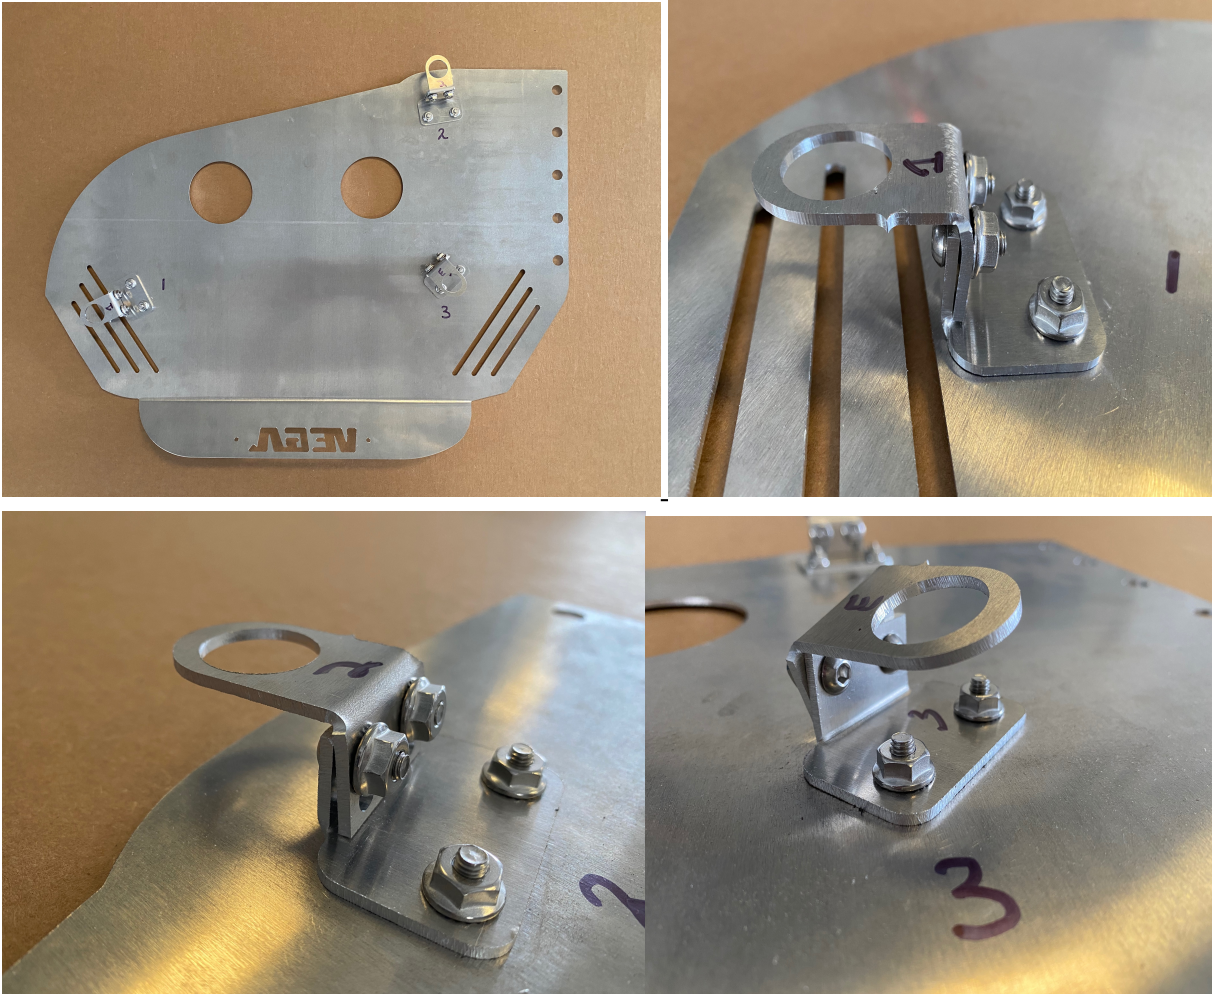

The brackets are labeled (1,2,3). Match the brackets using the pictures above as a reference. They have to be installed properly or the cover will not mount correctly. Turn this guide over for a cropped view.

Minor adjustments to the 3 brackets may be necessary for proper install. You will need to remove 3 rubber grommets from your OEM cover and place them on the brackets. The grommets fit nice and snug. Use a flat head to remove/install the grommets.

Mounting:

After the grommets are installed, you can mount the engine cover. The cover will mount to 3 of the 4 posts. You will be utilizing 3 of those 4 posts to mount the cover. Mount bracket #2 (in picture) to the post FIRST. The other 2 brackets will fall into place. Minor adjustments to the brackets may be needed.

LOCTITE REQUIRED TO PREVENT VIBRATION FROM LOOSENING THE HARDWARE!

