

Mount Replacement for Pro Fitter and Ski Pro Fitter.

This Replacement Kit contains the following:

4 x Rubber Mounts




1 Hex Key

2 Strips of Grip Tape


4 Screws

4 Nuts


4 Washers

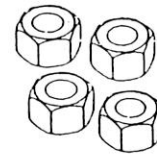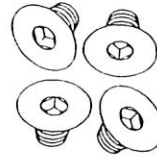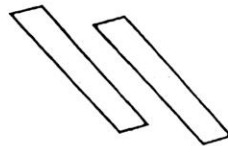


- 1** Remove grip tape from the top of the foot pad. This will expose 2 screws per side.

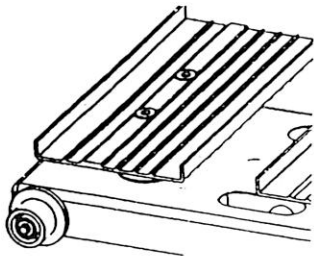

- 2** Loosen and remove the 4 screws using the hex key.

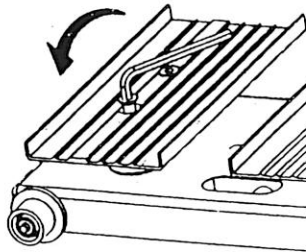


- 3** Loosen and remove the 4 nuts located on the underside of the skate.

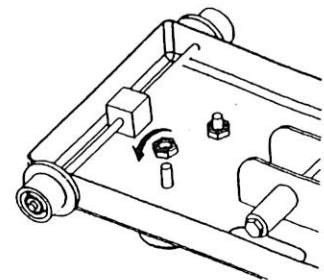


- 4** Replace the rubber mounts and then tighten both the 4 washers and 4 nuts.


Note: this may require a few attempts as it is important that the finished foot pads are straight.

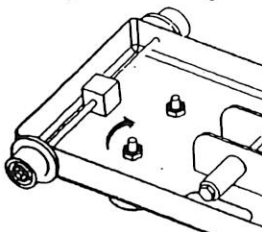


- 5** Turn the skate over and place the foot plates on the mounts, ensuring the "longer side" points toward the centre.

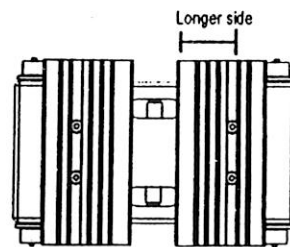


- 6** Tighten the screws with the hex key.

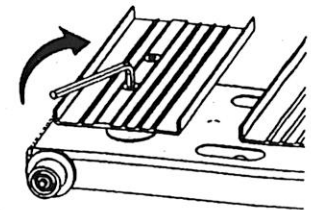

- 7** Foot plate alignment should look like this:

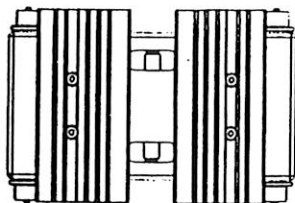

- 8** Ensure that the groove above the screws is clean and dry. Apply the grip tape over this groove.

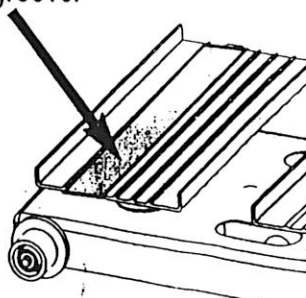

Questions? Please Contact Us...



Fitter International Inc.

3050, 2600, Portland St SE
Calgary AB Canada T2G 4M6

1-800-Fitter-1

www.fitter1.com

general@fitter1.com