WOODEN CAMERA® ANTI-REFLECTION TAPE

INSTALLATION GUIDE




NOTE: for ARRI LPL Mount for Sony Venice Cameras

© Wooden Camera, Inc. 2011–2019

INSTALLATION

1.5mm allen wrench Anti-Reflection Tape

- 1. Locate the baffle on the back of the LPL mount.
- Peel back a small portion of the tan backing from the tape – do not remove backing entirely.

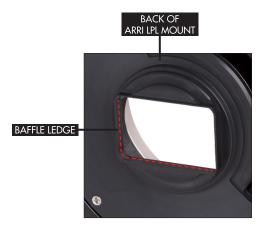

- Slowly attach the tape to the baffle ledge. Hold the ledge between your fingers with one hand and apply pressure with the other.
- 4. As you apply through the corners, use the included allen wrench to press the tape firmly into the corner before continuing.
- 5. Continue steps 3 and 4 until the entire baffle ledge is covered.

