

# WOODEN CAMERA<sup>®</sup>

## MICRO CAGE (BMMCC, BMMSC)

### INSTALLATION GUIDE





© Wooden Camera, Inc. 2011-2019

### INCLUDED


M2.5 Allen Wrench      3/16 Allen Wrench

3x 1/4-20x1/4 socket cap


6x M3x10 socket cap

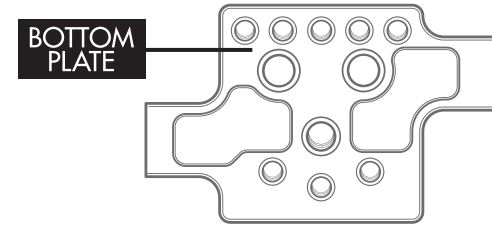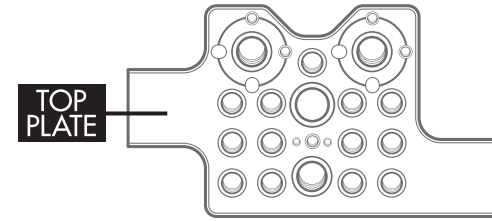

RIGHT SIDE PLATE



LEFT SIDE PLATE



### INSTALLATION

1. Locate 1/4-20 Holes on Camera.
2. Align Top Plate with 1/4-20 Hole on camera.
3. Using the and 1/4-20 socket cap tighten Top Plate to camera.
4. Repeat for Bottom Plate.
5. Select Left Side Plate and locate M3 Holes on side of both Top and Bottom Plates.
6. With larger holes facing towards front of camera align Socket Cap Holes on Side Plate with M3 Holes.
7. Using the (4) M3x10mm socket caps tighten Side Plate to Top and Bottom Plates.
8. Repeat for Right Side Plate.

