


# UVF v2 SLED



Included:

(2) 1/4-20x3/8 socket cap 


(2) #6-32x1/2 flat head 

(1) 1/4-20x1/4 socket cap 

(1) 3/16 allen wrench 

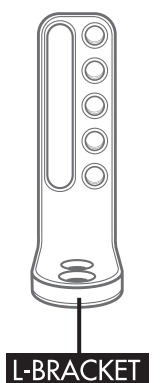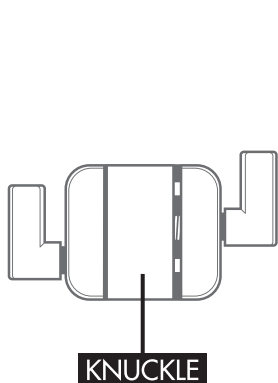

Use with:  
RED BOMB EVF  
Zacuto  
Cineroid  
Others

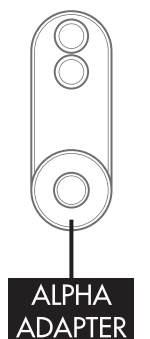


Use with:  
Alphatron EVF  
Small HD  
Others

## INSTALLATION

---

1. Select **L-BRACKET** or **ALPHA ADAPTER**, locate two **#6 SCREWS\***, tighten to **KNUCKLE** using allen wrench.

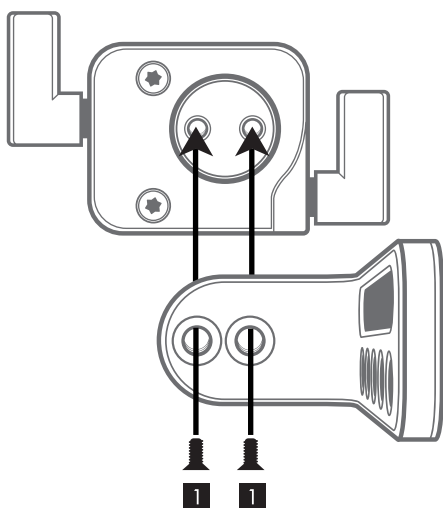

\*Red thread locker material maybe present on **#6 SCREWS**.  
This prevents loosening over time.