WOODEN CAMERA® UNIVERSAL WIRELESS SANDWICH PLATE


INSTALLATION GUIDE




© Wooden Camera, Inc. 2011-2019

INSTALLATION

- 4x M3 X 10mm phillips pan head (V-Mount)4x M3 X 14mm phillips pan head (Gold Mount)
- Locate M3 Holes on Sandwich Plate, Battery Mounting Area, and Power Plate.
- Align M3 Holes of Sandwich Plate and Power Plate as shown below, select and tighten proper M3 Screws with screwdriver (10mm length for V-Mount, 14mm length for Gold Mount).

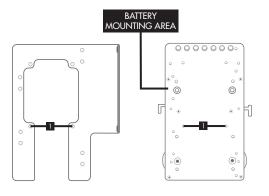

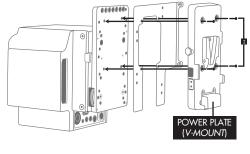

NOTE: Battery Mounting Area shown is for illustration only. Actual Power Plates and mounting areas may vary in appearance.