


CleanVent installation instructions

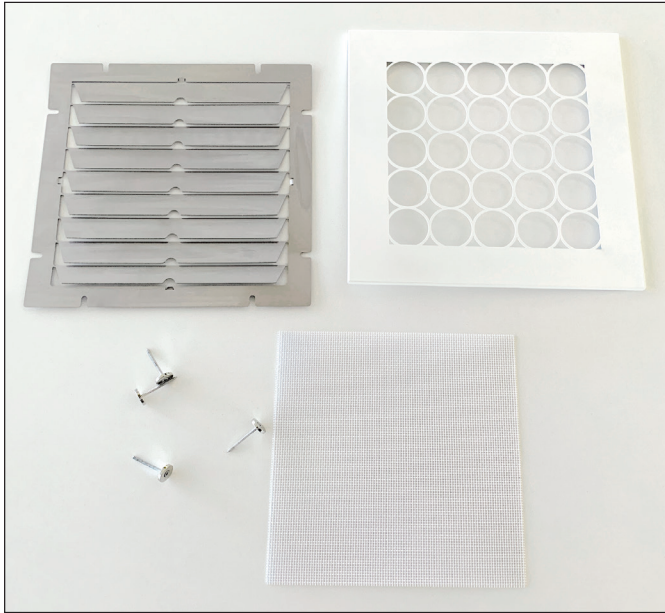

What is included:

- Inner Baffle
- Cover Screen
- CleanVent Designer Cover
- 4-6 magnets with self tapping screws.

What is needed to install:

- Pencil for marking
- Phillips Head Screwdriver
- Cordless Drill
- Cordless Drill Phillips Head 3/32" Drill Bit



1. Remove old vent.



2. Repair any damage to ceiling and vent box.




3. Mark for magnet holes. There will be 4 to 6 magnets to be installed. Magnets can be installed in any of the 4 corner slots.



4. Drill pilot holes with 3/32" drill bit where you marked. You should not drill all the way through the metal part of the vent box.



5. Screw in magnets part way after they (self tap) into the metal part of the vent box.

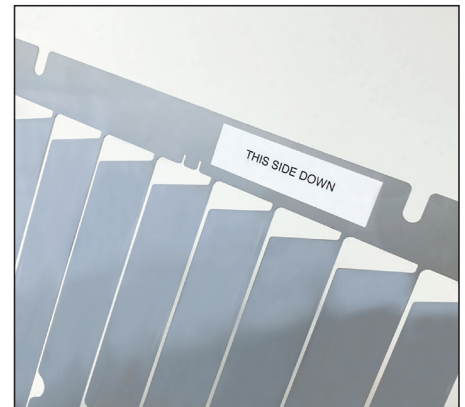

6. Hold inner baffle marked this side down facing you. Push vent baffles down away from you.

CleanVent installation instructions



7. Position baffles to direct air flow, open each one all the way.



8. Install inner baffle under magnets installed.



9. Tighten self tapping screws with magnets flat to the ceiling. Tighten enough to bring vent box tight to the ceiling, DO NOT over tighten and strip the screw. Position baffles as needed. They work the best as open as possible.



10. Place Cover Screen under tabs into position.



11. Snap on CleanVent.



12. Position CleanVent into place.



WAH! LAH!

tedstuff
modern. elegant. fun.

tedstuff.net / made in the usa

Warranty:

The CleanVent offers a one year warranty that covers replacement parts due to any defect in material. Your CleanVent will last a long time if you

follow the care instructions included on this page. Please contact us if you have any issues and send photos through info@tedstuff.net

The CleanVent & CleanVent Intake Cover

CleanVent Covers:

Available in 9 patterns & many standard sizes. Custom laser cut sizes and patterns are available by request.




contemporary




modern



tropical

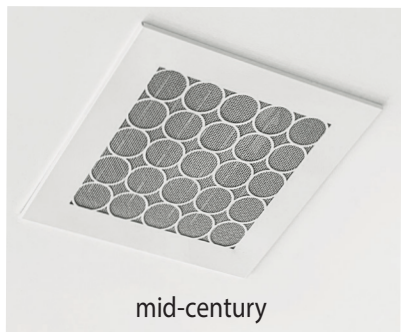

mid-century

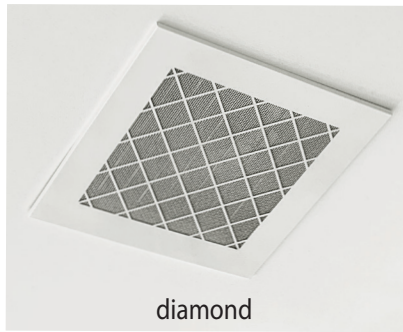


diamond



ellipse



classic

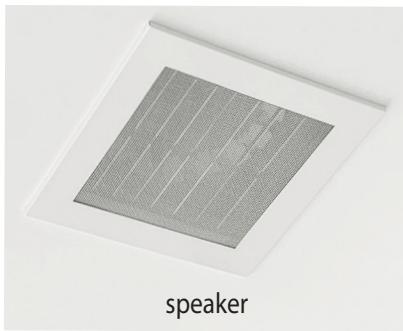

speaker



scallop

How to measure your CleanVent Covers



Remove Vent.



Measure opening to the closest inch.



CleanVent Standard Sizes

4x6 retail: \$33.50	8x14 retail: \$72.25
4x8 retail: \$36.50	9x9 retail: \$53.95
4x10 retail: \$39.50	10 x 10 retail: \$59.95
6x6 retail: \$38.50	12x12 retail: \$90.50
6x8 retail: \$44.50	14x14 retail: \$125.00
6x10 retail: \$47.50	4x24 retail: \$118.00
6x12 retail: \$56.75	4x36 retail: \$145.00
8x8 retail: \$48.50	6x19 retail: \$98.00
8x10 retail: \$56.50	6x24 retail: \$122.50
8x12 retail: \$64.50	6x36 retail: \$165.50

Note:

Dimensions are for the inside rough-opening after old vent is removed.

Vent's are 3" bigger than opening sizes, there is a 1½" border around the opening for magnets to attached.

Example:

A 6 x 6 Vent overall size is 3" bigger or 9 x 9 over all size and vent opening is 6 x 6.

AC FILTER INTAKES

16x20 retail: \$215.00	25x25 retail: \$275.00
16x25 retail: \$230.00	28x28 retail: \$358.00
18x24 retail: \$232.00	20x30 retail: \$305.00
20x20 retail: \$278.00	24x30 retail: \$358.00
20x25 retail: \$285.00	26 x 32 retail: \$365.00
24x24 retail: \$265.00	

Customized Sizes and Desgins for Vents, call for pricing.

The CleanVent Retro Fit Filter



Open Cover door and measure inside opening in both directions. Also make sure the outer frame is 1-1/4 or less. You made need a custom outer frame size as well. This example shows a 25 x 25 intake frame size, which is a standard size.

TedStuff

For more information, visit tedstuff.com.