FITTING DIAGRAM

AUDI RS3 8V FL SEDAN V3: FRONT BOLT-ON INSTRUCTIONS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED


CONFIGURATION 1

FRONT EXTENSIONS ONLY

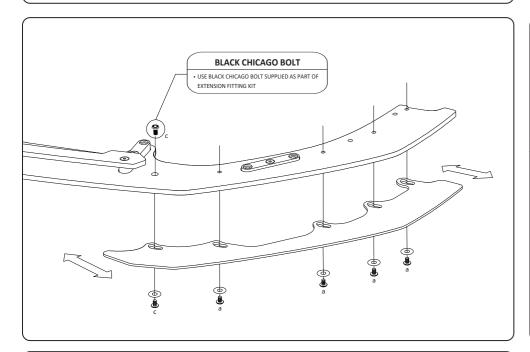


CONFIGURATION 2

FRONT WINGLETS ONLY

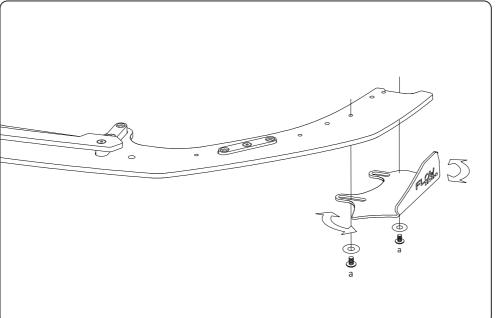

CONFIGURATION 3

FRONT EXTENSIONS AND WINGLETS

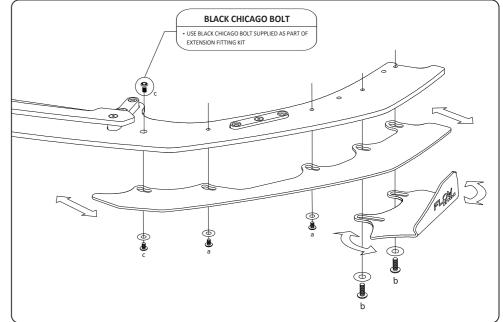

- Insert bolts loosely into alocated brass thread locations.
- Slide extensions in and out to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.


- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot extensions and winglets to your liking.
- · Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.


FITTING KIT

M6 BOLT a 12mm LONG X 8 \circ

PLEASE NOTE: DRILLING **NOT REQUIRED** TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN

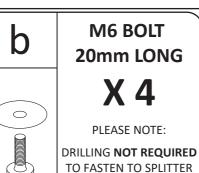

DO NOT OVERTIGHTEN

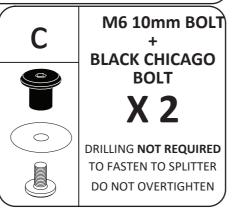







TERMS AND CONDITIONS: MISUSE OF GOODS

This Product application is not intended for public road reging Regulatons may vary from Countries outide of Australia. Please check your Country's and State's road regulatons be